ORDER NO. KM40111737C3

Service Manual

Telephone Equipment

KX-TC1206TWB / KX-TC1206TWS / KX-TC1206TWF / KX-TC1206TWP

Cordless Phone

Black Version

Silver Version

Blue Version

Pink Version

(for Taiwan)

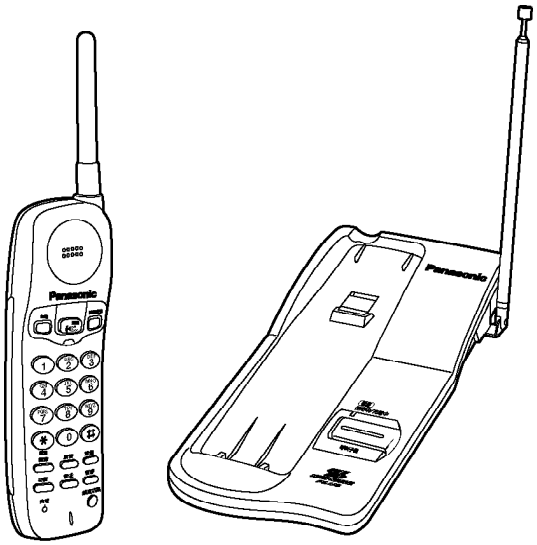

(Handset) (Base Unit)

SPECIFICATIONS

SPECIFICATIONS

General

Modulation:	FM, 5kHz Deviation	Pause:	3.5 seconds per pause
Frequency Stability:	± 2.5 kHz	Memory Capacity:	10 telephone numbers, up to 16 digits per station
Dial Type:	Tone (DTMF)/Pulse		
Redial:	Last dialed number each time the Redial button is pressed		

	Base Unit	Handset
Power Source:	AC adaptor PQLV16TWZ (DC 12 V)	Built-in rechargeable Ni-Cd battery
(Receiver Section)		
Receiving Frequency:	10 channels within 49.67 to 49.99 MHz	10 channels within 46.61 to 46.97 MHz
Adjacent Channel Rejection:	40 dB	40 dB
Sensitivity:	1dBμV for 20 dB S/N	2 dBμV for 20 dB S/N
(Transmitter Section)		
Transmitting Frequency:	10 channels within 46.61 to 46.97 MHz	10 channels within 49.67 to 49.99 MHz
Jacks:	DC IN, Telephone line	
Antenna:	Telescopic	Rubber Flexible
Speaker:		$1^{3}/_{16}$" (3 cm) dynamic
Microphone:		Condenser microphone
Dimensions (H X W X D):	$2^{13}/_{32}" \times 4^{9}/_{32}" \times 8^{3}/_{16}"$ (61 × 109 × 208mm)	$10^{1}/_{2}" \times 2^{1}/_{8}" \times 1^{3}/_{16}"$ (267 × 54 × 40mm)
Weight:	0.57 lbs. (260 g)	0.29 lbs. (130g) with battery

Design and specifications are subject to change without notice.

© 2001 Kyushu Matsushita Electric Co., Ltd. All rights reserved.
Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public.
It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.

FOR SERVICE TECHNICIANS

ICs and LSIs are vulnerable to static electricity.
When repairing, the following precautions will help prevent recurring malfunctions.
1. Cover plastic parts boxes with aluminum foil.
2. Ground the soldering irons.
3. Use a conductive mat on worktable.
4. Do not grasp IC or LSI pins with bare fingers.

Panasonic

1. BATTERY

1.1. Recharge

When the RECHARGE indicator flashes or the unit beeps intermittently, place the handset on the base unit for about 15 hours to recharge the battery.

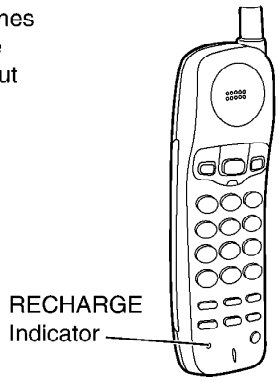

1.2. Battery information

After your Panasonic battery is fully charged:

Operation	Approx. battery life
While in use (TALK)	Up to about 5 hours
While not in use (Stand-by)	Up to about 14 days

- Battery life may vary depending on usage conditions and ambient temperature.
- **Clean the handset and the base unit charge contacts with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or humidity.** Otherwise the battery may not charge properly.
- If the battery is fully charged, you do not have to place the handset on the base unit until the RECHARGE indicator flashes. This will maximize the battery life.
- The battery cannot be overcharged.

2. BATTERY REPLACEMENT

If the RECHARGE indicator flashes after being fully charged, replace the battery with a new Panasonic P-P301 (KX-A36A) battery.
When repalcing the battery, programmed information may be erased. Reprogram if necessary.

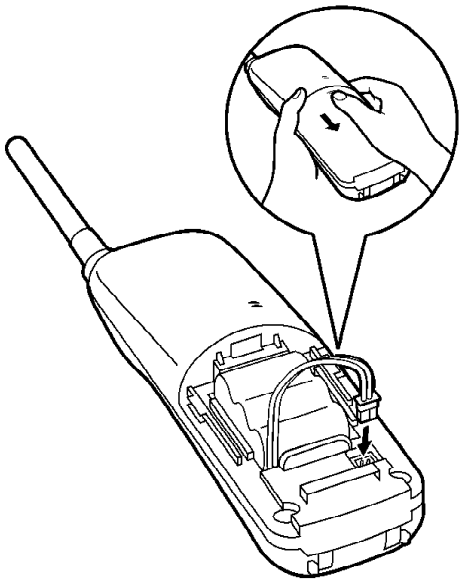

1 Press the notch on the battery cover firmly and slide it as indicated by the arrow.

2 Replace the battery and close the cover.

3 Make sure to charge the new battery for about 15 hours.

3. LOCATION OF CONTROLS

3.1. Base Unit

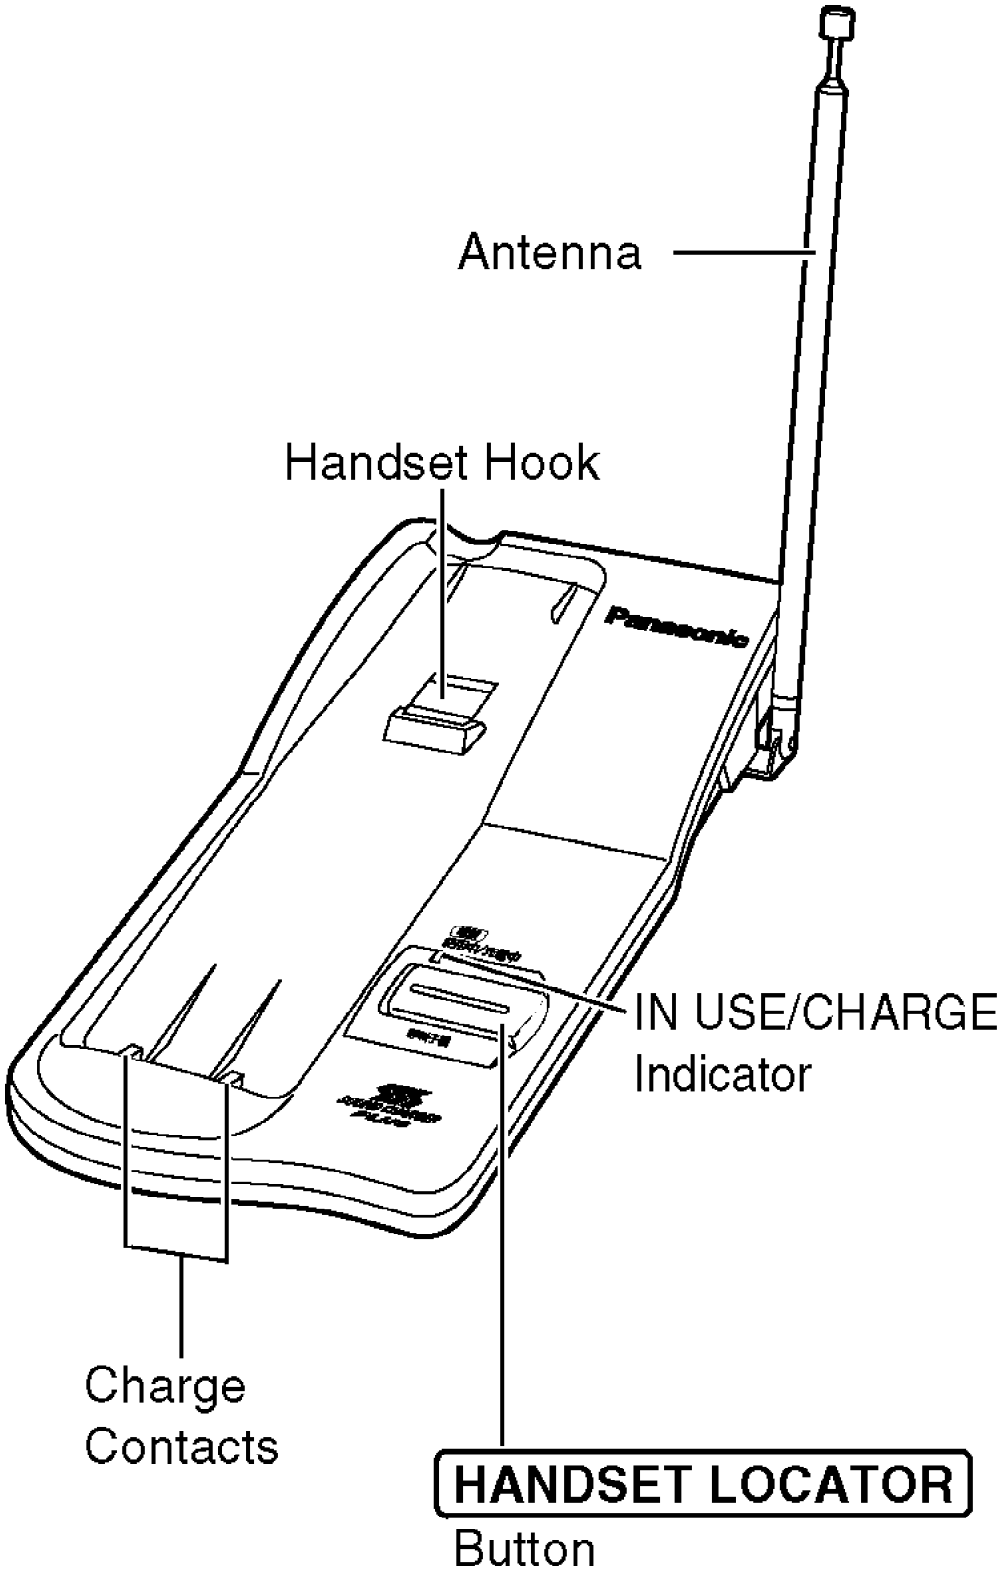
Antenna
Handset Hook
Panasonic
IN USE/CHARGE
Indicator
Charge
Contacts
HANDSET LOCATOR
Button

3.2. Handset

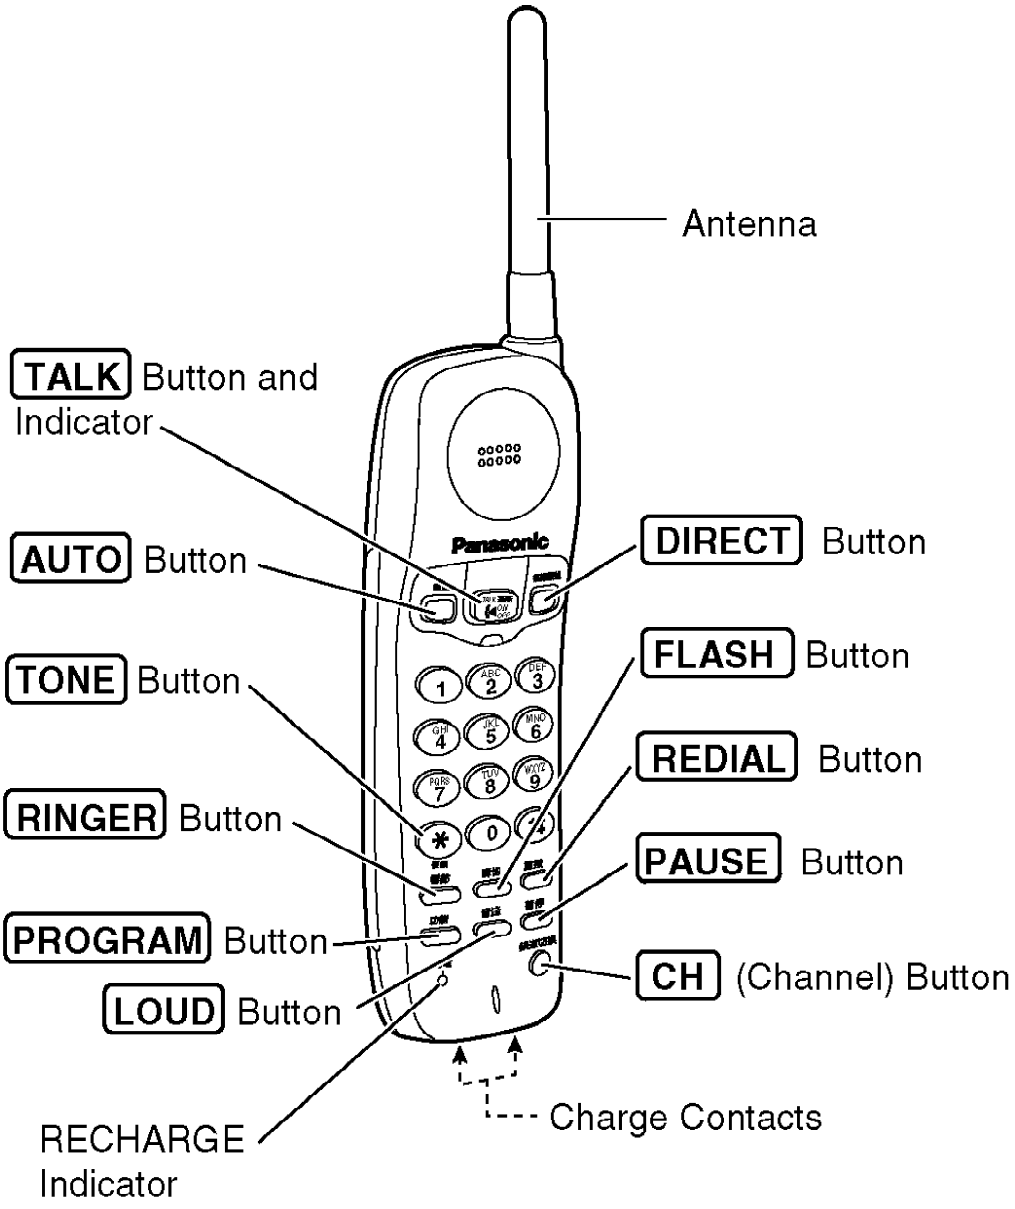

4. CONNECTION

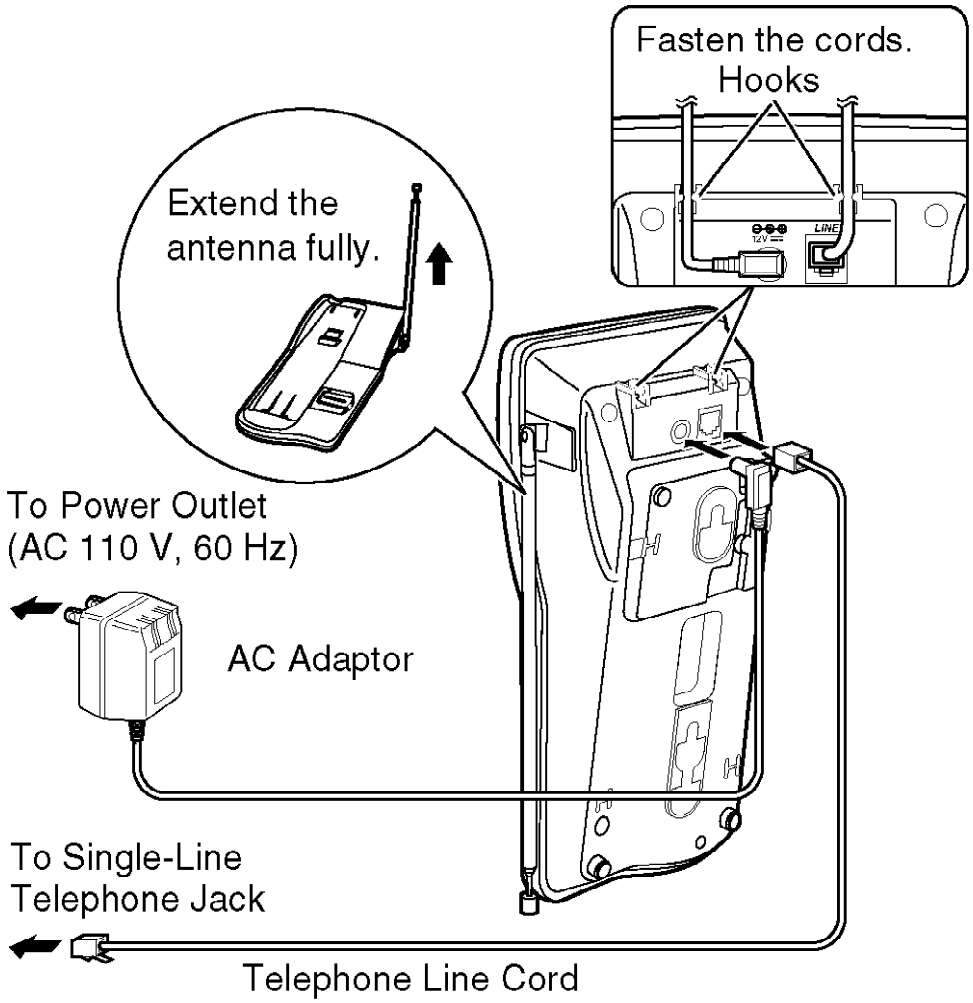

- USE ONLY WITH Panasonic AC ADAPTOR PQLV16TWZ.

- The AC adaptor must remain connected at all times.
(It is normal for the adaptor to feel warm during use.)

- When more than one unit is used, the units may interfere with each other. To prevent or reduce interference, please leave ample space between the base units.

2 Install the battery in the handset, and close the handset cover, locking it into place.

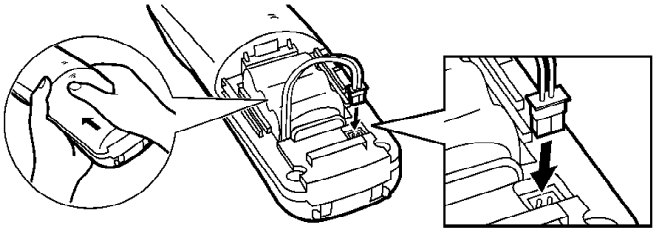

STOP 3 Charge the battery for about 15 hours.

• The IN USE/CHARGE indicator lights.

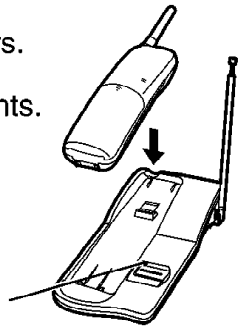

To select the dialing mode TONE (preset) or PULSE

The TALK indicator light must be off before programming.

Press PROGRAM ➡ AUTO ➡ # twice (PULSE) OR * twice (TONE) ➡ PROGRAM.

- A beep sounds.
- To cancel during programming, press PROGRAM, then restart from the beginning.
- If 3 beeps sound during programming, a wrong key was pressed. Start again from the beginning.

4.1. Adding Another Phone

This unit will not function during a power failue. To connect a standard telephone on the same line, use a T-adaptor.

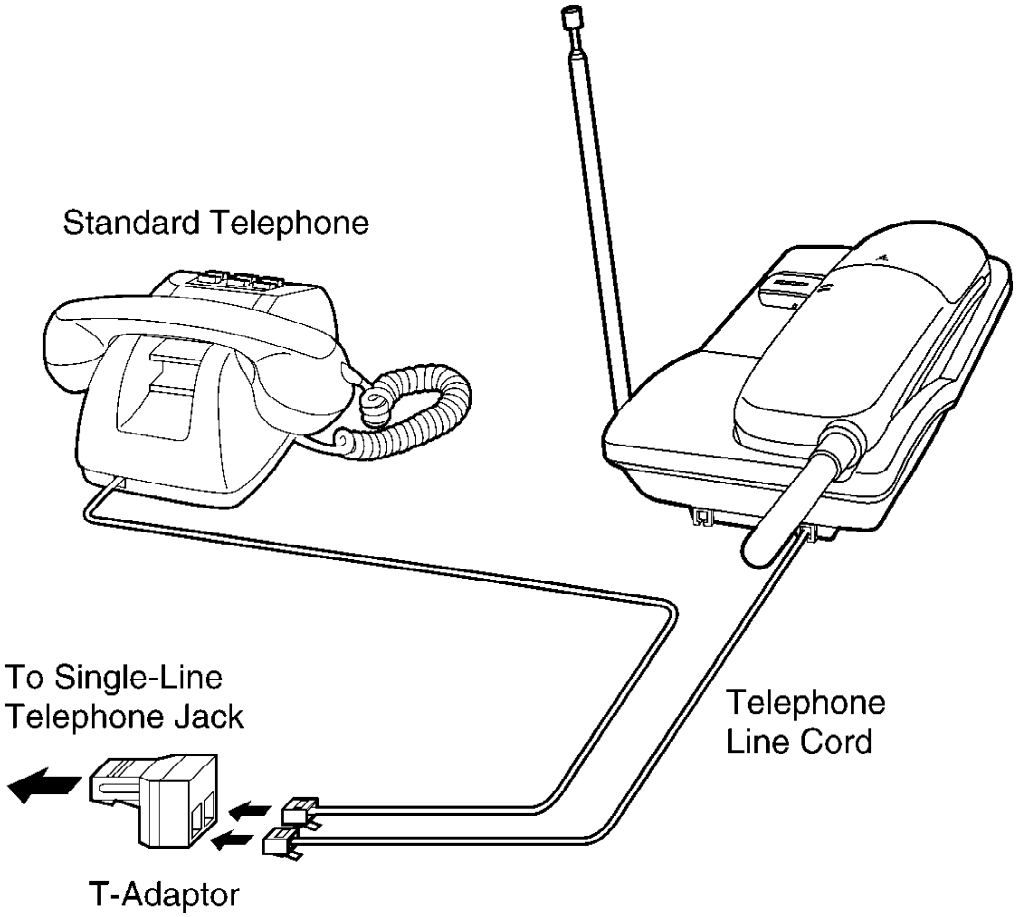

5. OPERATIONS

5.1. Making Calls

1 Press TALK.
- The TALK indicator lights.

2 Dial a phone number.

3 To hang up, press TALK or place the handset on the base unit.
- The indicator light goes out.

To redial the last number dialed

Press TALK ➡ REDIAL.

To select the handset receiver volume

Press LOUD while talking.
- Each time you press the button, the volume level will change from LOW (preset) to HIGH.

If noise interferes with the conversation

Press CH to select a clearer channel or move closer to the base unit.

Lighted handset keypad

The handset dialing buttons will light when you press a button or lift the handset off the base unit, or when a call is received. The lights will go out about 10 seconds after pressing a button, lifting the handset or answering a call.

5.2. Answering Calls

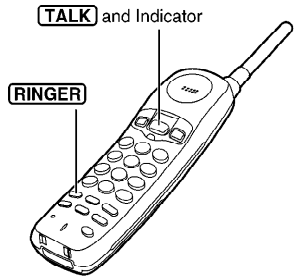

If the handset is off the base unit, press TALK.

- You can also answer a call by pressing any dialing button 0 to 9 (—**Any Key Talk**).

OR

If on the base unit, just lift up.

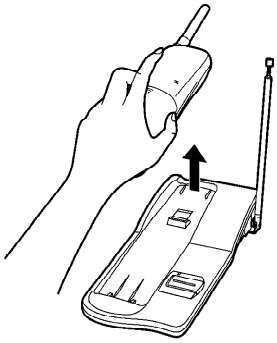

Selecting the ringer volume

The TALK indicator light must be off.

- **To select HIGH or LOW,** press RINGER. Each time you press the button, the ringer volume will change and the selected volume will ring.
- **To turn the ringer OFF,** press and hold RINGER until a beep sound.
- **To turn the ringer ON,** press RINGER.

5.3. Storing Phone Numbers in Memory

You can store up to 10 phone numbers. The dialing buttons (0) to (9) function as memory stations.
The TALK indicator light must be off before programming.

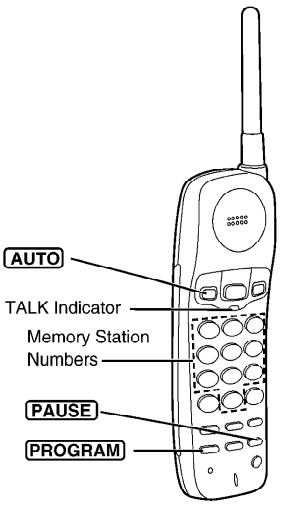

1. Press PROGRAM.
   - The TALK indicator flashes.
2. Enter a phone number up to 16 digits.
3. Press AUTO.
4. Press a memory station number (0 to 9).
   - A beep sounds.
   - To store other numbers, repeat steps 1 through 4.

- If a pause is required for dialing, press PAUSE where needed. Pressing PAUSE counts as one digit.

If you misdial

Press PROGRAM to end storing. ➡ ➡ Start again from step 1.

To erase a stored number

Press PROGRAM ➡ AUTO ➡ ➡ the memory station number (0 to 9) for the phone number to be erased.

- A beep sounds.

5.4. Storing a Phone Number in the DIRECT Button

A phone number stored in the DIRECT button can be dialed with a one-touch operation.
The TALK indicator light must be off before programming.

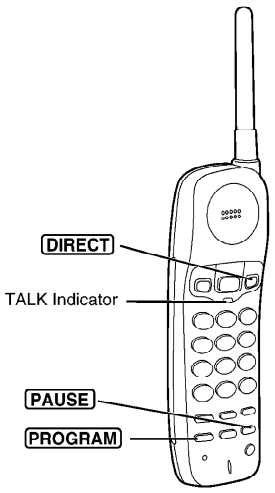

1 Press PROGRAM.
- The TALK indicator flashes.

2 Enter a phone number up to 16 digits.

3 Press DIRECT.
- A beep sounds.

- If a pause is required for dialing, press PAUSE where needed. Pressing PAUSE counts as one digit.

If you misdial
Press PROGRAM to end storing. ➡
➡ Start again from step 1.

To erase a stored number
Press PROGRAM ➡ DIRECT.
- A beep sounds.

5.5. Dialing a Stored Number

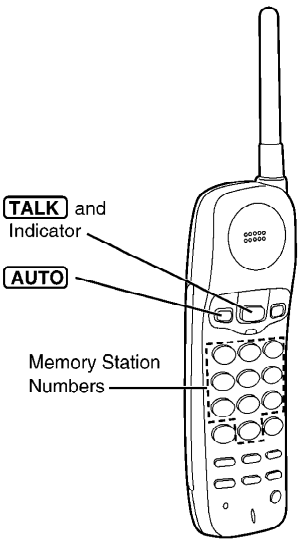

1 Press TALK.
- The TALK indicator lights.

2 Press AUTO.

3 Press the memory station number (0 to 9).
- The stored number is dialed.

5.6. Dialing the Stored Number in the DIRECT Button

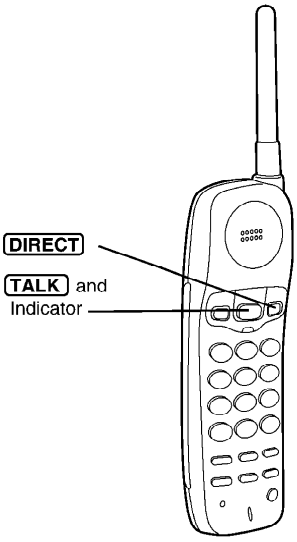

1 Press [TALK].

2 Press [DIRECT].
• The stored number is dialed.

5.7. Flash Button

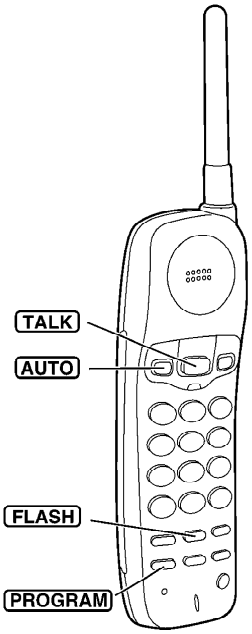

Pressing [FLASH] allows you to use special features of your host PBX such as transferring an extension call or accessing special telephone services (optional), such as call waiting.

Selecting the flash time

The flash time depends on your telephone exchange or host PBX. You can select the following flash times; "90, 100, 110, 250, 300, 400, 600 or 700 msec (milliseconds)". Your phone comes from the factory set to "700 msec".
The [TALK] indicator light must be off before programming.

Press [PROGRAM] ➡ Dialing button ([1] to [8]) ➡ [AUTO] ➡ ➡ [FLASH] .

[1]: 90 msec [2]: 100 msec [3]: 110 msec
[4]: 250 msec [5]: 300 msec [6]: 400 msec
[7]: 600 msec [8]: 700 msec

- A beep sounds.
- If 3 beeps sound after programming, a wrong key was prossed. Start again from thc bcginning.
- If you are connected via a PBX, a longer flash time may be necessary to use PBX functions (transferring a call etc.). Consult your PBX supplier for the correct setting.

6. DISASSEMBLY INSTRUCTIONS

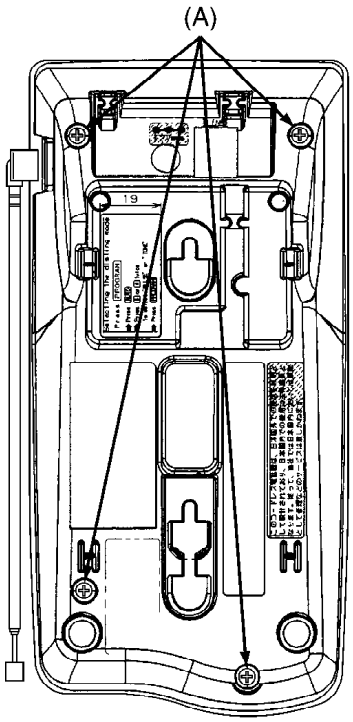

Fig. 1

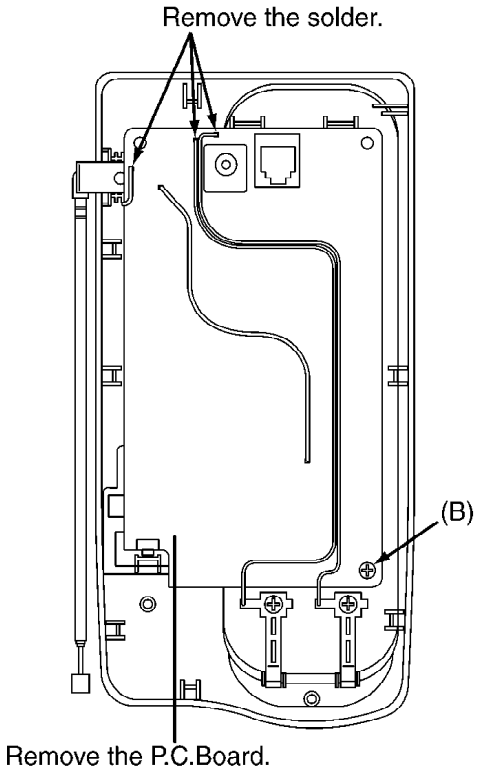

Fig. 2

Show in Fig.	Procedure	To remove.	Remove.
1	1	Lower Cabinet	Screws (2.6 × 12)..... (A) × 4
2	1, 2	Main P.C. Board	Screws (2.6 × 6)..... (B) × 1
			Solder
			Main P.C. Board.

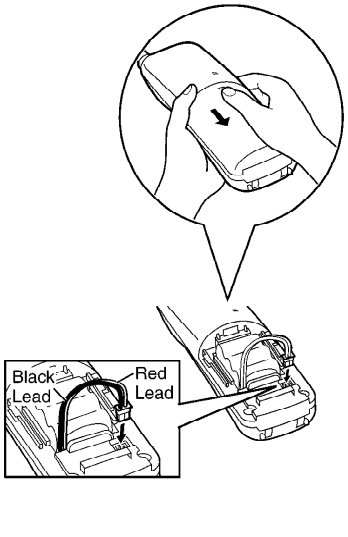

Fig. 3



Fig. 4

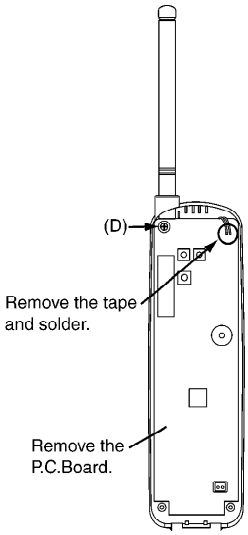

Fig. 6

Note: When opening the upper cabinet, be careful of the speaker lead wire.

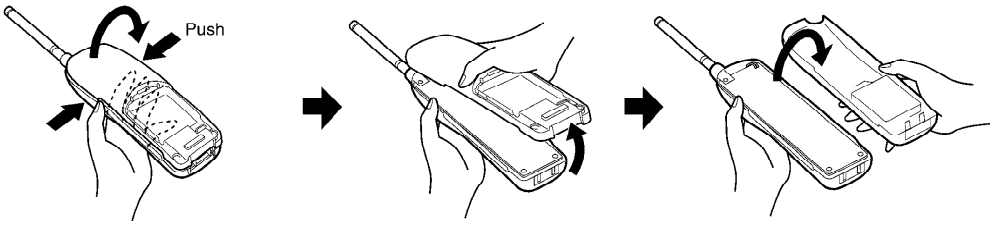

Fig. 5

Show in Fig.	Procedure	To remove.	Remove.
3	3	Rear Cabinet	Battery compartment cover.
4	3, 4		Screws (2.6 × 12).....(C) × 2
5	3, 4, 5	Main P. C. Board	Screw (2.6 × 12).....(D) × 1
			Tape and solder.
			Main P. C. Board.

7. TROUBLESHOOTING GUIDE

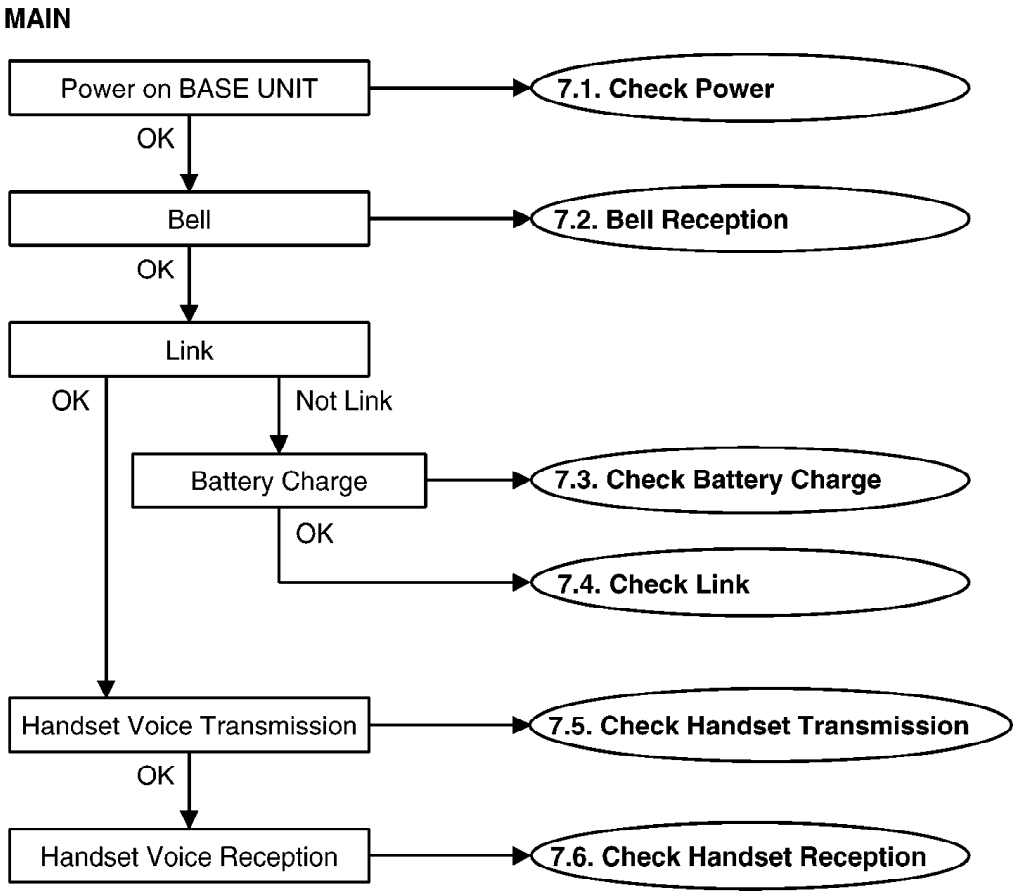

Cross Reference:
Check Power ()
Bell Reception ()
Check Battery Charge ()
Check Link ()
Check Handset Transmission ()
Check Handset Reception ()

7.1. Check Power

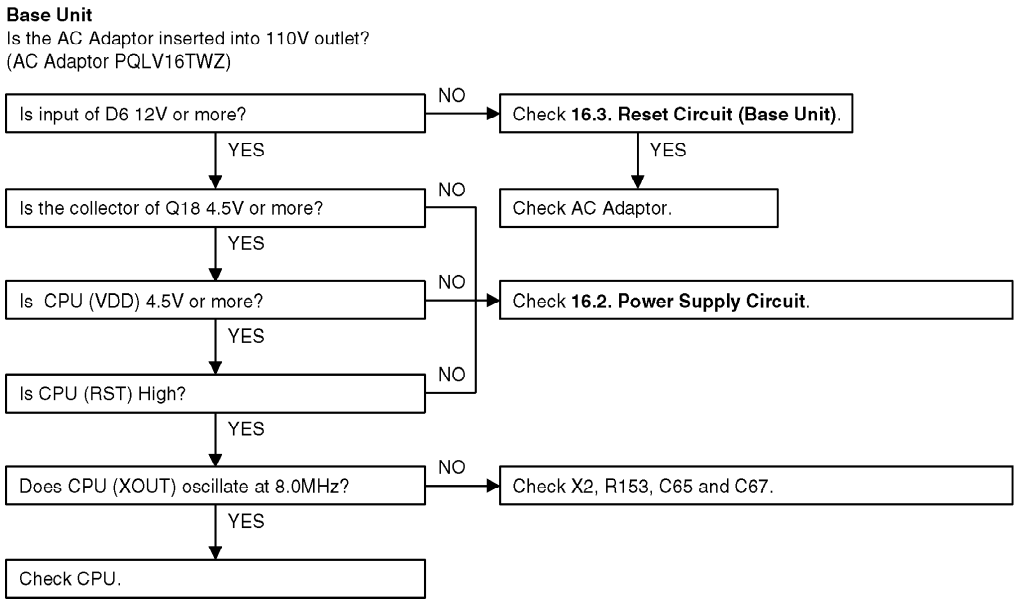

Cross Reference:
Reset Circuit (Base Unit) ()
Power Supply Circuit ()

Note:
CPU: IC2

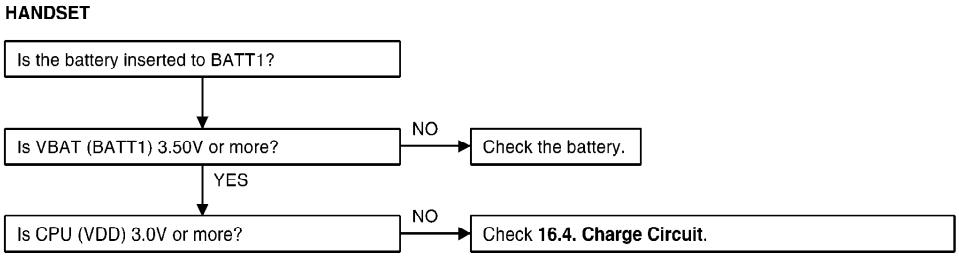

Cross Reference:
Charge Circuit ()

Note:
CPU: IC2

***: Each measurement points are shown in CIRCUIT BOARD (Base Unit) () or CIRCUIT BOARD (Handset) ()**

7.2. Bell Reception

Base Unit

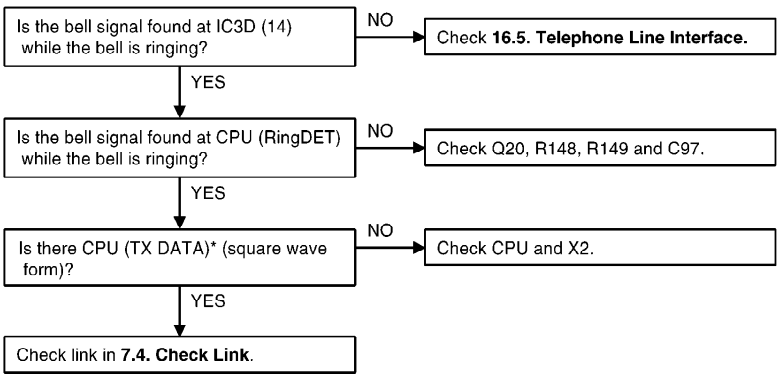
Is the bell signal found at IC3D (14) while the bell is ringing?
NO
Check 16.5. Telephone Line Interface.
YES
Is the bell signal found at CPU (RingDET) while the bell is ringing?
NO
Check Q20, R148, R149 and C97.
YES
Is there CPU (TX DATA)* (square wave form)?
NO
Check CPU and X2.
YES
Check link in 7.4. Check Link.

Cross Reference:
Check Link ()
Telephone Line Interface ()

Note:
CPU: IC2

HANDSET

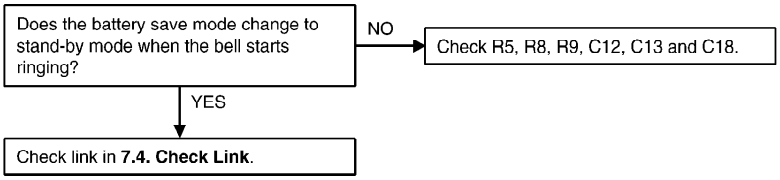
Does the battery save mode change to stand-by mode when the bell starts ringing?
NO
Check R5, R8, R9, C12, C13 and C18.
YES
Check link in 7.4. Check Link.

Cross Reference:
Check Link ()

- In case of the following suffix, the bell might not stop even after TALK key was pressed to answer the call.

	Base Unit	Handset
Suffix:	A	B

In this case, the Base Unit and the Handset might have been mixed up at the customer side.
Therefore, each of these units should be replaced to the original ones which have the same suffix.

***: Each measurement points are shown in CIRCUIT BOARD (Base Unit) () or CIRCUIT BOARD (Handset) ()**

7.3. Check Battery Charge

Base Unit

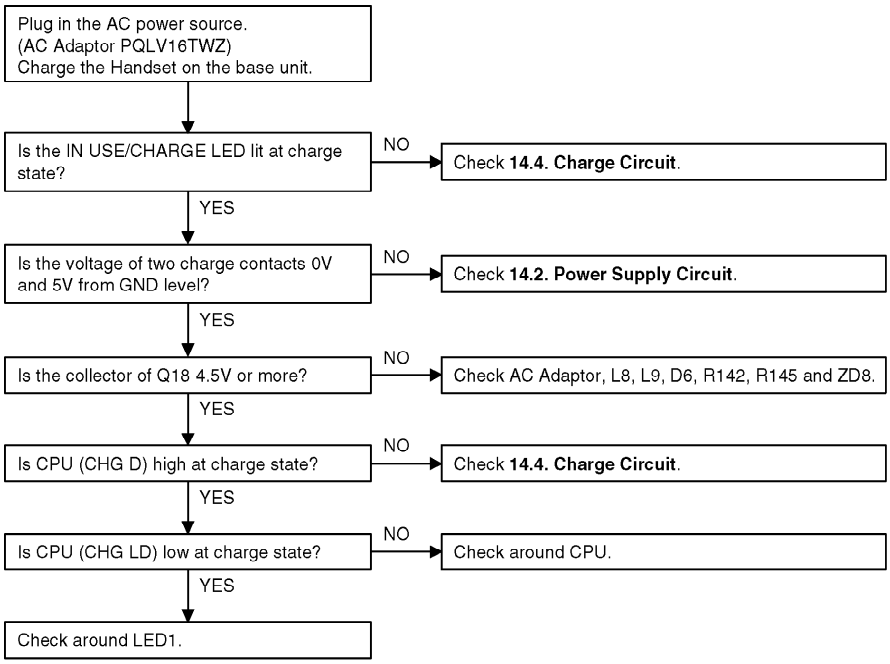
Plug in the AC power source.
(AC Adaptor PQLV16TWZ)
Charge the Handset on the base unit.
Is the IN USE/CHARGE LED lit at charge state?
NO
Check 14.4. Charge Circuit.
YES
Is the voltage of two charge contacts 0V and 5V from GND level?
NO
Check 14.2. Power Supply Circuit.
YES
Is the collector of Q18 4.5V or more?
NO
Check AC Adaptor, L8, L9, D6, R142, R145 and ZD8.
YES
Is CPU (CHG D) high at charge state?
NO
Check 14.4. Charge Circuit.
YES
Is CPU (CHG LD) low at charge state?
NO
Check around CPU.
YES
Check around LED1.

Cross Reference:
Charge Circuit ()
Power Supply Circuit ()

Note:
CPU: IC2

HANDSET

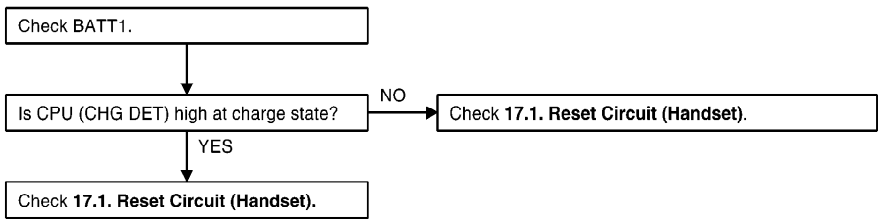

Cross Reference:
Reset Circuit (Handset) ()

Note:
CPU: IC2

***: Each measurement points are shown in CIRCUIT BOARD (Base Unit) () or CIRCUIT BOARD (Handset) ()**

7.4. Check Link

BASE UNIT

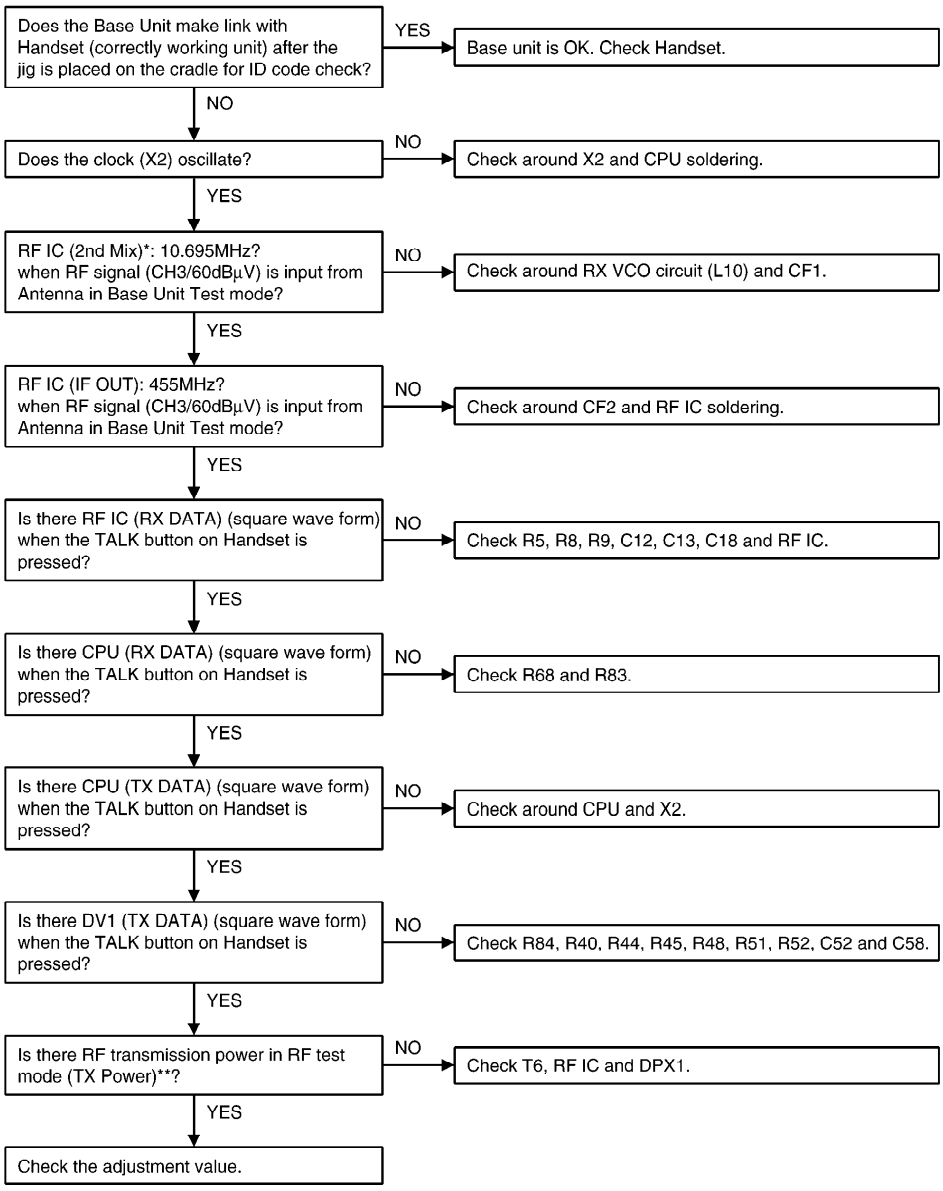
Does the Base Unit make link with Handset (correctly working unit) after the jig is placed on the cradle for ID code check?
YES
Base unit is OK. Check Handset.
NO
Does the clock (X2) oscillate?
NO
Check around X2 and CPU soldering.
YES
RF IC (2nd Mix)*: 10.695MHz? when RF signal (CH3/60dBμV) is input from Antenna in Base Unit Test mode?
NO
Check around RX VCO circuit (L10) and CF1.
YES
RF IC (IF OUT): 455MHz? when RF signal (CH3/60dBμV) is input from Antenna in Base Unit Test mode?
NO
Check around CF2 and RF IC soldering.
YES
Is there RF IC (RX DATA) (square wave form) when the TALK button on Handset is pressed?
NO
Check R5, R8, R9, C12, C13, C18 and RF IC.
YES
Is there CPU (RX DATA) (square wave form) when the TALK button on Handset is pressed?
NO
Check R68 and R83.
YES
Is there CPU (TX DATA) (square wave form) when the TALK button on Handset is pressed?
NO
Check around CPU and X2.
YES
Is there DV1 (TX DATA) (square wave form) when the TALK button on Handset is pressed?
NO
Check R84, R40, R44, R45, R48, R51, R52, C52 and C58.
YES
Is there RF transmission power in RF test mode (TX Power)**?
NO
Check T6, RF IC and DPX1.
YES
Check the adjustment value.

****: Refer to Adjustment ()**

Note:
CPU: IC2
RF IC: IC1

***: Each measurement points are shown in CIRCUIT BOARD (Base Unit) () or CIRCUIT BOARD (Handset) ()**

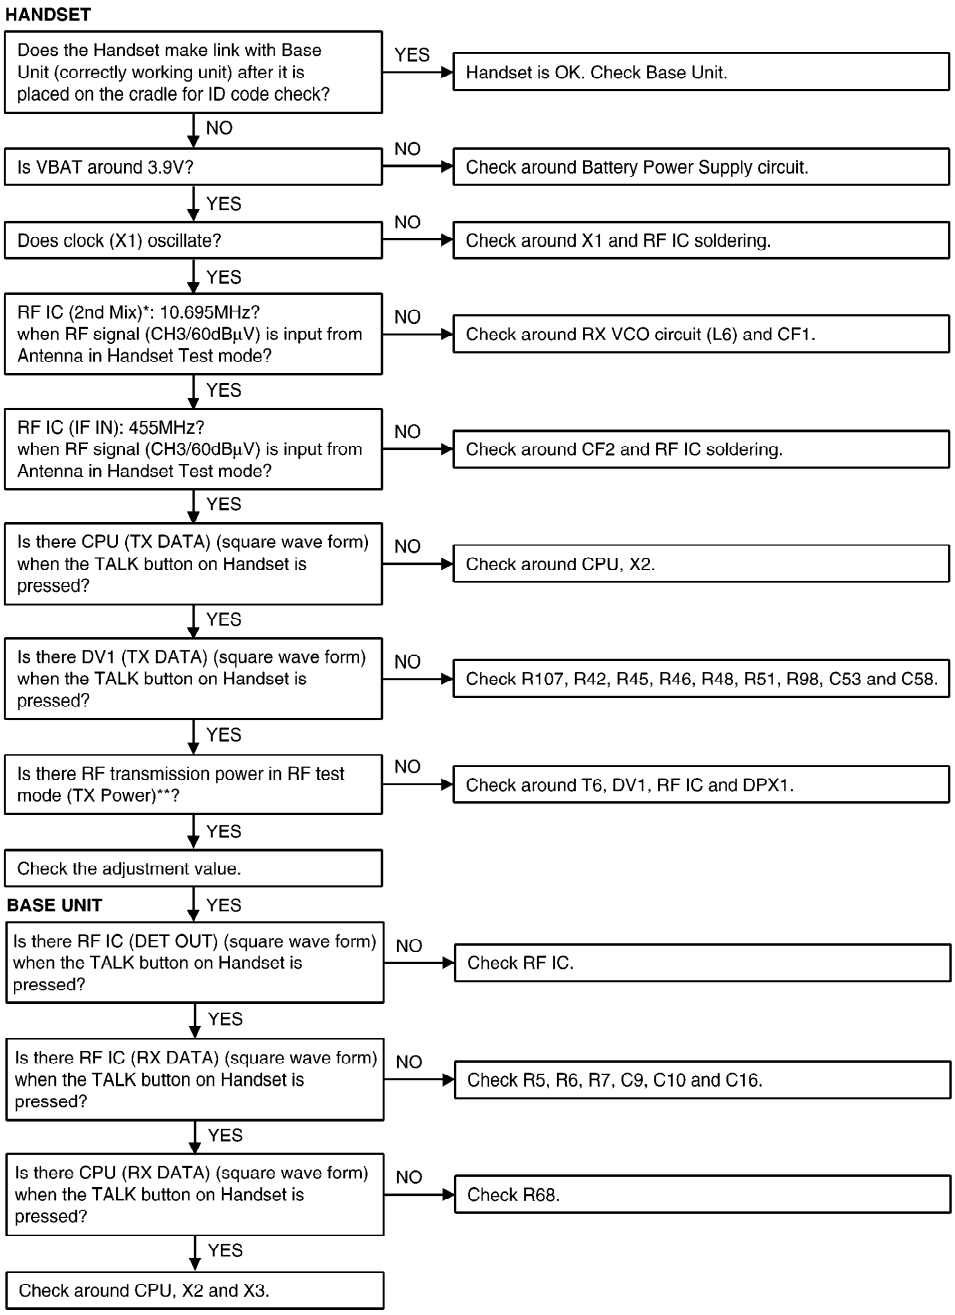
HANDSET
Does the Handset make link with Base Unit (correctly working unit) after it is placed on the cradle for ID code check?
YES
Handset is OK. Check Base Unit.
NO
Is VBAT around 3.9V?
NO
Check around Battery Power Supply circuit.
YES
Does clock (X1) oscillate?
NO
Check around X1 and RF IC soldering.
YES
RF IC (2nd Mix)*: 10.695MHz? when RF signal (CH3/60dBμV) is input from Antenna in Handset Test mode?
NO
Check around RX VCO circuit (L6) and CF1.
YES
RF IC (IF IN): 455MHz? when RF signal (CH3/60dBμV) is input from Antenna in Handset Test mode?
NO
Check around CF2 and RF IC soldering.
YES
Is there CPU (TX DATA) (square wave form) when the TALK button on Handset is pressed?
NO
Check around CPU, X2.
YES
Is there DV1 (TX DATA) (square wave form) when the TALK button on Handset is pressed?
NO
Check R107, R42, R45, R46, R48, R51, R98, C53 and C58.
YES
Is there RF transmission power in RF test mode (TX Power)**?
NO
Check around T6, DV1, RF IC and DPX1.
YES
Check the adjustment value.
BASE UNIT
YES
Is there RF IC (DET OUT) (square wave form) when the TALK button on Handset is pressed?
NO
Check RF IC.
YES
Is there RF IC (RX DATA) (square wave form) when the TALK button on Handset is pressed?
NO
Check R5, R6, R7, C9, C10 and C16.
YES
Is there CPU (RX DATA) (square wave form) when the TALK button on Handset is pressed?
NO
Check R68.
YES
Check around CPU, X2 and X3.

****: Refer to Adjustment ().**

Note:
CPU: IC2
RF IC: IC1

***: Each measurement points are shown in CIRCUIT BOARD (Base Unit) () or CIRCUIT BOARD**

(Handset) ()

7.5. Check Handset Transmission

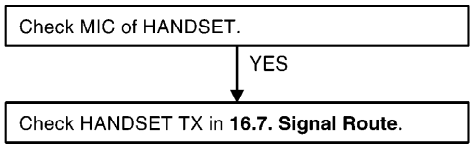

Cross Reference:
Signal Route ()

7.6. Check Handset Reception

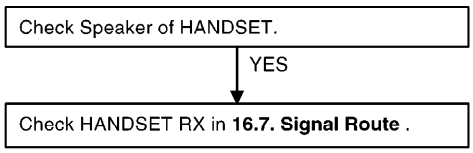

Cross Reference:
Signal Route ()

***: Each measurement points are shown in CIRCUIT BOARD (Base Unit) () or CIRCUIT BOARD (Handset) ()**

8. ADJUSTMENTS (BASE UNIT)

If your unit have below symptoms, adjust or confirm each item using remedy column from the table.

Symptom	Remedy*
The base unit dose not respond to a call from handset.	Make adjustments in item
The base unit dose not transmit or the transmit frequency is off.	Make adjustments in item
The transmit frequency is off.	Make confirmation in item
The transmit power output is low, and the operating distance between the base unit and the handset is less than normal.	Make confirmation in item
The reception sensitivity of base unit is low with noise.	Make confirmation in item
The transmit level is high or low.	Make confirmation in item
The reception level is high or low.	Make adjustments in item
The unit does not link.	Make confirmation in item

***: Refer to Adjustment ().**

8.1. Test Mode Flow Chart (Base Unit)

The operation-flow of Test mode and main check items are shown below.

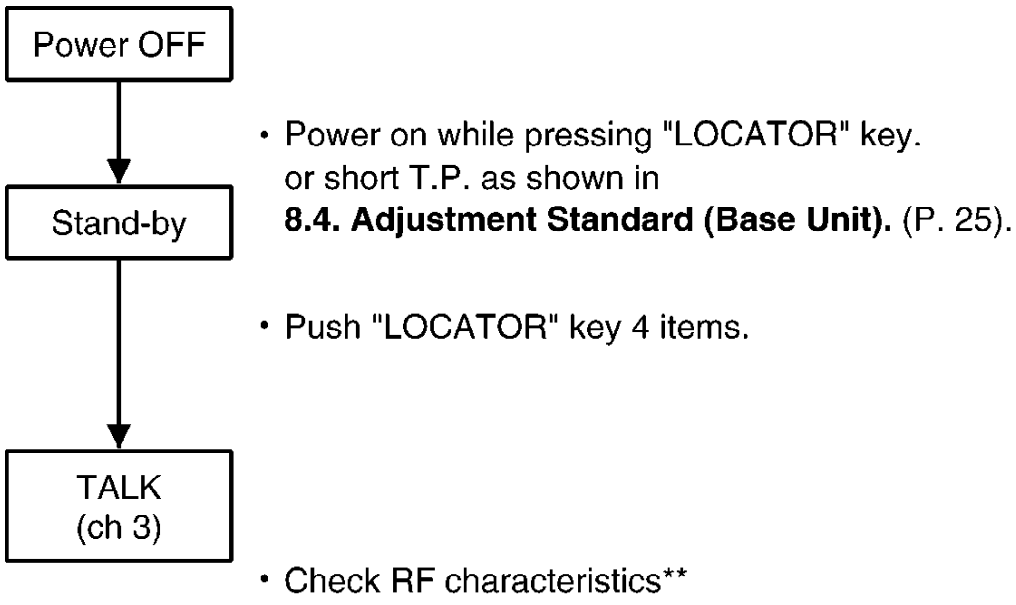
Power OFF
Stand-by
TALK
(ch 3)
• Power on while pressing "LOCATOR" key.
or short T.P. as shown in
8.4. Adjustment Standard (Base Unit). (P. 25).
• Push "LOCATOR" key 4 items.
• Check RF characteristics**

Note:

****: Refer to the above table.**

8.2. How to change the channel

When short R98* shortly, the channel will be changed as follows;

CH3→CH6→CH7→CH8→CH10→CH4→CH5→CH9→CH1→CH2

***: Refer to Flow Solder Side View ().**

8.3. Adjustment

	Adjustment Items	Test Mode	Adjustment Point	*Procedure
(A)	RX VCO Confirmation	3ch Talk	-	-Confirm so that the reading of the Digital Voltmeter is 1.4V ± 0.6V.
(B)	TX VCO Adjustment	3ch Talk	T6	-Adjust T6 so that the reading of the Digital Voltmeter is 2.0V ± 0.1V.
(C)	TX Frequency Adjustment	3ch Talk	VC1	-Adjustment VC1so that the reading of the frequency counter is 46.670MHz ± 0.1KHz.
(D)	TX Power Adjustment	3ch Talk	T5	-Adjust T5 so that the reading of the RF VTVM is 0.25mW ± 0.1mW.
(E)	RX Sensitivity Confirmation (2nd IF output)	3ch Talk	T2	1. Apply -60dBm output from S.S.G. (modulation frequency 1KHz, dev. 0KHz). 2. Confirm that the reading of RF VTVM is the maximum value (more than 20mV)
(F)	Line Output Level Confirmation	3ch Talk	-	1. Apply -60dBm output from S.S.G. (modulation frequency 1KHz, dev. 3KHz). 2. Confirm that the reading of AF VTVM is 600mV ± 200mV (600 Ω load).
(G)	Line Input Modulation Confirmation	3ch Talk	-	1. Input via loop simulator 1.0KHz, 130mV (measured at T-R) signal. 2. Apply -60dBm output from S.S.G. (modulation frequency 1KHz, dev. 0KHz). 3. Confirm so that the reading of FM Deviation Meter is 3.1KHz ± 0.4KHz.
(H)	Noise Squelch Confirmation	3ch Talk	-	1. Measure the SSG output level when the noise squelch changes from Low to High. 2. Confirm that the SSG output level is -105dBm ~ -110dBm.

*** : The connection of adjustment equipment are as shown in Adjustment Standard (Base Unit) ().**
SSG Frequency: 49.86 MHz

8.4. Adjustment Standard (Base Unit)

Note: (A) - (H) is refered to ADJUSTMENTS (BASE UNIT) ()

9. ADJUSTMENTS (HANDSET)

If your unit have below symptoms, adjust or confirm each item using remedy column from the

table.

Symptom	Remedy*
The movement of Battery Low Indicator is wrong.	Make confirmation in item
The base unit does not respond to a call from the handset.	Make adjustments in item
The base unit does not transmit or the transmit frequency is off.	Make adjustments in item
The transmit frequency is off.	Make confirmation in item
The transmit power output is low, and the operating distance between the base unit and the Handset is less than normal.	Make confirmation in item
The reception sensitivity of base unit is low with noise.	Make confirmation item (F
Does not link between the base unit and the handset.	Make confirmation in item
The reception level is high or low.	Make confirmation item (H
The transmit level is high or low.	Make adjustments in item

*: Refer to Adjustment ().

Unit condition:

1. Remove the antenna lead wire from P.C Board of the handset.
2. Power Supply: DC 3.9V (DC power supply)
3. Volume: HIGH (When P.C. Board of handset is in test mode, volume condition is medium. Press “LOCATOR” key once.)
4. Speaker Load: 150 Ω

CH	TX Frequency	RX Frequency
CH3	49.860MHz	46.670MHz

9.1. Test Mode Flow Chart (Handset)

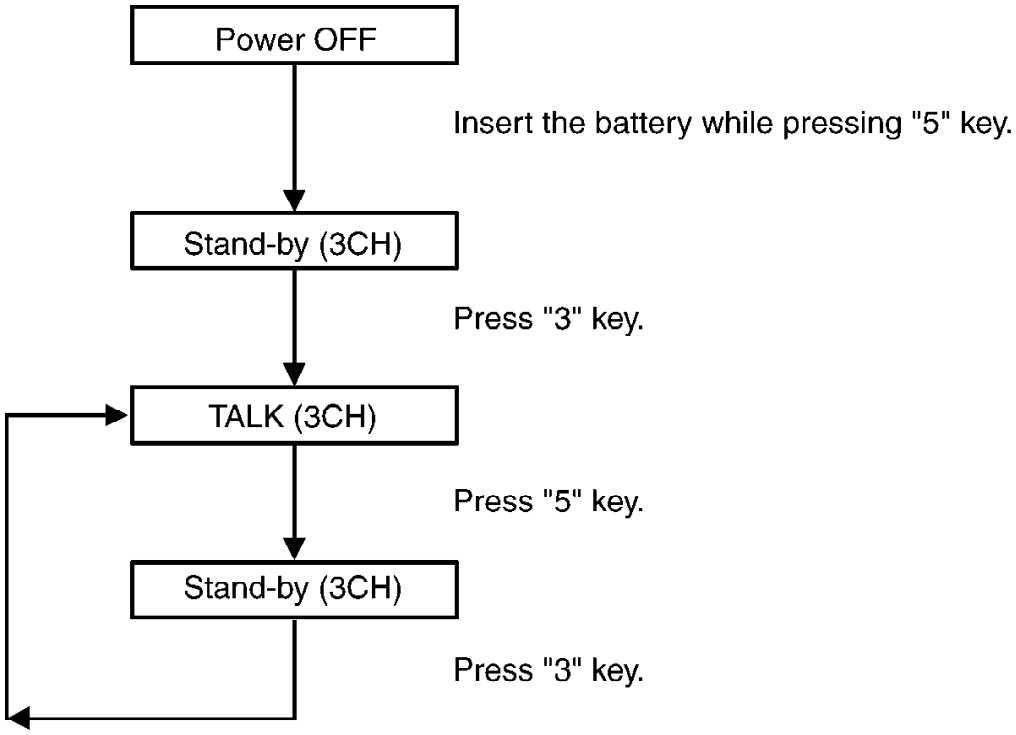

Note:

Refet to CIRCUIT BOARD (Handset) ()

Signal Route ()

9.2. How to change the channel

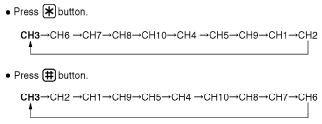

9.3. Adjustment

	Adjustment Items	Test Mode	Adjustment Point	Procedure
(A)	Battery Low Confirmation	3ch Talk	-	1. Adjust the power supply voltage to DC3.60V,and confirm so that the reading of oscillosope is High. 2. Adjust that power supply voltage to DC 3.40V, and confirm so that the reading c oscilloscope is Low.
(B)	TX VCO Voltage	3ch Talk	T6	1. Adjust T6 so that the reading of the Digital Voltmeter is 1.5V ± 0.1V.
(C)	RX VCO Confirmation	3ch Talk	-	1. Set S2 to RX VCO side. 2. Adjust T801 so that the reading of the Digital Voltmeter is 1.65V ± 0.85V. (After adjusting, set S2 to OFF).
(D)	TX Frequency Adjustment	3ch Talk	VC1	-Confirm so that the reading of the frequency counter is 49.860MHz ± 0.1KHz.
(E)	TX Power Adjustment	3ch Talk	T5	-Output level should be over 2.5mW ± 0.5mW on RF VTVM (50 Ω load).
(F)	RX Sensitivity Confirmation (2nd IF output)	3ch Talk	T3	1. Apply -60dBm output from S.S.G. (modulation frequency 1KHz, dev. 0KHz). 2. Confirm 2nd IF output so that the reading of RF VTVM is more than 15mV.
(G)	Noise Squelch Confirmation	3ch Talk	-	1. ...Measure the SSG output level when the noise squelch changes from Low to High. (modulation frequency 1KHz, dev.3kHz) 2. Confirm that the SSG output level is -105dBm.
(H)	Speaker Output Level confirmation	3ch Talk	-	1. Apply -60dBm output from S.S.G. (modulation frequency 1KHz, dev. 3KHz). 2. Confirm that SP output level is 100mV ± 20mV. (distortion: less than 7%) (volume High).
(I)	Mic Modulation Factor Confirmation	3ch Talk	-	1. Apply a MIC signal (1KHz, 12mV at 600 Ω load). 2. Confirmation so that the reading FM Deviation Meter is 3.1KHz ± 0.4KHz.
(J)	Data Modulation Confirmation	3ch Talk	-	-Confirm for 5KHz ± 1KHz FM Deviation Meter reading.

The connections of adjustment equipment are as shown in Adjustment Standard (Handset) ().
SSG Frequency: 46.670 MHz

9.4. Adjustment Standard (Handset)

(Component View)

Note: (A) - (I) is refered to ADJUSTMENTS (HANDSET) ()

(Flow Solder Side View)

Note: (A) - (I) is refered to ADJUSTMENTS (HANDSET) ()

10. RF SPECIFICATION

10.1. Base Unit

Item	Value	Refer to -.*	Remark
TX Frequency	46.670 MHz ± 0.1kHz	ADJUSTMENTS (BASE UNIT) (C)	at CH3
TX Power	0.25mW ± 0.1mW (3CH)	ADJUSTMENTS (BASE UNIT) (D)	at CH3
Line Modulation factor	2.7 kHz~3.5 kHz	ADJUSTMENTS (BASE UNIT) (G)	
Line Modulation factor (Max.)	4.5 kHz~8.5 kHz	—	
Data Modulation factor	3 kHz~7 kHz	—	
Line Output level	600mV ± 200mV	—	

*: Refer to Adjustment ().

10.2. Handset

Item	Value	Refer to -.**	Remark
TX Frequency	49.860 MHz ± 0.1kHz	ADJUSTMENTS (HANDSET) (D)	at CH3
TX Power	2.5mW ± 0.5mW (3CH)	ADJUSTMENTS (HANDSET) (E)	at CH3 (Ante soldering pc 50 Ω Load)
Data Modulation factor	4.0 kHz/dev~6.0 kHz/ dev	ADJUSTMENTS (HANDSET) (J)	at CH3
MIC Modulation factor	2.7 kHz/dev~3.5 kHz/ dev	ADJUSTMENTS (HANDSET) (I)	at CH3 (MIC terminal 12mV Input)
SP Output level	100mV ± 20mV	—	

**: Refer to Adjustment ().

11. HOW TO CHECK THE HANDSET SPEAKER

1. Prepare the digital voltmeter, and set the selector knob to ohm meter.
2. Put the probes at the speaker terminals as shown below.

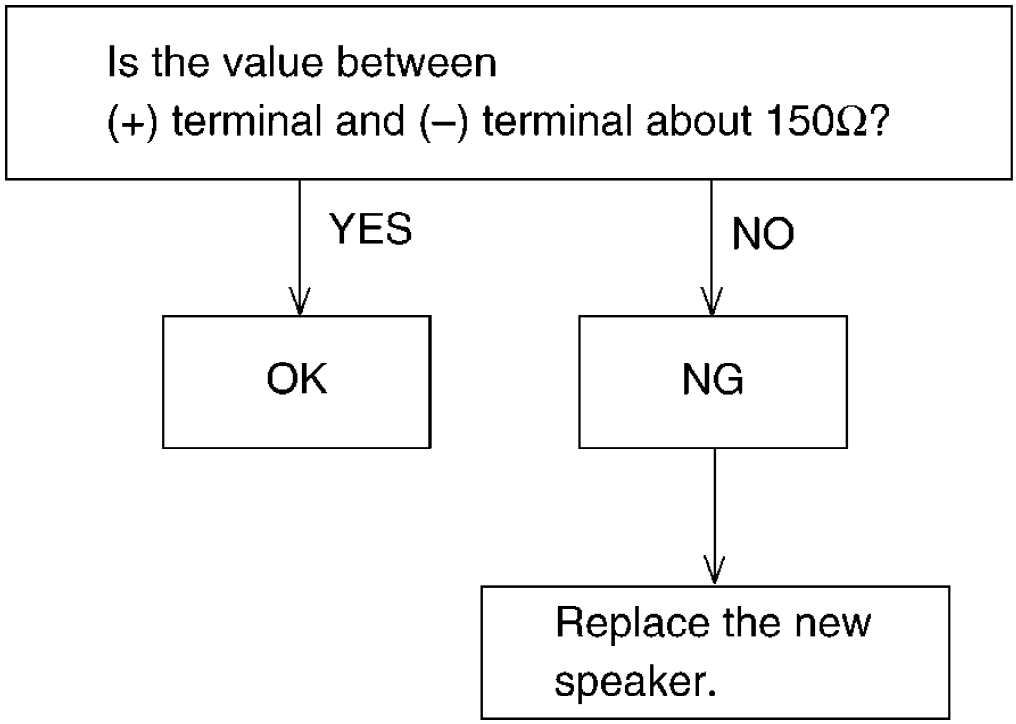
Is the value between
(+) terminal and (–) terminal about 150Ω?
YES
NO
OK
NG
Replace the new
speaker.

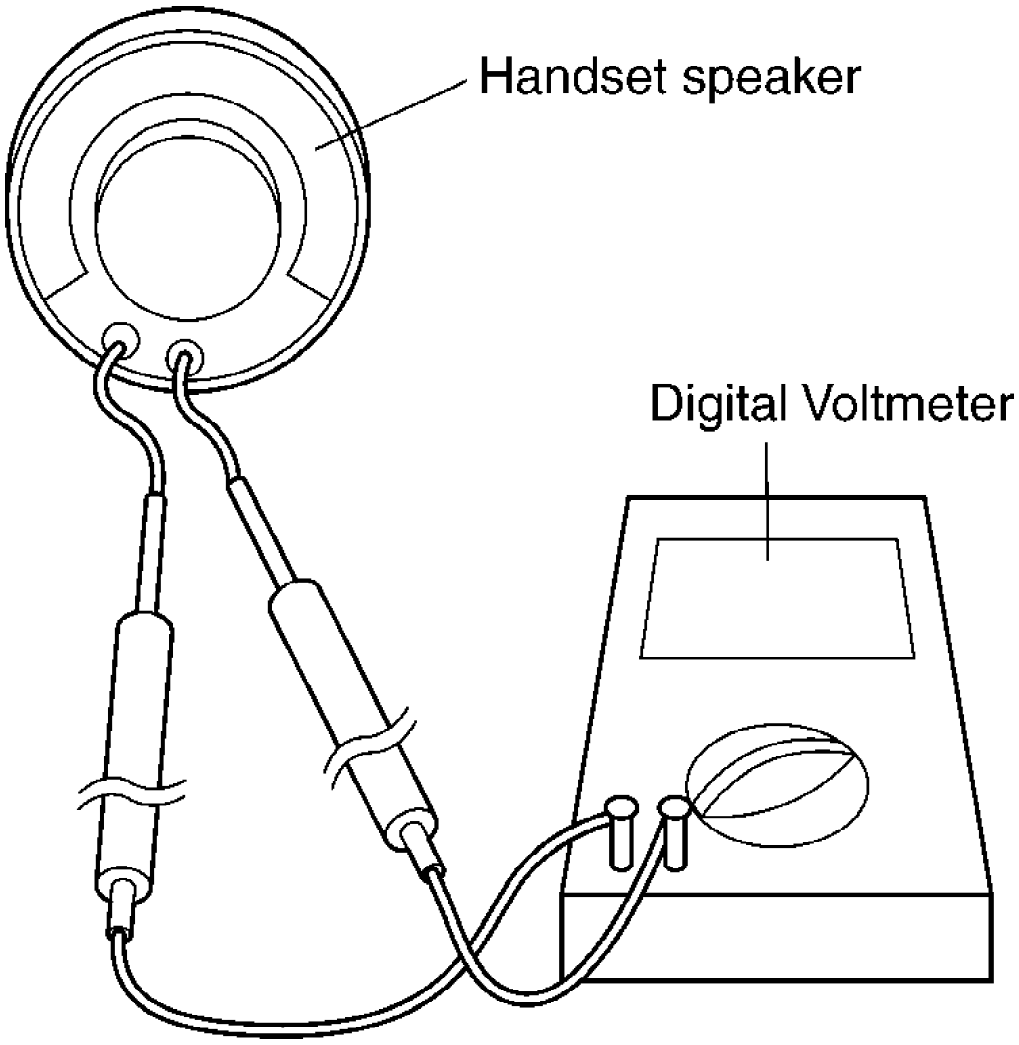
Handset speaker
Digital Voltmeter

12. FREQUENCY TABLE (MHz)

	BASE UNIT		PORTABLE UNIT	
Channel	Transmit Frequency	Receive Frequency	Transmit Frequency	Receive Fre
1	46.610	49.670	49.670	46.61(
2	46.630	49.845	49.845	46.63(
3	46.670	49.860	49.860	46.67(
4	46.710	49.770	49.770	46.71(
5	46.730	49.875	49.875	46.73(
6	46.770	49.830	49.830	46.77(
7	46.830	49.890	49.890	46.83(
8	46.870	49.930	49.930	46.87(
9	46.930	49.990	49.990	46.93(
10	46.970	49.970	49.970	46.97(

13. EXPLANATION OF CPU DATA COMMUNICATION

13.1. STAND-BY -> TALK, TALK -> STAND-BY

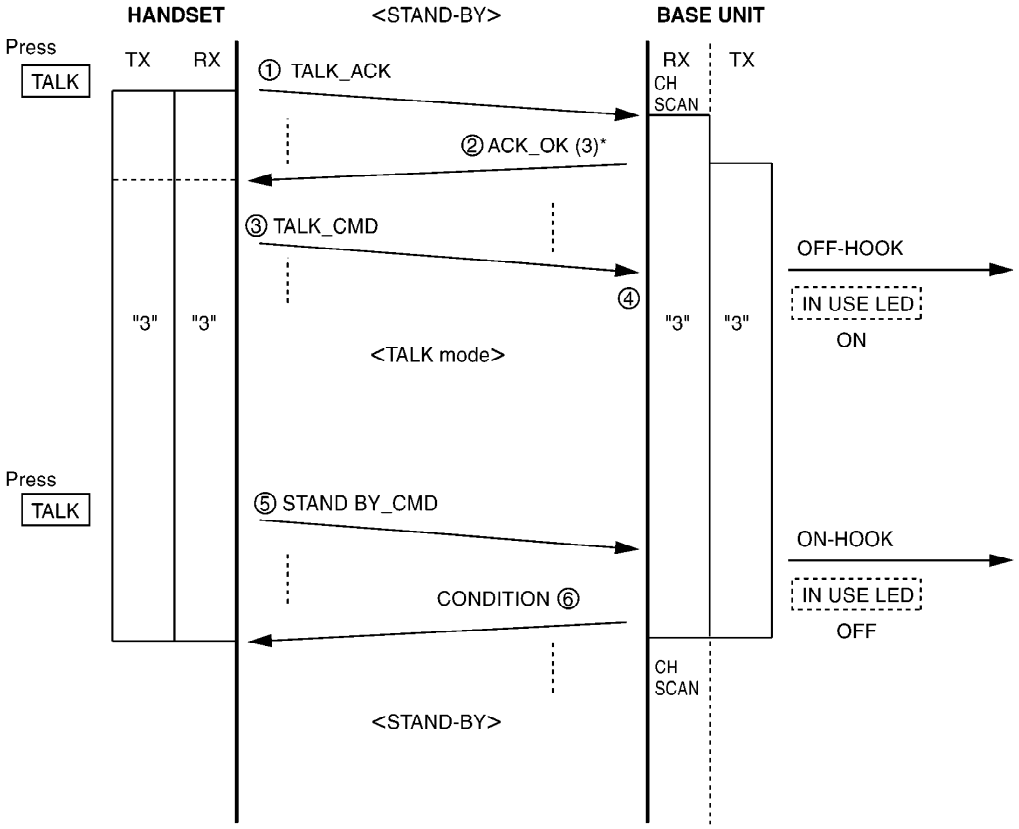

Press the TALK button

① The handset transmits TALK_ACK.
② Then base unit transmits ACK_OK including the channel number (Example: "3").
③ The handset transmits TALK_CMD.
④ The base unit goes to off-Hook mode.

Press the TALK button

⑤ The handset transmits STANDBY_CMD at the channel.
⑥ The base unit transmits CONDITION at the TALK channel.

***: The channel is changed if the noise interferes with the conversation.**

13.2. Ringing

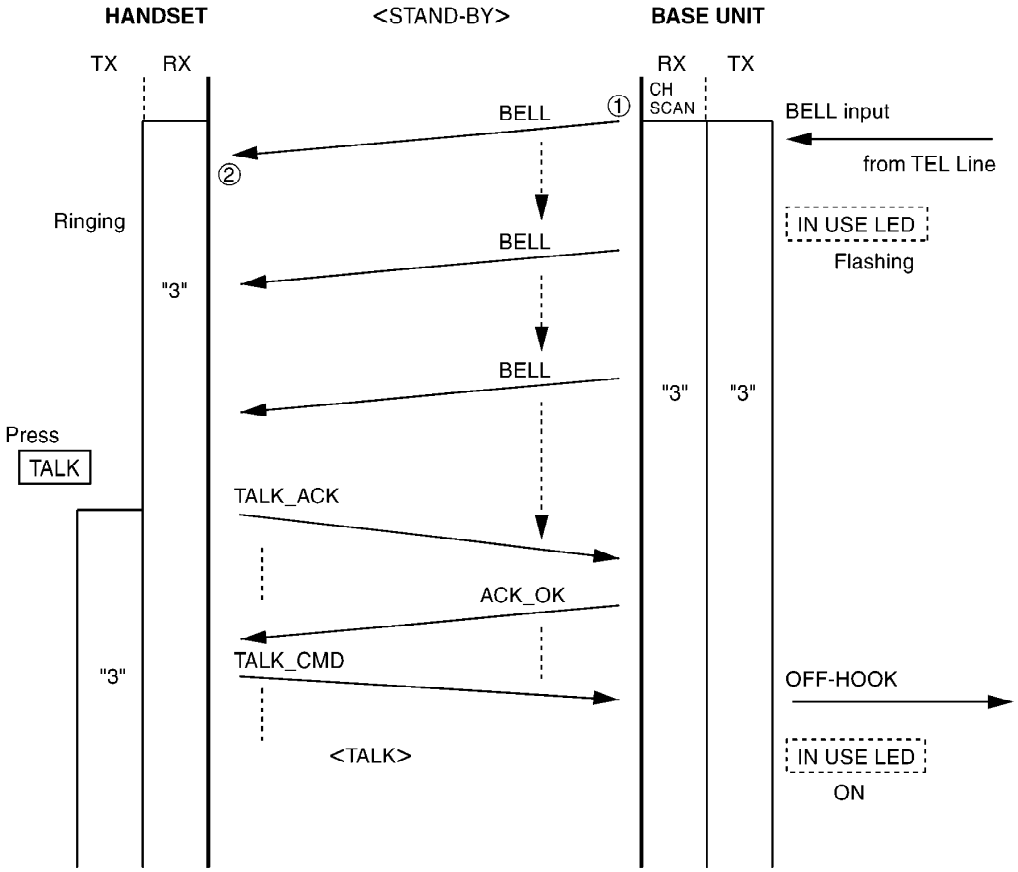

① When the bell signal is input, the base unit transmits BELL.
② The handset rings the bell on receiving BELL.

13.3. Changing the Channel

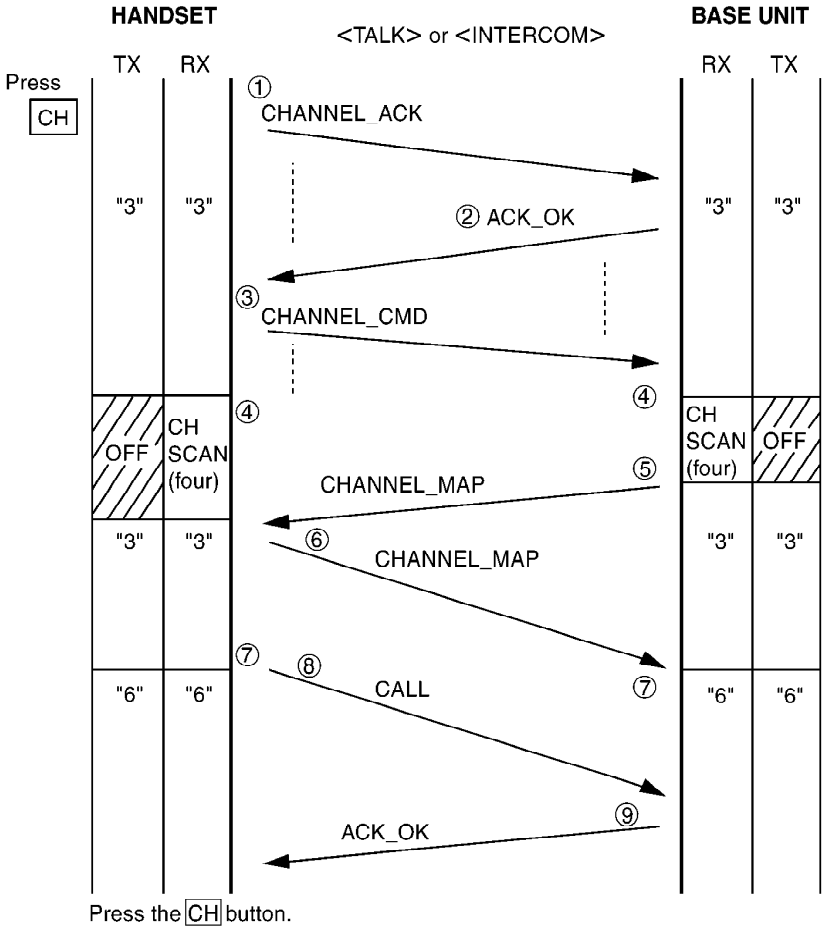

① The handset transmits CHANNEL_ACK.
② The base unit replies with ACK_OK.
③ Then handset transmits CHANNEL_CMD.
④ The handset and base unit turn off tx power and scan the channel map for next four channel.
⑤ The handset transmits CHANNEL_MAP.
⑥ The base unit transmits CHANNEL_MAP.
⑦ The handset and base unit moves to the "vacant channel". (Example: "6").
⑧ The base unit transmits CALL.
⑨ The handset transmits ACK_OK.

13.4. Ports for transmitting and receiving of data

Handset:
transmitting (TX) ... 36 Pin
receiving (RX) ... 4 Pin

Base Unit:
transmitting (TX) ... 17 Pin
receiving (RX) ... 10 Pin

13.5. Waveform of DATA used for cordless transmission and reception

The DATA which is transmitted from the Handset to the Base Unit is combination of DATA 0, DATA 1, PSEUD.
The DATA which is transmitted from the Base Unit to the Handset is combination of DATA 0, DATA 1, PSEUD.

13.5.1. Handset

Transmitting DATA Element Format

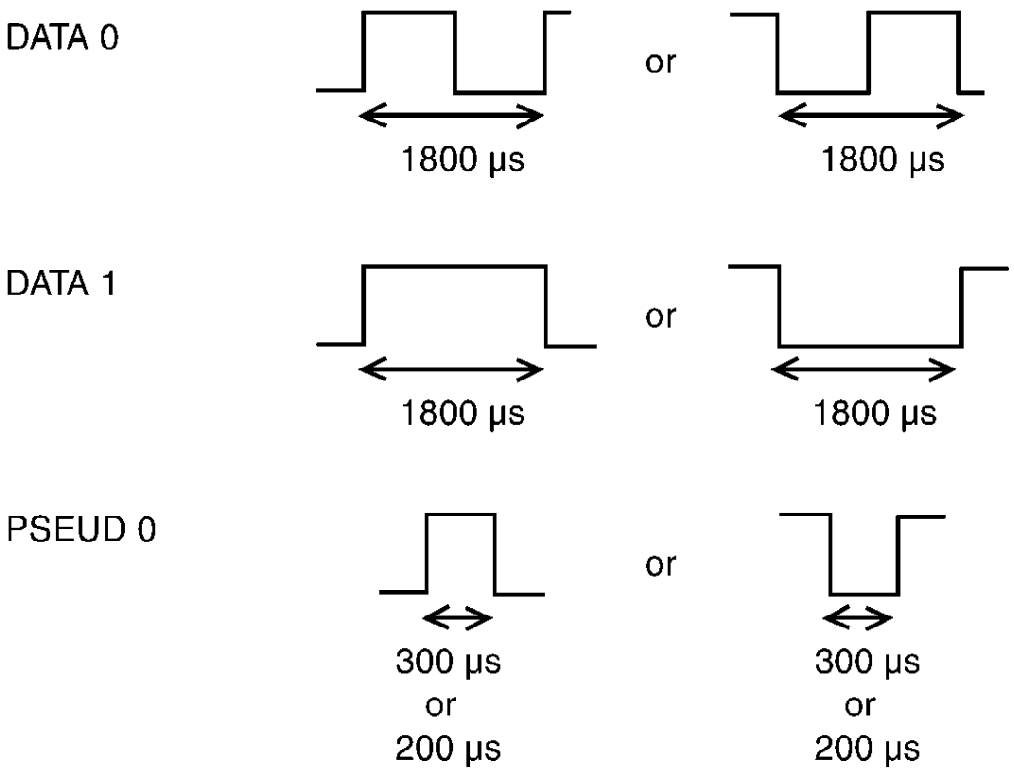

13.5.2. Base Unit

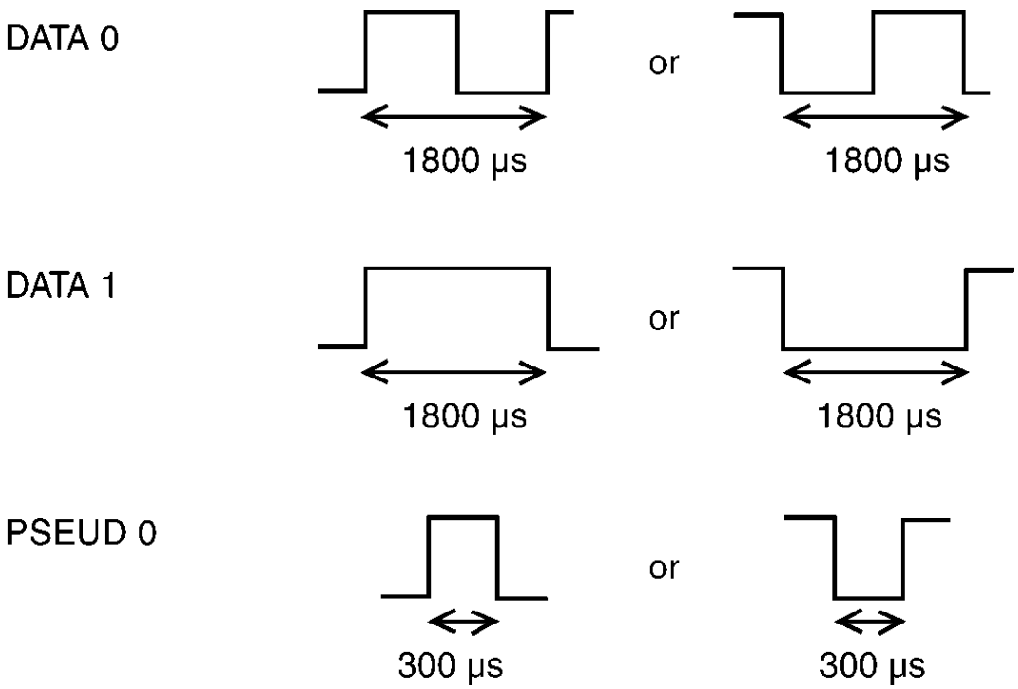

- For example (one of part of data)

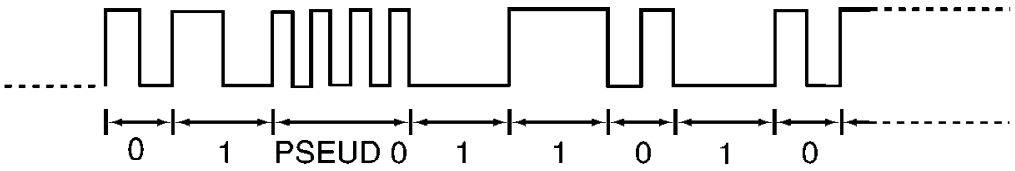

14. BLOCK DIAGRAM (BASE UNIT)

15. BLOCK DIAGRAM (HANDSET)

16. CIRCUIT OPERATION

16.1. Outline

Base unit consists of the following ICs as shown in BLOCK DIAGRAM.

- CPU:IC2
- Controlling the whole system
- Forming/analyzing all data signals (ACK, CMD signal etc.*)
- All interfaces (ex: LED, KEY, SP, Mic, LCD, Detector Circuit (Charge / Power Down)
***Refer to EXPLANATION OF CPU DATA COMMUNICATION ().**
- RF IC:IC1
- PLL Oscillator
- Detection
- Compress/ Expander

- first/ second mixer
- Amplifier for transmission and reception
- Additionally,
- Power Supply Circuit
- Reset Circuit
- Charge Circuit
- Telephone Line Interface Circuit

Handset consist of the following ICs as shown in BLOCK DIAGRAM.

- CPU: IC2
- All data signals (forming/analyzing ACK or CMD signal*)
- All interfaces (ex; LED, Key, Buzzer, Detector Circuit, Charge, Battery Low)
- RAM for keeping the data (CH Number, ID Code, etc.)
- RF IC:IC1
- PLL Oscillator
- Detector
- Compress/Expander
- first, second mixer
- Amplifier for transmission and reception

*Refer to EXPLANATION OF CPU DATA COMMUNICATION ().

16.2. Power Supply Circuit

The power supply to the CPU (Digital, Analog) and RF IC from AC Adaptor (+12V) is shown in the diagram below.

The base unit power supply is DC12V. The handset's power is supplied from 3.6V battery (Nickel-Cadmium battery) which is
installed in the handset.
Power supply for transmitter is turned on by a press of "Talk" key on the handset. During the stand-by mode, the unit stops
transmitting but receives the signal.
Also during on-hook condition (the handset is placed on the base unit), backup power for memory of the last dialed number is
supplied through the battery (3.6V nickel-cadmium in the handset). The memory of this unit is not backed up by the current from
the telephone line.
The base unit DC power supply is regulated by Q18, the CPU power is regulated by Q19. The Q8,

detects AC Adaptor power
failure and maintains the unit security code.

Fig. 1

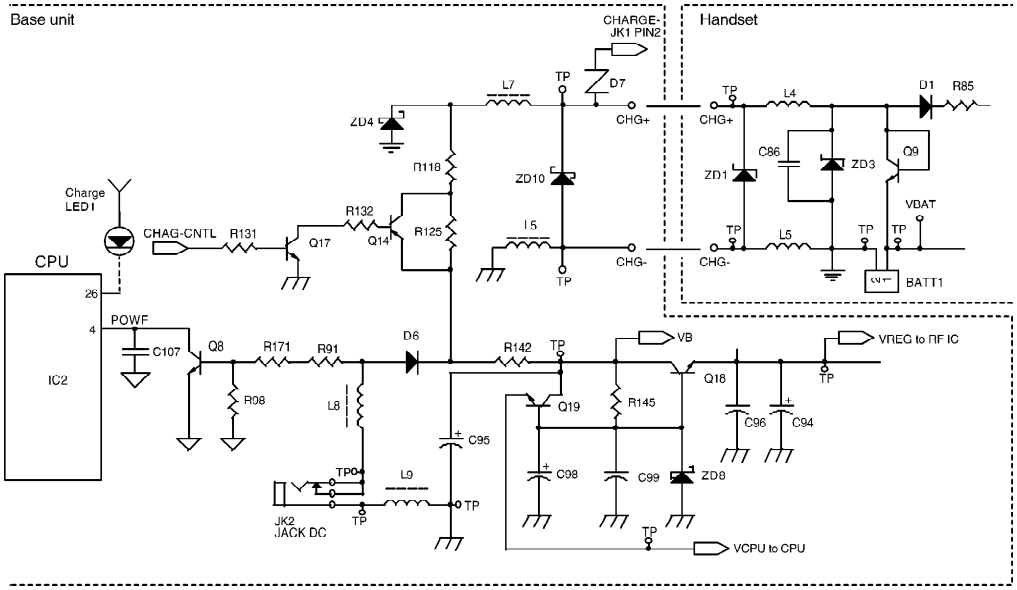

16.3. Reset Circuit (Base Unit)

After power supply from AC adaptor, the VREG is input for making reset signal. Refer to the below waveform.

Fig. 2

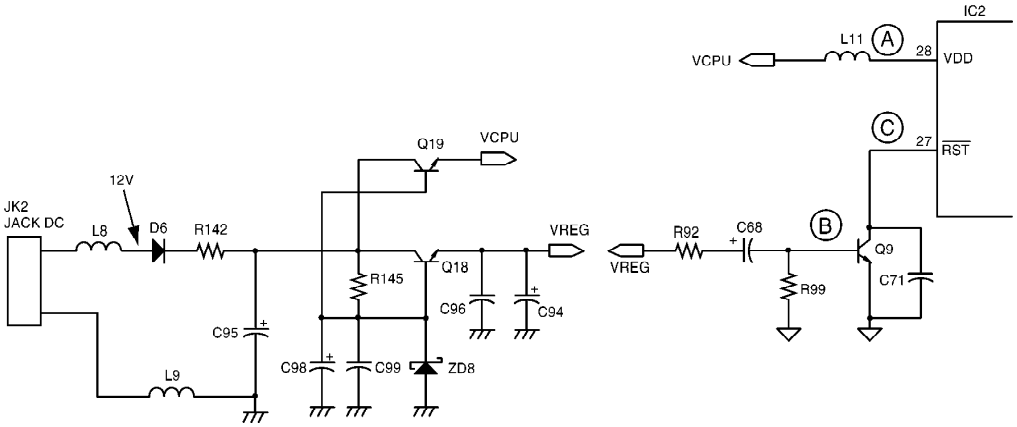

Fig. 3

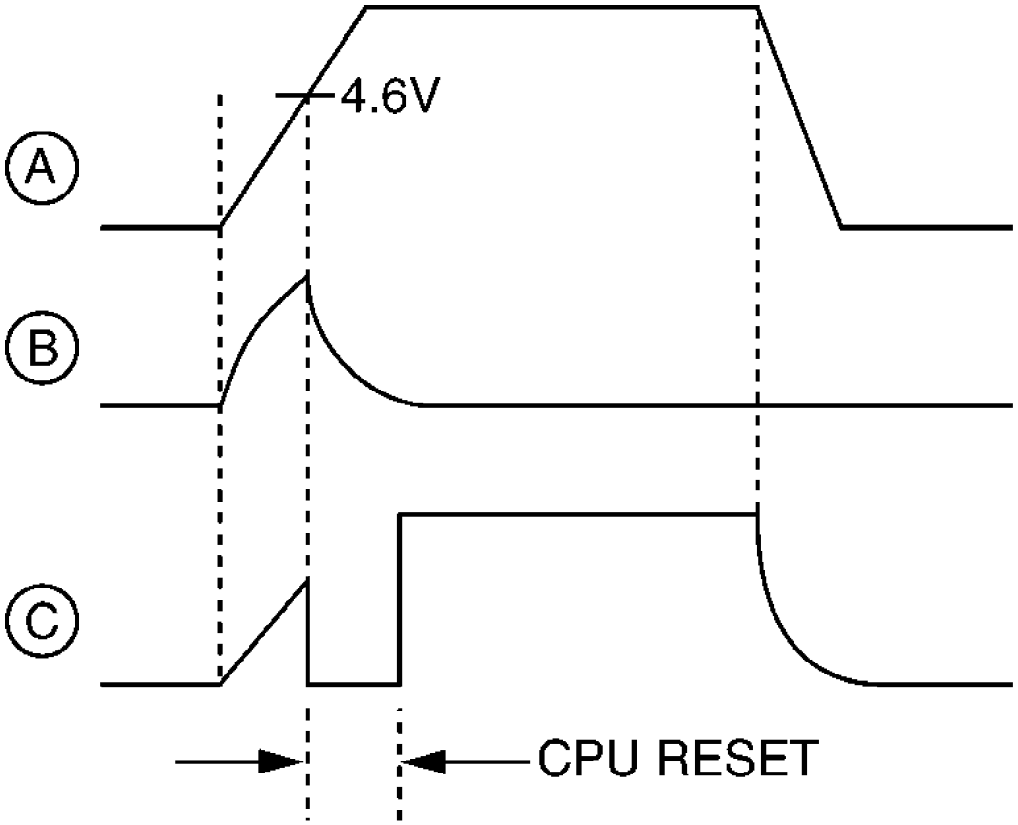

16.4. Charge Circuit

Circuit Operation:
When charging the handset on the base unit, the charge current is as follows;
DC (JK2) → L8 → D6 → L7 → CHG+(Base) → [CHG+(Handset) → L4 → Q9 → BATT(1)....Battery....BATT(2) → L5 → CHG-(Handset)] → CHG+(Base) → L5,
In this way, the CPU on both unit detects the fact that the battery is charged.
The charge current is controlled by switching Q701 of Handset. The battery is charged in normal mode for 10 hours and then in trickle mode.

16.5. Telephone Line Interface

Function:

- **Bell signal detection**
- **ON/OFF hook and pulse dial circuit**
- **Side tone circuit**

Bell signal detection and OFF HOOK circuit:
In the idle mode, Q103 is open to cut the DC loop current and decrease the ring load. When ring voltage appears at the Tip (T)
and Ring (R) leads (When the telephone rings), the AC ring voltage is transferred as follows:
JK1 (3): T → L6 → R144 → IC3D (12,13 → 14) → C97 → R148 → Q20 → IC2 (24) [BELL]

JK1 (2): R → L4 → R120 → R152 → ↑
When the CPU (DSP) detects a ring signal and press the TALK Key on the handset. Q6 turns on and then RY1 turns on,
thus providing an off-hook condition (active DC current flow through the circuit) and the following signal flow is for the loop
current.
T → R160 → L4 → RY1 → R107 → T7 → R116 → D5 → L6 → R161 → R [OFF HOOK]

ON HOOK Circuit:
Q6 is open, RY1 disconnected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an on-hook
condition.

Pulse Dial Circuit:
DSP (Relay) turns RY1 ON/OFF to make the pulse dialing via Q6.

Make/Break ratio when dialing with the Handset: 40%:60%

Side Tone Circuit:
Basically this circuit prevents the TX signal from feeding back to RX signal.
As for this unit, TX signal feed back from Q11 is canceled by the cancellor circuit of AGC.

16.6. Transmitter/Receiver

Base Unit and Handset are mainly consists of RF(Radio Frequency) IC and CPU.
Base Unit and Handset transmit/receive voice signal and data signal through the antenna on carrier frequency.

Signal Pass :
***Refer to CDL TX/RX in Signal Route ().**

16.6.1. Base to Handset

Circuit Operation:

The voice signal input from the TEL LINE interface goes to RF IC as shown in
BLOCK DIAGRAM (BASE UNIT) ().
In the talk mode (off-hook) condition, the telephone line voice signal passes through D2, D3, D4, D5, RY1 (Relay), R107 and T7.
The other party's voice signal is coupled with T7 and amplified by Q11 and led to IC3-B (OP

Amplifier device).
And the signal goes through the compressor of RF IC, it is output to transmitter circuit.
The signal of the data sent to the handset is applied in the anode of the variable capacitor diode (VARICAP : DV1).
The capacitor of VARICAP is changing in accordance with the voice signal from telephone line interface or TX DATA signal from
CPU. Therefore, the carrier frequency which is generated by TXVCO will be changing, and Frequency modulated RF
signal is generated and amplified by RF AMP(Q3, Q4, T5). It pass through the Duplexer DPX1 and radiated from Antenna.

The signal is transmitted from the base unit and received by the handset antenna and amplified by RF amplifier (Q1) through
DPX1 as shown in BLOCK DIAGRAM (HANDSET) (). And then it is converted to 10.7 MHz and 455 KHz Intermediate frequency by RF IC and related components.
The demodulated audio signal is output from RF IC (DET OUT) and passed through "Expander" process to reduce noise, then
voice signal amplified by "Receiver amplifier" is output to receiver (REC1).
The receiver loudness is adjustable using "LOUD" key on the handset. Q2 and Q3 control the volume. When CPU (VOL1)
becomes low, the volume becomes "MID", while CPU (VOL1, 2) become low, the volume becomes "HIGH".

TX data (to Handset)
CPU (VTX) becomes low to turn on the transmission power transistor Q2, and CPU (TX-data) sends data signal. It is
FM-modulated by TXVCO and driven by RF AMP, then transmitted to the handset.

16.6.2. Handset to Base

Circuit Operation:
The voice signal from the handset user is picked up by the microphone (MC1), voice signal passes through "Compressor"
process to reduce noise as shown in BLOCK DIAGRAM (HANDSET) (). And the voice is FM-modulated by
VARICAP (DV1).
The carrier frequency is generated by TX VCO. The transmitter power transistor Q4 is turned on/off by CPU (VTX).
The carrier signal is amplified by RF AMP and sent to the handset duplexer and antenna.
The signal of 49MHz band (49.670~49.99MHz) which is input from ANT is filtered at DPX1 as shown in
BLOCK DIAGRAM (BASE UNIT) (), then it is input to RF IC.
The signal input to RF IC is converted through Mixer inside of RF IC, RF filter (CF1, CF2) and Expander.
The signal is transmitted from the handset and received by the base unit antenna and amplified by RF amplifier Q1, then

it is converted to10.7 MHz and 455 KHz Intermediate by RF IC. The demodulated audio signal is output from RF IC
(DET OUT) and passed through "Expander" process to reduce noise, then voice signal is led to LINE AMP. The signal is
passed through TELEPHONE INTERFACE and Tel-line.

RX data (from Handset):
The data signal from handset (ex: Talk, ACK, COM) is also included in 49 MHz band same as the voice data. After second if
filter, the data signal is made square shape by data limiting AMP of the RF IC. RX data is output to CPU (RX Data).

16.6.3. RF signal operation/control and PLL operation (RF UNIT)

Base unit radio frequency signal received by antenna passes through duplexer (DPX1).
RF signal is amplified by RF AMP. RF signal received from RF IC is mixed with RX local frequency at Mixer to generate
10.7 MHz wide band IF. The reference frequency is generated by X1 10.245 MHz crystal. VC1 is the reference frequency
for adjustment. The 10.7 MHz is mixed with reference and 455KHz narrow band IF is generated. The demodulation audio signal
is adjusted to the maximum at T1. RF IC is controlled by CPU (RF_STB, DATA, CLK). The RX local frequency is generated
by RXVCO.

16.7. Signal Route

Each signal route is as follows.

SIGNAL ROUTE	IN → signal → ROUTE → OUT
CDL TX (to Tel Line)	(HANDSET) MIC - C45 - R30 - R29 - IC1 (14) - IC1 (11) - R25 - R26 - IC1 (10) - IC1 (9) - C49 - R41 - R45 - C53 - T6 - C57 - Q6 - C60 - Q5 - T5 - DPX1 - L1 - ANTENNA - To BASE UNIT (BASE UNIT) From HANDSET - ANTENNA - L1 - DPX1 - Q1 - T2 - C19 - IC1 (40) - IC1 (38) - CF1 - IC1 (36) - IC1 (34) - CF2 - IC1 (32) - IC1 (27) - R4 - C28 - R21 - IC1 (15) - IC1 (17) - C32 - R18 - Q11 - T7 - R116 - D3 - L4 - FS1 - TIP : JK1 (2) D5 - L6 - RING : JK1 (3)
CDL RX (from Tel Line)	(BASE UNIT) JK1 (2): TIP - FS1 - L4 - D3 JK1 (3): RING - L6 - D5 — R116 - T7 - R119 - C92 - R141 - C77 - C44 - R26 - IC1 (14) - IC1 (11) - R23 - R24 - IC1 (10) - IC1 (9) - C48 - R38 - R44 - C52 - T6 - C57 - Q5 - C56 - Q4 - C60 - Q3 - T5 - C46 - DPX1 - L1 - ANTENNA - to HANDSET (HANDSET) from BASE UNIT - ANTENNA - L1 - DPX1 - Q1 - T3 - C17 - IC1 (40) - IC1 (38) - CF1 - IC1 (36) - IC1 (34) - CF2 - IC1 (32) - IC1 (27) - R3 - C33 - R23 - IC1 (15) - IC1 (17) - C32 - R18 - C30 - R16 - IC1 (18) - IC1 (19) - REC1 - IC1 (20) - REC1

17. CIRCUIT OPERATION (HANDSET)

17.1. Reset Circuit (Handset)

The power of handset is supplied by battery.
Whenever the battery is recharged or inserted, the impulse at CHG+ becomes Reset signal through Q11, and sent to CPU.

Fig. 4

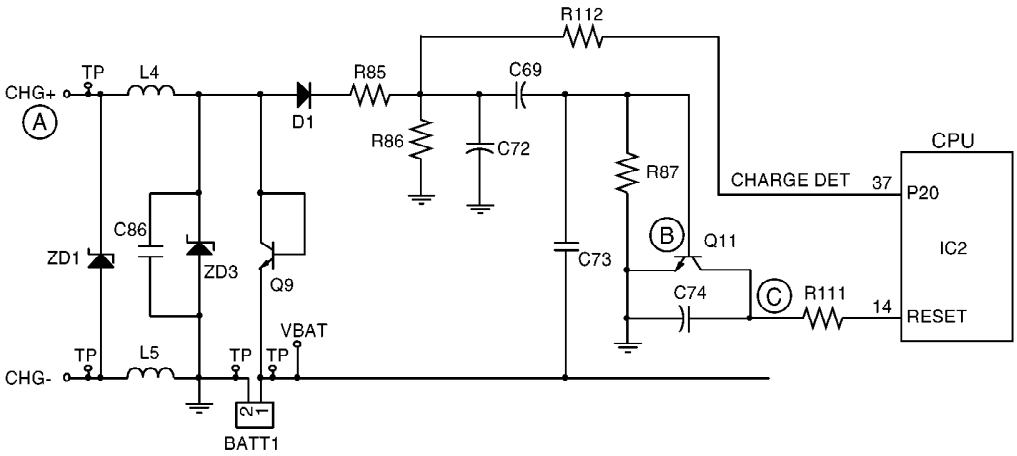

Fig. 5

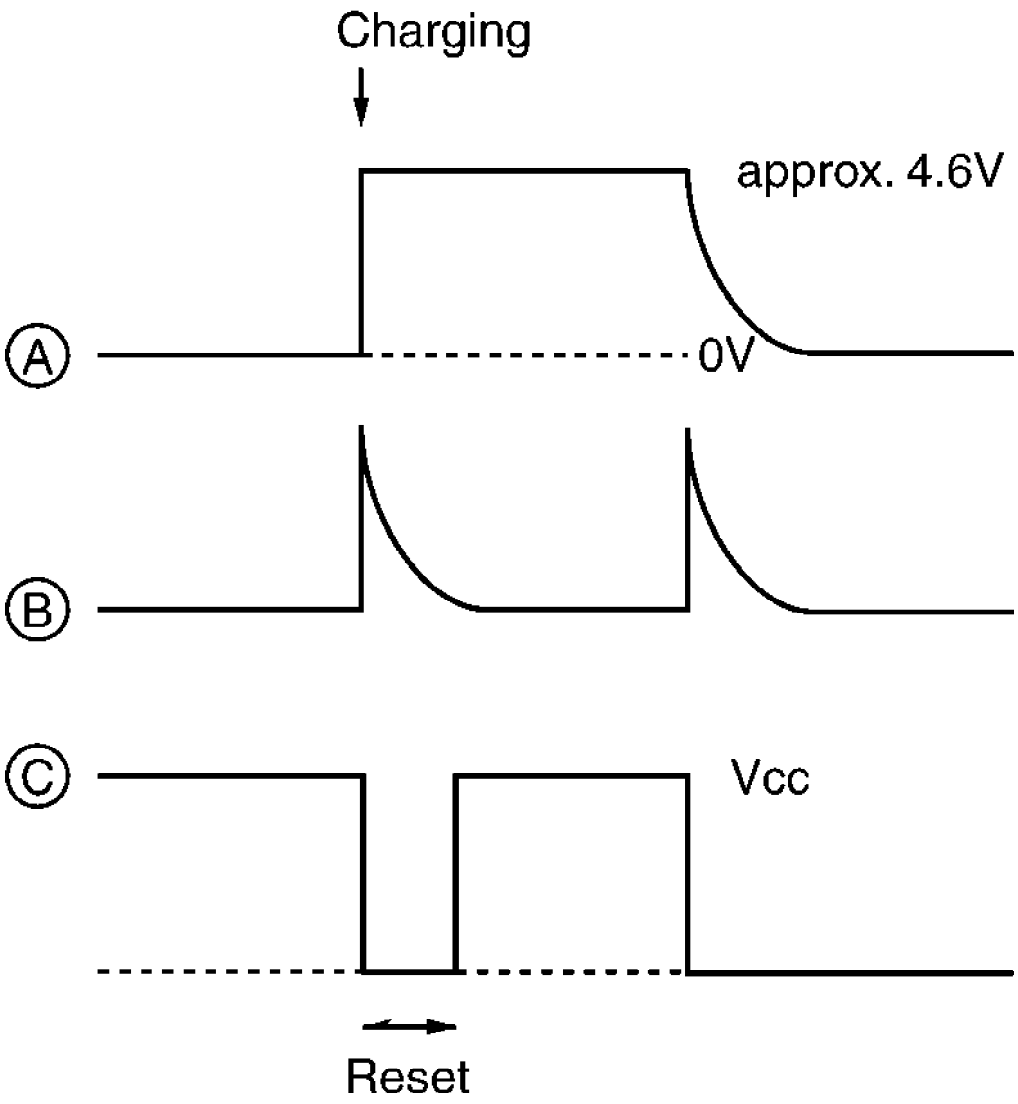

17.2. Battery Low / Power Down Detector

Circuit Operation:
"Battery Low" and "Power Down" are detected by RF IC which check the voltage from battery. Shortly, every detected blocks are inside of RF IC. The detected voltage is as follows;

- Battery Low
Battery voltage : V(Batt) < 3.57V
The CPU detects this level and "Recharge battery" LED starts flashing.
- Power Down
Battery voltage : V(Batt) < 3.3V
The output of RF IC (P-DOWN) becomes low level, then CPU stops working to keep the data (CH number, ID Code, etc.)

Fig. 6

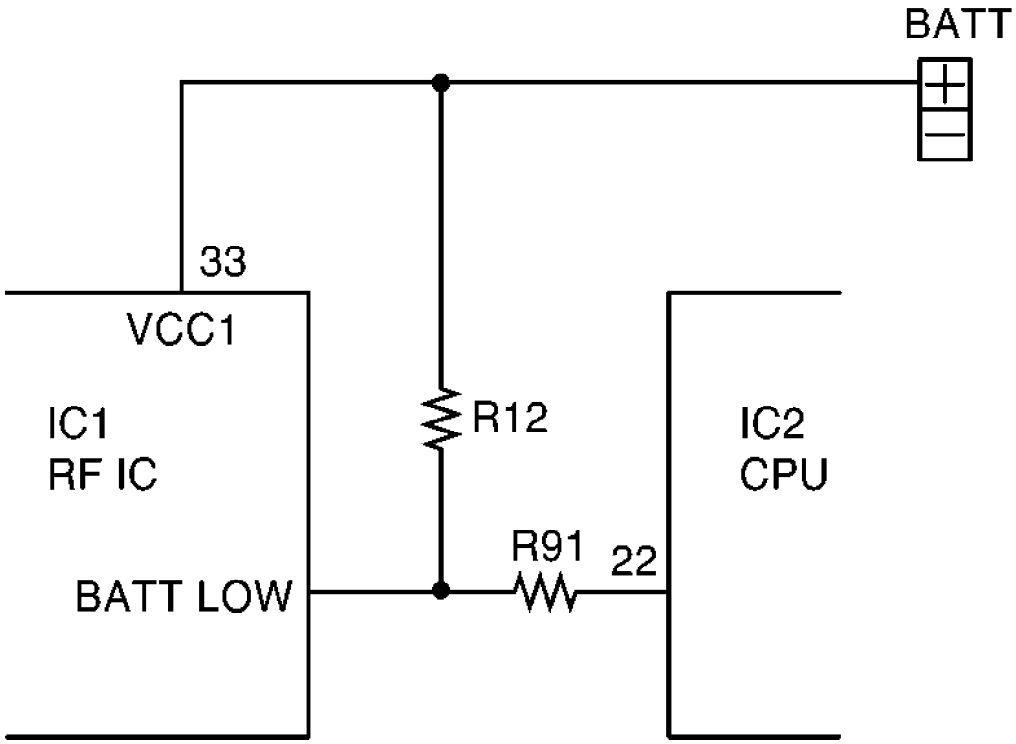

18. CPU DATA (Base Unit)

18.1. IC2

Pin	Description	I/O	High	Hi-z	Low
1	NC	A.O	-	-	-
2	NC	A.I	-	-	-
3	NC	D.I	-	-	-
4	PWRDET	D.I	Active	-	Normal
5	DTMF4	D.O	Active	-	Normal
6	DTMF3	D.O	Active	-	Normal
7	DTMF2	D.O	Active	-	Normal
8	DTMF1	D.O	Active	-	Normal
9	DTMF0	D.O	Active	-	Normal
10	RXD	D.I	-	-	-
11	COUNT0	D.I	-	-	-
12	ASTB	D.O	Active	-	Normal
13	ADAT	D.O	-	-	Normal
14	NC	-	-	-	-
15	ACLK	D.O	-	-	Normal
16	PULSEMUTE	D.O	Active	-	Normal
17	TXD	D.O	Active	Normal	Active
18	CHGDET	D.I	Active	-	Normal
19	CNDET	D.I	Active	-	Normal
20	VTX	D.O	Normal	-	Active
21	HOOK	D.O	Active	-	Normal
22	PAGE	D.I	Normal	-	Active
23	COUNT1	D.I	-	-	-
24	RINGDET	D.I	-	-	-
25	CHARG-CNT	D.O	Normal	-	Active
26	LINELED	D.O	Normal	-	Active
27	NC	D.I	-	-	-
28	NC	-	-	-	-

19. CPU DATA (Handset)

19.1. IC2

Pin	Description	I/O	High	Hi-z	Low
1	ADAT	D.O	-	-	Normal
2	ACLK	D.O		-	Normal
3	VTX	D.O	Normal	-	Active
4	RXD	D.I	-	-	-
5	BACKLED	D.O	Active	-	Normal
6	LINELED	D.O	Normal	-	Active
7	LOWLED	D.O	Normal	-	Active
8	ROW3	D.I	Normal	-	Active
9	ROW2	D.I	Normal	-	Active
10	ROW1	D.I	Normal	-	Active
11	ROW0	D.I	Normal	-	Active
12	NC	D.O	Normal	-	-
13	NC	D.I	-	-	Normal
14	RESET	D.I	Normal	-	Reset
15	fc	A.I	-	-	-
16	fc	A.O	-	-	-
17	GND	-	-	-	-
18	VDD	A.I	-	-	-
19	OPTION 0	D.I	-	-	-
20	OPTION 1	D.I	-	-	-
21	OPTION 2	D.I	-	-	-
22	BATTDET	D.I	Active	-	Normal
23	CRDET	D.I	Active	-	Normal
24	NC	D.O	Normal	-	-
25	NC	D.O	Normal	-	-
26	NC	D.O	Normal	-	-
27	NC	D.O	Normal	-	-
28	NC	D.O	Normal	-	-
29	COL 0	D.O	Normal	-	Active
30	COL 1	D.O	Normal	-	Active
31	COL 2	D.O	Normal	-	Active
32	ALERT	D.O	Normal	-	Active
33	COL 3	D.O	Normal	-	Active
34	COL 4	D.O	Normal	-	Active
35	COL 5	D.O	Normal	-	Active
36	TXD	D.O	Active	Normal	Active
37	CHGDET	D.I	Active	-	Normal
38	fs	A.I	-	-	-
39	fs	A.O	-	-	-
40	NC	-	-	-	-
41	RINGVOL	D.O	Active	-	Normal
42	VOL 0	D.O	Active	-	Normal
43	VOL 1	D.O	Active	-	Normal
44	ASTB	D.O	Active	-	Normal

20. HOW TO REPLACE FLAT PACKAGE IC

20.1. Preparation

- SOLDER

Sparkle Solder 115A-1, 115B-1 or Almit Solder KR-19, KR-19RMA

- Soldering iron

Recommended power consumption will be between 30 W to 40 W.
Temperature of Copper Rod 662 ± 50°F (350 ± 10°C)
(An expert may handle between 60 W to 80 W iron, but beginner might damage foil by overheating.)

- Flux

HI115 Specific gravity 0.863.
(Original flux will be replaced daily.)

20.2. Procedure

1. Temporary fix FLAT PACKAGE IC by soldering on two marked 2 pins.

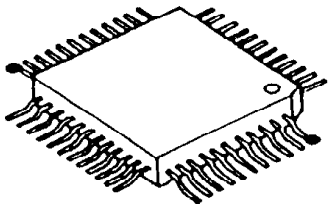

● – – – – – –Temporary soldering point.

***Most important matter is accurate setting of IC to the corresponding soldering foil.**

2. Apply flux for all pins of FLAT PACKAGE IC.

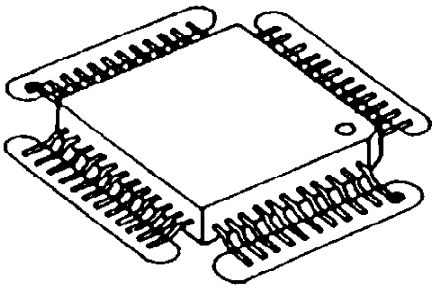

– – – – – – Flux

3. Solder employing specified solder to direction of arrow, as sliding the soldering iron.

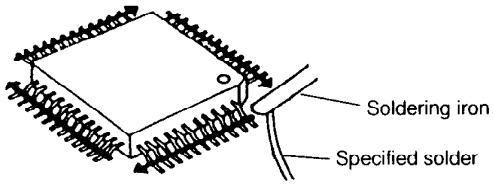

20.3. Modification Procedure of Bridge

1. **Re-solder slightly on bridged portion.**
2. **Remove remained solder along pins employing soldering iron as shown in below figure.**

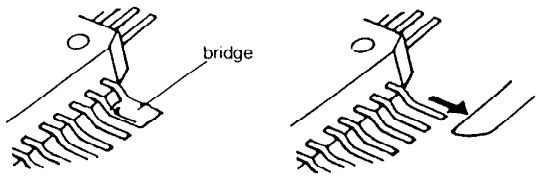

21. CABINET AND ELECTRICAL PARTS LOCATION (BASE UNIT)

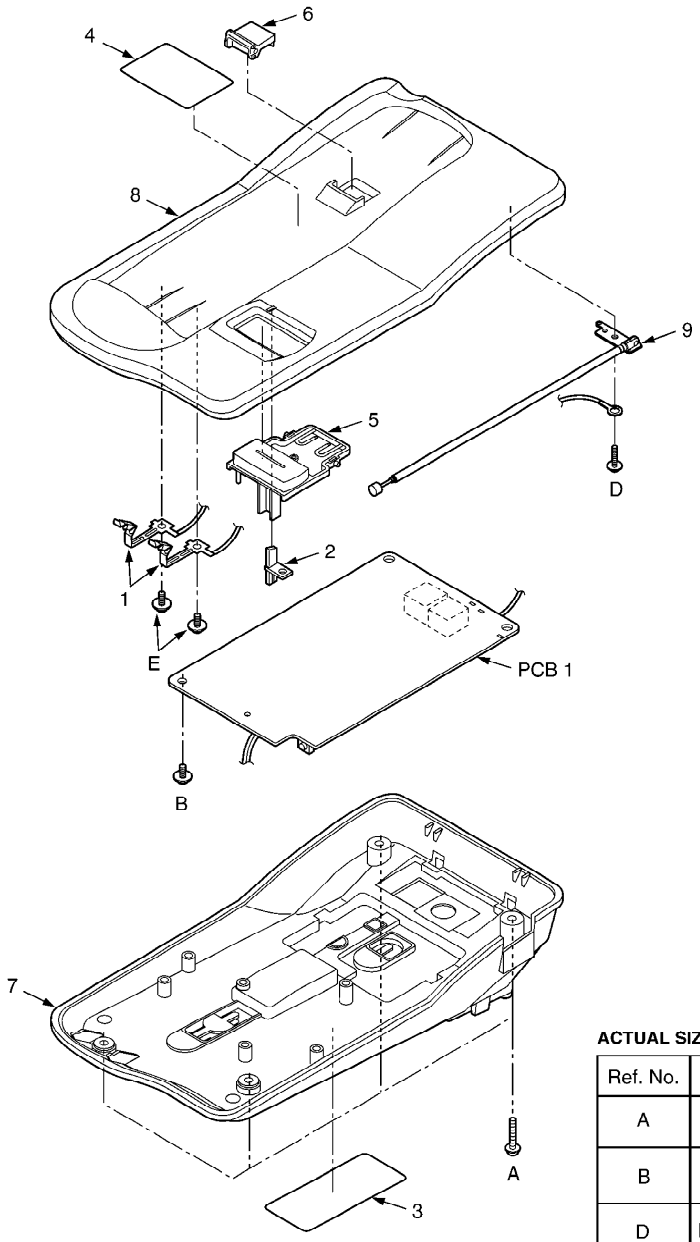

ACTUAL SIZE OF SCREWS

Ref. No.	Part No.	Screw
A	MABOG261247	
B	MABOG260640	
D	MABOE261244	
E	MABOG260640	

22. CABINET AND ELECTRICAL PARTS LOCATION (HANDET)

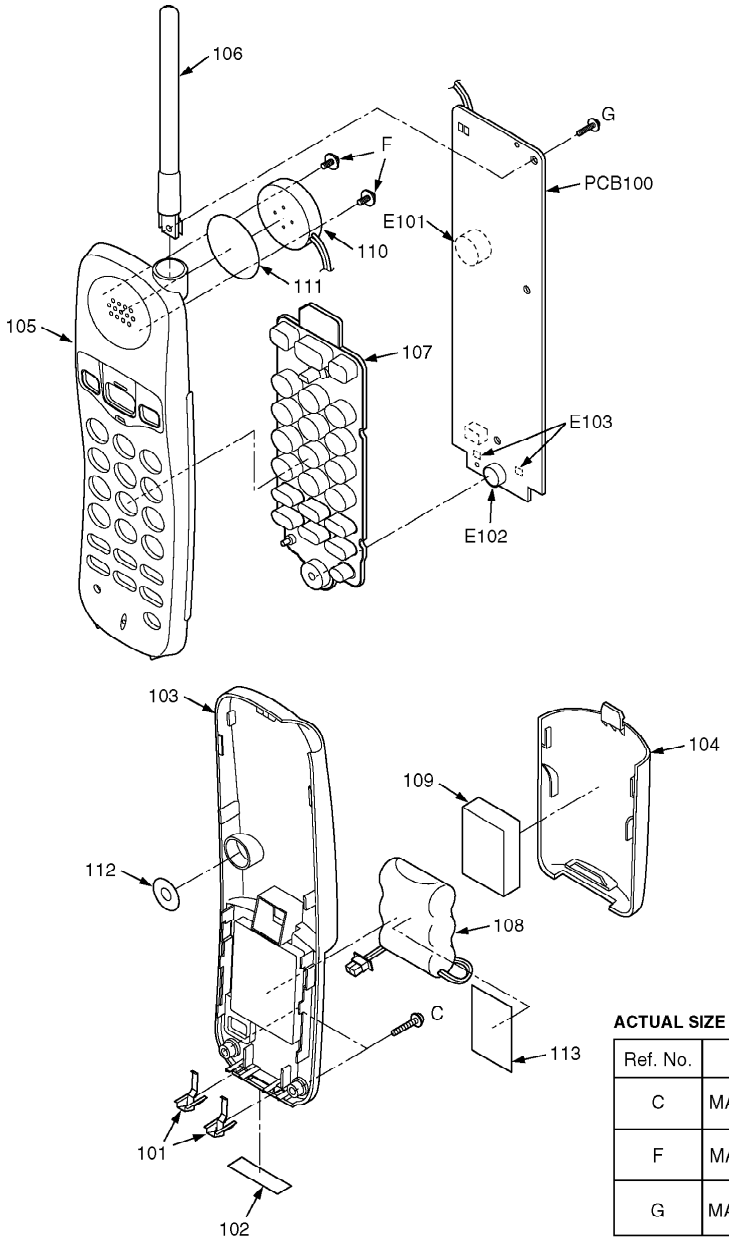

ACTUAL SIZE OF SCREWS

Ref. No.	Part No.	Screw
C	MABOG261247	
F	MABOG260640	
G	MABOE261244	

23. ACCESSORIES AND PACKING MATERIALS

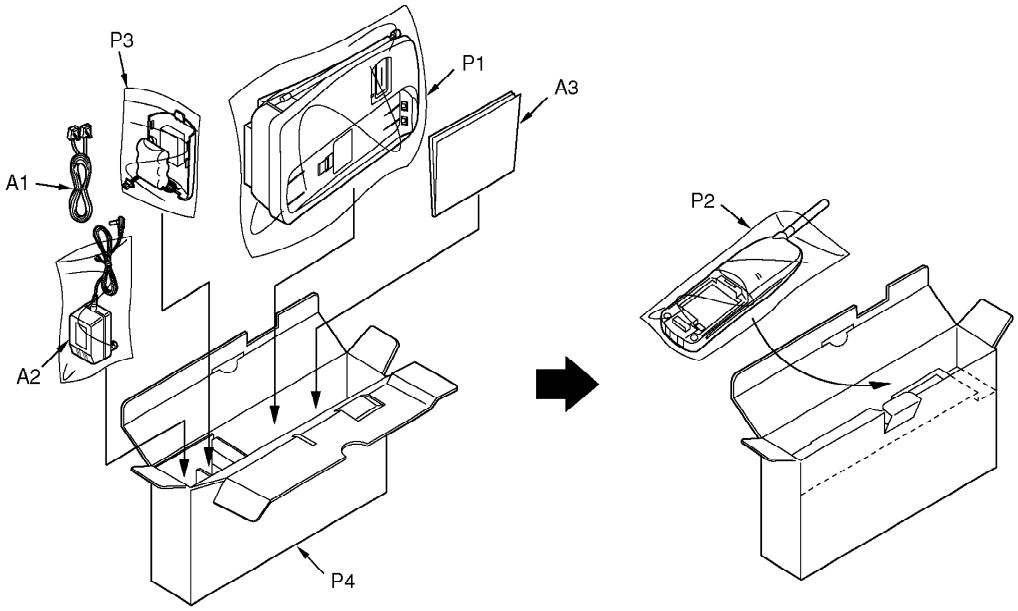

24. REPLACEMENT PARTS LIST

Note:

1. RTL (Retention Time Limited)

The marking (RTL) indicates that the Retention Time is limited for this item.

After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability depends on the type of assembly and the laws governing parts and product retention.

At the end of this period, the assembly will no longer be available.

2. Important safety notice

Components identified by the ⚠ mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

3. The S mark indicates service standard parts and may differ from production parts.

4. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms (Ω) K=1000 Ω , M=1000k Ω

All capacitors are in MICRO FARADS (μ F) P= μ μ F

***Type & Wattage of Resistor**

Type

ERC:Solid ERD:Carbon PQRD:Carbon	ERX:Metal Film ERG:Metal Oxide ER0:Metal Film	PQ4R:Carbon ERS:Fusible Resistor ERF:Cement Resistor

Wattage

10,16:1/8W	14,25:1/4W	12:1/2W	1:1W	2:2W	3:3W

*Type & Voltage of Capacitor

Type

ECFD:Semi-Conductor ECQS:Styrol PQCUV:Chip ECQMS:Mica	ECCD,ECKD,ECBT,PQCBC : Ceramic ECQE,ECQV,ECQG : Polyester ECEA,ECSZ : Electrolytic ECQP : Polypropylene

Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type	Others	
1H: 50V 2A:100V 2E:250V 2H:500V	05: 50V 1:100V 2:200V	0F:3.15V 1A:10V 1V:35V 0J:6.3V	0J :6.3V 1A :10V 1C :16V 1E,25:25V	1V :35V 50,1H:50V 1J :63V 2A :100V

24.1. Base Unit

24.1.1. CABINET AND ELECTRICAL PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
1	PQJT10180Z	CHARGE TERMINAL	
2	PQHR10882Z	LED LENS	
3	PQGT15030Z	NAME LABEL (for KX-TC1206TWB)	
3	PQGT15015Z	NAME LABEL (for KX-TC1206TWS)	
3	PQGT15016Z	NAME LABEL (for KX-TC1206TWF)	
3	PQGT15248Z	NAME LABEL (for KX-TC1206TWP)	
4	PQQT22331Z	CHARGE LABEL	
5	PQBC10349Z1	PUSH BUTTON (for KX-TC1206TWB)	S
5	PQBC10349Z2	PUSH BUTTON (for KX-TC1206TWS/KX-TC1206TWF/KX-TC1206TWP)	S
6	PQKE10335Z1	HOOK LEVER (for KX-TC1206TWB)	S
6	PQKE10335Z4	HOOK LEVER (for KX-TC1206TWS)	S
6	PQKE10335Z2	HOOK LEVER (for KX-TC1206TWF)	S
6	PQKE10335Z6	HOOK LEVER (for KX-TC1206TWP)	S
7	PQKF10534Y1	LOWER CABINET (for KX-TC1206TWB/KX-TC1206TWF)	S
7	PQKF10534Y2	LOWER CABINET (for KX-TC1206TWS/KX-TC1206TWP)	S
8	PQKM10509U1	UPPER CABINET (for KX-TC1206TWB)	S
8	PQKM10509U4	UPPER CABINET (for KX-TC1206TWS)	S
8	PQKM10509U2	UPPER CABINET (for KX-TC1206TWF)	S
8	PQKM10509U6	UPPER CABINET (for KX-TC1206TWP)	S
9	PQSA10105Y	ANTENNA	

24.1.2. MAIN P.C.BOARD PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
PCB1	PQWPC1206TWH	MAIN P.C. BOARD ASS'Y (RTL)	
		(ICS)	
IC1	SA133122409	IC	
IC2	SA138740518	IC	
IC3	SA110032403	IC	
		(TRANSISTORS)	
Q1	BB230024104	TRANSISTOR(SI)	
Q2	SB010390608	TRANSISTOR(SI)	
Q3	SB110390405	TRANSISTOR(SI)	
Q4	SB110390405	TRANSISTOR(SI)	
Q5	SB110390405	TRANSISTOR(SI)	
Q6	SB110390405	TRANSISTOR(SI)	
Q7	SB110390405	TRANSISTOR(SI)	
Q8	SB110390405	TRANSISTOR(SI)	
Q9	SB110390405	TRANSISTOR(SI)	
Q11	SB110390405	TRANSISTOR(SI)	
Q13	SB110390405	TRANSISTOR(SI)	
Q14	SB010390608	TRANSISTOR(SI)	
Q16	SB110390405	TRANSISTOR(SI)	
Q17	SB110390405	TRANSISTOR(SI)	
Q18	BB1G0390403	TRANSISTOR(SI)	
Q19	BB1G0390403	TRANSISTOR(SI)	
Q20	SB110390405	TRANSISTOR(SI)	
Q21	SB110390405	TRANSISTOR(SI)	
		(DIODES)	
D1	SC15L414808	DIODE(SI)	
D2	BC2G0400400	DIODE(SI)	
D3	BC2G0400400	DIODE(SI)	
D4	BC2G0400400	DIODE(SI)	
D5	BC2G0400400	DIODE(SI)	
D6	BC2G0400400	DIODE(SI)	
DV1	BC6K0025101	DIODE(SI)	
ZD1	BC050474801	DIODE(SI)	
ZD10	SC4555C1506	DIODE(SI)	
ZD11	SV110201203	DIODE(SI)	
ZD2	BC050474801	DIODE(SI)	
ZD3	SC4555C4V71	DIODE(SI)	
ZD5	SC4555C4V71	DIODE(SI)	
ZD8	BC4579C5V65	DIODE(SI)	
ZNR1	VA107D271K1	DIODE(SI)	
		(LED)	
LED1	SC5E0192115	LED	
		(COILS)	
L1	PQLQZK1R5J	COIL	
L3	PQLQZM120K	COIL	
L4	PQLQZK330J	COIL	
L5	PQLQZK120J	COIL	
L6	PQLQZK330J	COIL	
L7	PQLQZK120J	COIL	
L8	PQLQZK120J	COIL	
L10	PQLQZKR68J	COIL	
L11	PQLQZM120K	COIL	
DPX1	BDFL0254305	COIL	
		(CONNECTORS)	

Ref. No.	Part No.	Part Name & Description	Remarks
JK1	DC72P120018	JACK/SOCKET	
JK2	DC71P120023	JACK/SOCKET	
		(CERAMIC CAPACITORS)	
C76	CATZ681KC68	CERAMIC CAPACITOR	
C80	CATZ681KC68	CERAMIC CAPACITOR	
C95	CB114714205	CERAMIC CAPACITOR	
		(CERAMIC FILTERS)	
CF1	BDFL107MA53	CERAMIC FILTER	
CF2	BDFL0455E02	CERAMIC FILTER	
		(CRYSTAL OSCILLATORS)	
X1	BD1R1024504	CRYSTAL OSCILLATOR	
X2	BDRR0800005	CRYSTAL OSCILLATOR	
		(TRANSFORMERS)	
T1	CLIP1200053	TRANSFORMER	
T2	CLIP1200037	TRANSFORMER	
T5	CLIP1200029	TRANSFORMER	
T6	CLIP1200045	TRANSFORMER	
T7	DG0P1200019	TRANSFORMER	
		(OTHERS)	
D7	PQVDDSP272M	VARISTOR	
R107	CQ63110RJ21	VARIABLE RESISTOR	
RY1	DCR000105H7	RELAY	
SW1	DETP1200017	PUSH SWITCH	
VC1	CR00020RRT5	TRIMMER CAPACITOR	
		(RESISTORS)	
R1	ERJ3GEYJ470	47	
R2	ERJ3GEYJ331	330	
R3	ERJ3GEYJ153	15k	
R4	ERJ3GEYJ822	8.2k	
R5	ERJ3GEYJ103	10k	
R6	ERJ3GEYJ103	10k	
R7	ERJ3GEYJ334	330k	
R8	ERJ3GEYJ103	10k	
R10	ERJ3GEYJ393	39k	
R12	ERJ3GEYJ101	100	
R13	ERJ3GEYJ513	51k	
R14	ERJ3GEYJ103	10k	
R15	ERJ3GEYJ562	5.6k	
R16	ERJ3GEYJ153	15k	
R17	ERJ3GEY0R00	0	
R18	ERJ3GEYJ222	2.2k	
R19	ERJ3GEYJ124	120k	
R20	ERJ3GEYJ475	4.7M	
R21	ERJ3GEYJ333	33k	
R22	ERJ3GEYJ472	4.7k	
R23	ERJ3GEYJ104	100k	
R24	ERJ3GEYJ103	10k	
R25	ERJ3GEYJ204	200k	
R26	ERJ3GEYJ154	150k	
R30	ERJ3GEYJ104	100k	
R31	ERJ3GEYJ473	47k	
R33	ERJ3GEYJ101	100	
R35	ERJ3GEYJ101	100	
R36	ERJ3GEYJ224	220k	

Ref. No.	Part No.	Part Name & Description	Remarks
R37	ERJ3GEYJ101	100	
R38	ERJ3GEYJ104	100k	
R40	ERJ3GEYJ223	22k	
R41	ERJ3GEYJ223	22k	
R42	ERJ3GEYJ103	10k	
R43	ERJ3GEYJ103	10k	
R44	ERJ3GEYJ104	100k	
R45	ERJ3GEYJ474	470k	
R46	ERJ3GEYJ222	2.2k	
R48	ERJ3GEYJ223	22k	
R50	ERJ3GEYJ822	8.2k	
R51	ERJ3GEYJ182	1.8k	
R52	ERJ3GEYJ475	4.7M	
R53	ERJ3GEYJ153	15k	
R54	ERJ3GEYJ153	15k	
R55	ERJ3GEYJ681	680	
R56	ERJ3GEYJ222	2.2k	
R57	ERJ3GEYJ224	220k	
R58	ERJ3GEYJ511	510	
R59	ERJ3GEYJ104	100k	
R60	ERJ3GEYJ223	22k	
R61	ERJ3GEYJ224	220k	
R62	ERJ3GEYJ104	100k	
R64	ERDS2TJ103	10k	
R68	ERJ3GEYJ104	100k	
R74	ERJ3GEYJ332	3.3k	
R75	ERJ3GEYJ103	10k	
R76	ERJ3GEYJ152	1.5k	
R77	ERJ3GEYJ203	20k	
R78	ERJ3GEYJ393	39k	
R79	ERJ3GEYJ823	82k	
R80	ERJ3GEYJ222	2.2k	
R81	ERJ3GEYJ164	160k	
R82	ERJ3GEYJ103	10k	
R83	ERJ3GEYJ103	10k	
R84	ERJ3GEYJ103	10k	
R85	ERJ3GEYJ103	10k	
R86	ERJ3GEYJ473	47k	
R87	ERJ3GEYJ103	10k	
R88	ERJ3GEYJ103	10k	
R89	ERJ3GEYJ103	10k	
R90	ERJ3GEYJ274	270k	
R91	ERJ3GEYJ154	150k	
R92	ERJ3GEYJ103	10k	
R94	ERJ3GEYJ104	100k	
R95	ERJ3GEYJ392	3.9k	
R96	ERJ3GEYJ274	270k	
R97	ERJ3GEYJ822	8.2k	
R98	ERJ3GEYJ104	100k	
R99	ERJ3GEYJ823	82k	
R100	ERJ3GEYJ104	100k	
R103	ERJ3GEYJ223	22k	
R104	ERJ3GEYJ472	4.7k	
R105	ERJ3GEYJ333	33k	

Ref. No.	Part No.	Part Name & Description	Remarks
R106	ERDS2TJ220	22	
R108	ERJ3GEYJ472	4.7k	
R109	ERJ3GEYJ334	330k	
R111	ERJ3GEYJ681	680	
R114	ERJ3GEYJ223	22k	
R115	ERJ3GEYJ563	56k	
R116	ERJ3GEY0R00	0	
R117	ERJ3GEYJ106	10M	
R118	ERDS1TJ151	150	
R119	ERJ3GEYJ823	82k	
R120	ERJ3GEY0R00	0	
R122	ERJ3GEYJ561	560	
R123	ERJ3GEYJ153	15k	
R126	ERJ3GEYJ561	560	
R127	ERDS2TJ206	20M	
R128	ERDS2TJ206	20M	
R129	ERJ3GEYJ822	8.2k	
R131	ERJ3GEYJ104	100k	
R132	ERJ3GEYJ222	2.2k	
R133	ERJ3GEYJ820	82	
R134	ERJ3GEYJ102	1k	
R139	ERJ3GEYJ106	10M	
R140	ERJ3GEYJ183	18k	
R141	ERJ3GEYJ512	5.1k	
R142	ERDS2TJ220	22	
R143	ERJ3GEYJ514	510k	
R144	ERDS2TJ206	20M	
R145	ERJ3GEYJ102	1k	
R146	ERJ3GEYJ153	15k	
R148	ERJ3GEYJ103	10k	
R149	ERJ3GEYJ182	1.8k	
R150	ERJ3GEYJ514	510k	
R152	ERDS2TJ206	20M	
R153	ERJ3GEYJ104	100k	
R154	ERJ3GEYJ470	47	
R155	ERJ3GEYJ470	47	
R156	ERJ3GEYJ470	47	
R157	ERJ3GEYJ303	30k	
R159	ERJ3GEYJ104	100k	
R160	PQ4R10XJ000	0	S
R161	PQ4R10XJ000	0	S
R166	ERJ3GEYJ470	47	
R167	ERJ3GEYJ103	10k	
R170	ERJ3GEYJ102	1k	
R171	ERJ3GEYJ102	1k	
R172	ERDS2TJ223	22k	
R173	ERDS2TJ102	1k	
R174	ERDS2TJ102	1k	
R176	ERJ3GEY0R00	0	
R177	ERJ3GEYJ104	100k	
R178	ERJ3GEYJ104	100k	
R179	ERJ3GEYJ183	18k	
R180	ERJ3GEYJ563	56k	
		(CAPACITORS)	

Ref. No.	Part No.	Part Name & Description	Remarks
C1	ECEA1EK470	47	S
C2	ECUV1H473MDV	0.047	S
C4	ECUV1H103KBV	0.01	
C6	ECUV1C104ZFV	0.1	
C7	ECUV1H102KBV	0.001	
C8	ECUV1C104ZFV	0.1	
C10	ECUV1H471JCV	470p	
C11	ECUV1H473MDV	0.047	S
C12	ECUV1H102KBV	0.001	
C15	ECEA1HKA2R2	2.2	
C16	ECUV1H270JCV	27p	
C17	ECEA1CKA100	10	
C18	ECUV1C473KBV	0.047	
C19	ECUV1H102KBV	0.001	
C20	ECEA1HKA2R2	2.2	
C22	ECUV1H103KBV	0.01	S
C23	ECUV1H103KBV	0.01	S
C24	ECUV1E223KBV	0.022	
C25	ECUV1H153KBV	0.015	
C26	ECUV1H100DCV	10p	S
C27	ECUV1H103KBV	0.01	
C28	ECUV1H153KBV	0.015	
C29	ECUV1C104KBV	0.1	
C30	ECEA1HKA2R2	2.2	
C31	ECUV1H103KBV	0.01	
C32	ECEA1HU2R2	2.2	
C33	ECUV1H101JCV	100p	
C34	ECUV1H151JCV	150p	
C35	ECUV1H180JCV	18p	
C36	ECUV1H101JCV	100p	
C37	ECUV1H151JCV	150p	
C38	ECEA1HU100	10	S
C39	ECUV1H103KBV	0.01	S
C40	ECUV1H270JCV	27p	
C41	ECEA1AU470	47	
C42	ECEA1HU2R2	2.2	
C43	ECUV1C104KBV	0.1	
C44	ECUV1H472KBV	0.0047	
C45	ECUV1H333KDV	0.033	S
C46	ECUV1H102KBV	0.001	
C47	ECUV1H103KBV	0.01	S
C48	ECUV1H223KBV	0.022	S
C49	ECUV1H103KBV	0.01	S
C50	ECEA1HU220	22	S
C51	ECUV1H103KBV	0.01	S
C52	ECUV1H223KBV	0.022	S
C53	ECUV1H120JCV	12p	
C54	ECUV1H050CCV	5p	
C55	ECUV1H103KBV	0.01	S
C56	ECUV1H050CCV	5p	
C57	ECUV1H390JCV	39p	
C58	ECUV1H682KBV	0.0068	
C59	ECUV1H390JCV	39p	
C60	ECUV1H080CCV	8p	

Ref. No.	Part No.	Part Name & Description	Remarks
C61	ECUV1C104ZFV	0.1	
C62	ECUV1H390JCV	39p	
C63	ECUV1H103KBV	0.01	S
C64	ECUV1C104ZFV	0.1	
C65	ECUV1H270JCV	27p	
C66	ECEA1AU101	100	
C67	ECUV1H270JCV	27p	
C68	ECEA1HKAR47	0.47	
C69	ECUV1H271JCV	270p	
C70	ECUV1H223KBV	0.022	S
C71	ECUV1C104ZFV	0.1	
C72	ECUV1H223KBV	0.022	S
C73	ECUV1C104ZFV	0.1	
C74	ECUV1C104ZFV	0.1	
C75	ECUV1C473KBV	0.047	
C77	ECUV1H101JCV	100p	
C78	ECEA1AU471	470	
C79	ECUV1E104KBV	0.1	
C82	ECUV1C104ZFV	0.1	
C83	ECUV1H223KBV	0.022	S
C84	ECUV1H103KBV	0.01	
C85	ECUV1C104KBV	0.1	
C86	ECUV1H103KBV	0.01	
C88	ECUV1C104KBV	0.1	
C9	ECUV1H471JCV	470p	
C90	ECUV1C683KBV	0.068	
C92	ECUV1C104KBV	0.1	
C93	ECUV1H562KBV	0.0056	
C94	ECEA1CK101	100	S
C96	ECUV1H103KBV	0.01	S
C97	ECEA1HKS4R7	4.7	S
C98	ECEA1CKS220	22	S
C99	ECUV1H103KBV	0.01	S
C101	ECUV1H562KBV	0.0056	
C102	ECEA1EU221	220	
C103	ECEA1AU470	47	
C104	ECFD1C104KD	0.1	S
C105	ECEA1CK101	100	S
C106	ECUV1A105ZFV	1	
C107	ECUV1C104ZFV	0.1	
C108	ECUV1C104KBV	0.1	
C109	ECUV1H152KBV	0.0015	
C120	ECUV1H103KBV	0.01	S
C121	ECUV1H103KBV	0.01	S

24.2. Handset

24.2.1. CABINET AND ELECTRICAL PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
101	PQJT10182Z	CHARGE TERMINAL	
102	PQGT15031Z	NAME LABEL (for KX-TC1206TWB)	
102	PQGT15018Z	NAME LABEL (for KX-TC1206TWS)	
102	PQGT15019Z	NAME LABEL (for KX-TC1206TWF)	
102	PQGT15249Z	NAME LABEL (for KX-TC1206TWP)	
103	PQKF10535Y1	REAR CABINET (for KX-TC1206TWB)	S
103	PQKF10535Y4	REAR CABINET (for KX-TC1206TWS)	S
103	PQKF10535Y2	REAR CABINET (for KX-TC1206TWF)	S
103	PQKF10535Y6	REAR CABINET (for KX-TC1206TWP)	S
104	PQKK10124Z1	BATTERY COVER (for KX-TC1206TWB)	S
104	PQKK10124Z4	BATTERY COVER (for KX-TC1206TWS)	S
104	PQKK10124Z2	BATTERY COVER (for KX-TC1206TWF)	S
104	PQKK10124Z6	BATTERY COVER (for KX-TC1206TWP)	S
105	PQKM10510U1	FRONT CABINET (for KX-TC1206TWB)	S
105	PQKM10510U4	FRONT CABINET (for KX-TC1206TWS)	S
105	PQKM10510U2	FRONT CABINET (for KX-TC1206TWF)	S
105	PQKM10510U6	FRONT CABINET (for KX-TC1206TWP)	S
106	PQSA10084Z	ANTENNA (for KX-TC1206TWB/KX-TC1206TWF)	
106	PQSA10084Y	ANTENNA (for KX-TC1206TWP/KX-TC1206TWS)	
107	PQSX10191R	KEYBOARD SWITCH (for KX-TC1206TWB/KX-TC1206TWF)	
107	PQSX10191T	KEYBOARD SWITCH (for KX-TC1206TWS/KX-TC1206TWP)	
108	PQXA36ASVC	BATTERY	
109	FH1T1200011	CUSHION, URETHANE FORM	
110	CG2P1200012	SPEAKER	
111	FE4T1200019	SP PHONE	
112	FH2T1200012	BUZZER SHEET	
113	PQQT22151Z	RECYCLE LABEL	

24.2.2. MAIN P.C.BOARD PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
PCB100	PQWPC1206TWR	MAIN P.C. BOARD ASS'Y (RTL)	
		(ICS)	
IC1	SA133122409	IC	
IC2	SA138780714	IC	
		(TRANSISTORS)	
Q1	2SK241	TRANSISTOR(SI)	
Q2	SB110390405	TRANSISTOR(SI)	
Q4	SB010390608	TRANSISTOR(SI)	
Q5	SB110390405	TRANSISTOR(SI)	
Q6	SB110390405	TRANSISTOR(SI)	
Q7	SB010390608	TRANSISTOR(SI)	
Q8	SB110390405	TRANSISTOR(SI)	
Q9	SB110390405	TRANSISTOR(SI)	
Q11	SB110390405	TRANSISTOR(SI)	
		(DIODES)	
D1	SC15L414808	DIODE(SI)	
D2	SC15L414808	DIODE(SI)	
D3	SC15L414808	DIODE(SI)	
DV1	BC6K0025101	DIODE(SI)	
ZD1	BC4579C1005	DIODE(SI)	
ZD3	SC455C5V601	DIODE(SI)	
		(LEDS)	

Ref. No.	Part No.	Part Name & Description	Remarks
LED1	SC5E0192115	LED	
LED2	SC5E0192115	LED	
LED3	SC5E0192115	LED	
LED4	SC5E0192115	LED	
LED5	SC5E0192115	LED	
LED6	SC5E0192123	LED	
		(COILS)	
L2	PQLQZM120K	COIL	
L3	PQLQZM120K	COIL	
L4	PQLQZK120J	COIL	
L5	PQLQZK120J	COIL	
L6	PQLQZKR68J	COIL	
L7	SH590121N75	COIL	
DPX1	BDFL0254313	COIL	
		(CONNECTOR)	
BATT1	PQJP2D13Z	CONNECTOR	
		(CERAMIC FILTERS)	
CF1	BDFL107MA53	CERAMIC FILTER	
CF2	BDFL0455E02	CERAMIC FILTER	
		(CERAMIC CAPACITOR)	
L1	ECCD1H120JC3	CERAMIC CAPACITOR	
		(CRYSTAL OSCILLATORS)	
X1	BD5R1024501	CRYSTAL OSCILLATOR	
X2	BD8R3276805	CRYSTAL OSCILLATOR	
X3	BDRR0400007	CRYSTAL OSCILLATOR	
		(TRANSFORMERS)	
T1	CLIP1200053	TRANSFORMER	
T3	CLIP1200169	TRANSFORMER	
T5	CLIP1200061	TRANSFORMER	
T6	CLIP1200088	TRANSFORMER	
		(OTHERS)	
E101	CK15HC12G10	RINGER	
E102	CGAP1200019	MICROPHONE	
E103	EF2T1200022	CHARGE CONTACT	
VC1	CR00020RRT5	TRIMMER CAPACITOR	
		(RESISTORS)	
R1	ERJ3GEYJ331	330	
R2	ERJ3GEYJ153	15k	
R3	ERJ3GEYJ682	6.8k	
R5	ERJ3GEYJ103	10k	
R6	ERJ3GEYJ103	10k	
R8	ERJ3GEYJ224	220k	
R9	ERJ3GEYJ823	82k	
R10	ERJ3GEYJ471	470	
R11	ERJ3GEYJ562	5.6k	
R12	ERJ3GEYJ224	220k	
R13	ERJ3GEYJ683	68k	
R14	ERJ3GEYJ153	15k	
R15	ERJ3GEY0R00	0	
R16	ERJ3GEYJ103	10k	
R17	ERJ3GEYJ682	6.8k	
R18	ERJ3GEYJ103	10k	
R19	ERJ3GEYJ472	4.7k	
R21	ERJ3GEYJ393	39k	

Ref. No.	Part No.	Part Name & Description	Remarks
R23	ERJ3GEYJ563	56k	
R24	ERJ3GEYJ472	4.7k	
R25	ERJ3GEYJ913	91k	
R26	ERJ3GEYJ103	10k	
R28	ERJ3GEYJ394	390k	
R29	ERJ3GEYJ152	1.5k	
R30	ERJ3GEYJ103	10k	
R34	ERJ3GEYJ224	220k	
R35	ERJ3GEYJ473	47k	
R36	ERJ3GEYJ202	2k	
R37	ERJ3GEYJ102	1k	
R38	ERJ3GEYJ470	47	
R39	ERJ3GEYJ224	220k	
R40	ERJ3GEYJ101	100	
R41	ERJ3GEYJ104	100k	
R42	ERJ3GEYJ223	22k	
R43	ERJ3GEYJ104	100k	
R44	ERJ3GEYJ393	39k	
R45	ERJ3GEYJ104	100k	
R46	ERJ3GEYJ474	470k	
R47	ERJ3GEYJ222	2.2k	
R48	ERJ3GEYJ223	22k	
R49	ERJ3GEYJ473	47k	
R50	ERJ3GEYJ822	8.2k	
R51	ERJ3GEYJ272	2.7k	
R52	ERJ3GEYJ222	2.2k	
R53	ERJ3GEYJ820	82	
R54	ERJ3GEYJ104	100k	
R55	ERJ3GEYJ390	39	
R56	ERJ3GEYJ222	2.2k	
R57	ERJ3GEYJ102	1k	
R58	ERJ3GEYJ470	47	
R59	ERJ3GEYJ222	2.2k	
R60	ERJ3GEYJ222	2.2k	
R61	ERJ3GEYJ331	330	
R62	ERJ3GEYJ222	2.2k	
R63	ERJ3GEYJ103	10k	
R64	ERJ3GEYJ103	10k	
R65	ERJ3GEYJ331	330	
R66	ERJ3GEYJ222	2.2k	
R67	ERJ3GEYJ222	2.2k	
R68	ERJ3GEYJ103	10k	
R69	ERJ3GEYJ222	2.2k	
R70	ERJ3GEYJ222	2.2k	
R73	ERJ3GEYJ105	1M	
R74	ERJ3GEYJ104	100k	
R75	ERJ3GEYJ104	100k	
R76	ERJ3GEYJ104	100k	
R77	ERJ3GEYJ103	10k	
R78	ERJ3GEYJ104	100k	
R79	ERJ3GEYJ105	1M	
R80	ERJ3GEYJ105	1M	
R82	ERJ3GEYJ222	2.2k	
R83	ERJ3GEY0R00	0	

Ref. No.	Part No.	Part Name & Description	Remarks
R84	ERJ3GEYJ104	100k	
R85	ERJ3GEYJ102	1k	
R86	ERJ3GEYJ104	100k	
R87	ERJ3GEYJ104	100k	
R91	ERJ3GEY0R00	0	
R93	ERJ3GEYJ103	10k	
R94	ERJ3GEYJ334	330k	
R95	ERJ3GEYJ393	39k	
R96	ERJ3GEYJ470	47	
R97	ERJ3GEYJ154	150k	
R99	ERJ3GEYJ472	4.7k	
R101	ERJ3GEY0R00	0	
R102	ERJ3GEYJ153	15k	
R103	ERJ3GEYJ105	1M	
R105	ERJ3GEYJ103	10k	
R106	ERJ3GEYJ820	82	
R107	ERJ3GEYJ222	2.2k	
R108	ERJ3GEYJ102	1k	
R109	ERJ3GEYJ102	1k	
R110	ERJ3GEYJ102	1k	
R111	ERJ3GEYJ102	1k	
R112	ERJ3GEYJ102	1k	
		(CAPACITORS)	
C1	ECEA1EK470	47	S
C2	ECUV1C473KBV	0.047	
C5	ECUV1C103KBV	0.01	
C6	ECUV1H102KBV	0.001	
C7	ECUV1C103KBV	0.01	
C8	ECUV1C473KBV	0.047	
C9	ECUV1H102KBV	0.001	
C12	ECEA1HKA2R2	2.2	
C13	ECUV1H270JCV	27p	
C14	ECUV1H103KBV	0.01	
C15	ECEA1CKA100	10	
C16	ECUV1C473KBV	0.047	
C17	ECUV1H102KBV	0.001	
C18	ECEA1HKA2R2	2.2	
C21	ECUV1H223KBV	0.022	S
C22	ECUV1H103KBV	0.01	
C23	ECUV1H102KBV	0.001	
C24	ECUV1H120JCV	12p	
C26	ECUV1H103KBV	0.01	
C27	ECUV1C103KBV	0.01	
C28	ECUV1H222KBV	0.0022	
C29	ECEA1HKA2R2	2.2	
C30	ECUV1C103KBV	0.01	
C31	ECUV1H103KBV	0.01	
C32	ECUV1C103KBV	0.01	
C33	ECUV1C103KBV	0.01	
C33	ECUV1H153KBV	0.015	
C34	ECUV1H101JCV	100p	
C35	ECUV1H151JCV	150p	
C36	ECUV1H180JCV	18p	
C37	ECEA1CKA100	10	

Ref. No.	Part No.	Part Name & Description	Remarks
C38	ECUV1H101JCV	100p	
C39	ECUV1H151JCV	150p	
C40	ECUV1H103KBV	0.01	
C41	ECUV1H270JCV	27p	
C42	ECEA1EK470	47	S
C43	ECEA1HKA2R2	2.2	
C44	ECUV1A105ZFV	1	
C45	ECUV1C105KB	1	
C46	ECUV1C473KBV	0.047	
C47	ECUV1H333KBV	0.033	S
C48	ECEA1EK470	47	S
C49	ECUV1H223KBV	0.022	S
C50	ECUV1H103KBV	0.01	
C51	ECEA1CKA100	10	
C52	ECUV1H103KBV	0.01	
C53	ECUV1H223KBV	0.022	S
C54	ECUV1H120JCV	12p	
C55	ECUV1H103KBV	0.01	
C56	ECUV1H050CCV	5p	
C57	ECUV1H150JCV	15p	
C58	ECUV1H103KBV	0.01	
C59	ECUV1H390JCV	39p	
C60	ECUV1H270JCV	27p	
C61	ECUV1C103KBV	0.01	
C62	ECUV1H390JCV	39p	
C63	ECEA1CK101	100	S
C64	ECUV1H103KBV	0.01	
C65	ECUV1H150JCV	15p	
C66	ECUV1H150JCV	15p	
C69	ECUV1C103KBV	0.01	
C70	ECUV1H270JCV	27p	
C71	ECUV1H270JCV	27p	
C72	ECUV1C103KBV	0.01	
C73	ECUV1C103KBV	0.01	
C74	ECUV1C473KBV	0.047	
C75	ECUV1H103KBV	0.01	
C76	ECUV1H471JCV	470p	
C77	ECUV1H471JCV	470p	
C84	ECUV1C103KBV	0.01	
C85	ECUV1A105ZFV	1	
C86	ECUV1C103KBV	0.01	
C88	ECUV1C103KBV	0.01	

24.3. ACCESSORIES AND PACKING MATERIALS

Ref. No.	Part No.	Part Name & Description	Remarks
A1	PQJA10075Z	TEL CORD	
A2	PQLV16TWZ	AC ADAPTOR	⚠
A3	PQQX13177Z	INSTRUCTION BOOK	
P1	PQPP10090Z	POLY BAG (for BASE UNIT)	
P2	PQPP10091Z	POLY BAG (for HANDSET)	
P3	PQPP10092Z	POLY BAG	
P4	PQPK13635Z	GIFT BOX	

25. FOR SCHEMATIC DIAGRAM

25.1. Base Unit (SCHEMATIC DIAGRAM (Base Unit))

1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
2. The schematic diagrams and circuit board may be modified at any time with the development of new technology.

Important Safety Notice: **Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only the manufacturer´s specified parts.**

25.2. Handset (SCHEMATIC DIAGRAM (Handset))

1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
2. The schematic diagrams and circuit board may be modified at any time with the development of new technology.

26. SCHEMATIC DIAGRAM (Base Unit)

26.1. Base Unit

26.2. RF Unit (Base Unit)

27. SCHEMATIC DIAGRAM (Handset)

27.1. Handset

27.2. RF Unit (Handset)

28. CIRCUIT BOARD (Base Unit)

28.1. Component View

28.2. Flow Solder Side View

29. CIRCUIT BOARD (Handset)

29.1. Component View

29.2. Flow Solder Side View

H.M / KXTC1206TWB / KXTC1206TWS / KXTC1206TWF / KXTC1206TWP

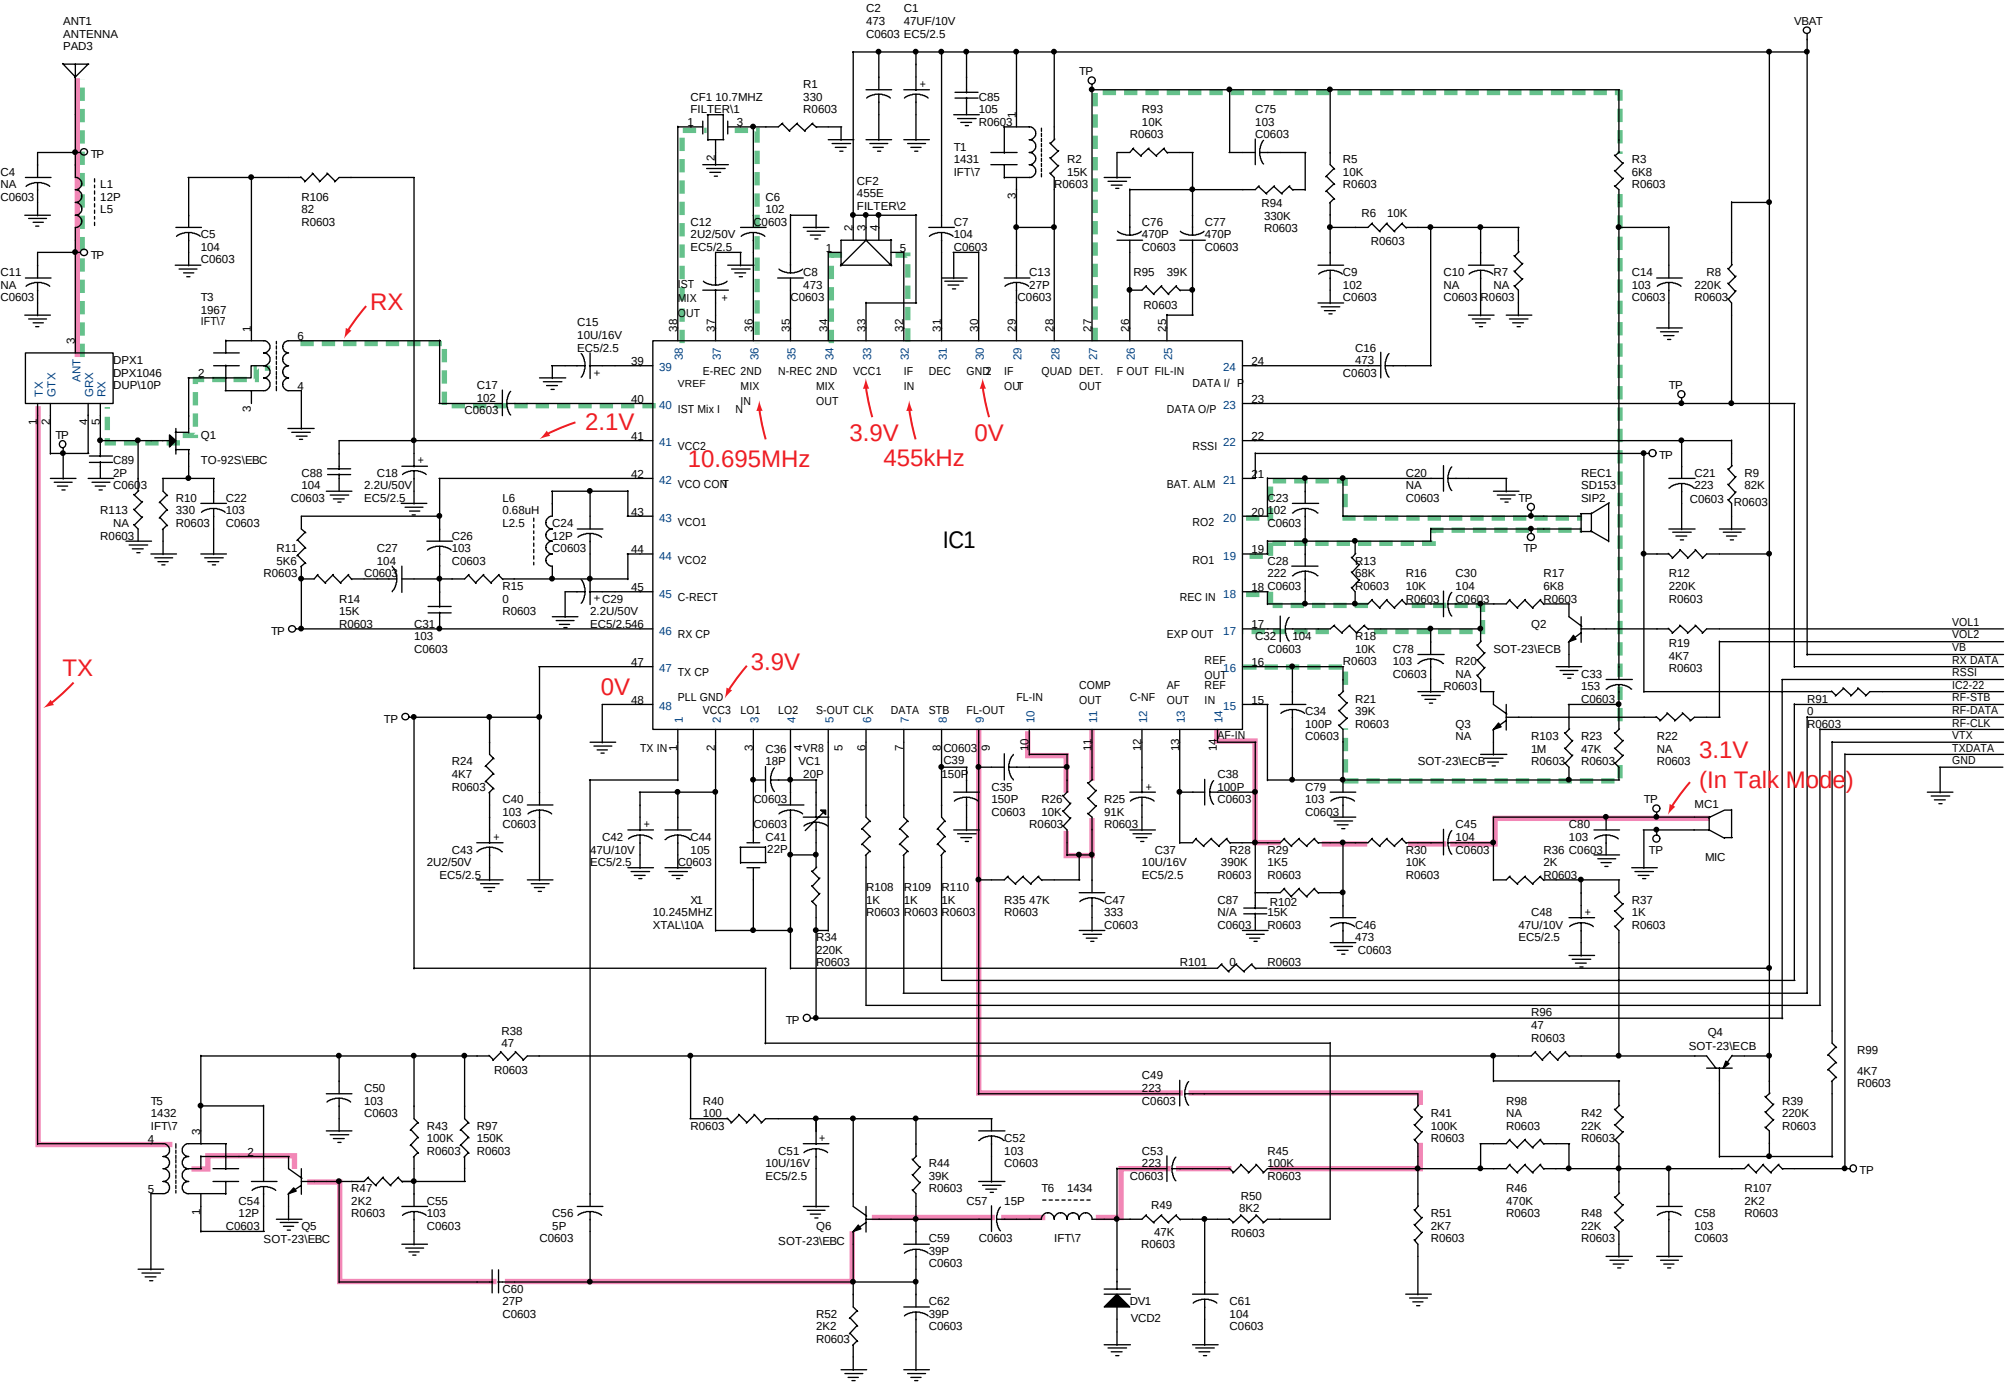
ANT1
ANTENNA
PAD3
VBAT
IC1
RX
TX
2.1V
10.695MHz
3.9V
455kHz
0V
3.9V
0V
3.1V
(In Talk Mode)
MIC
VOL1
VOL2
VB
RX DATA
RSSI
IC2-22
RF-STB
RF-DATA
RF-CLK
VTX
TXDATA
GND

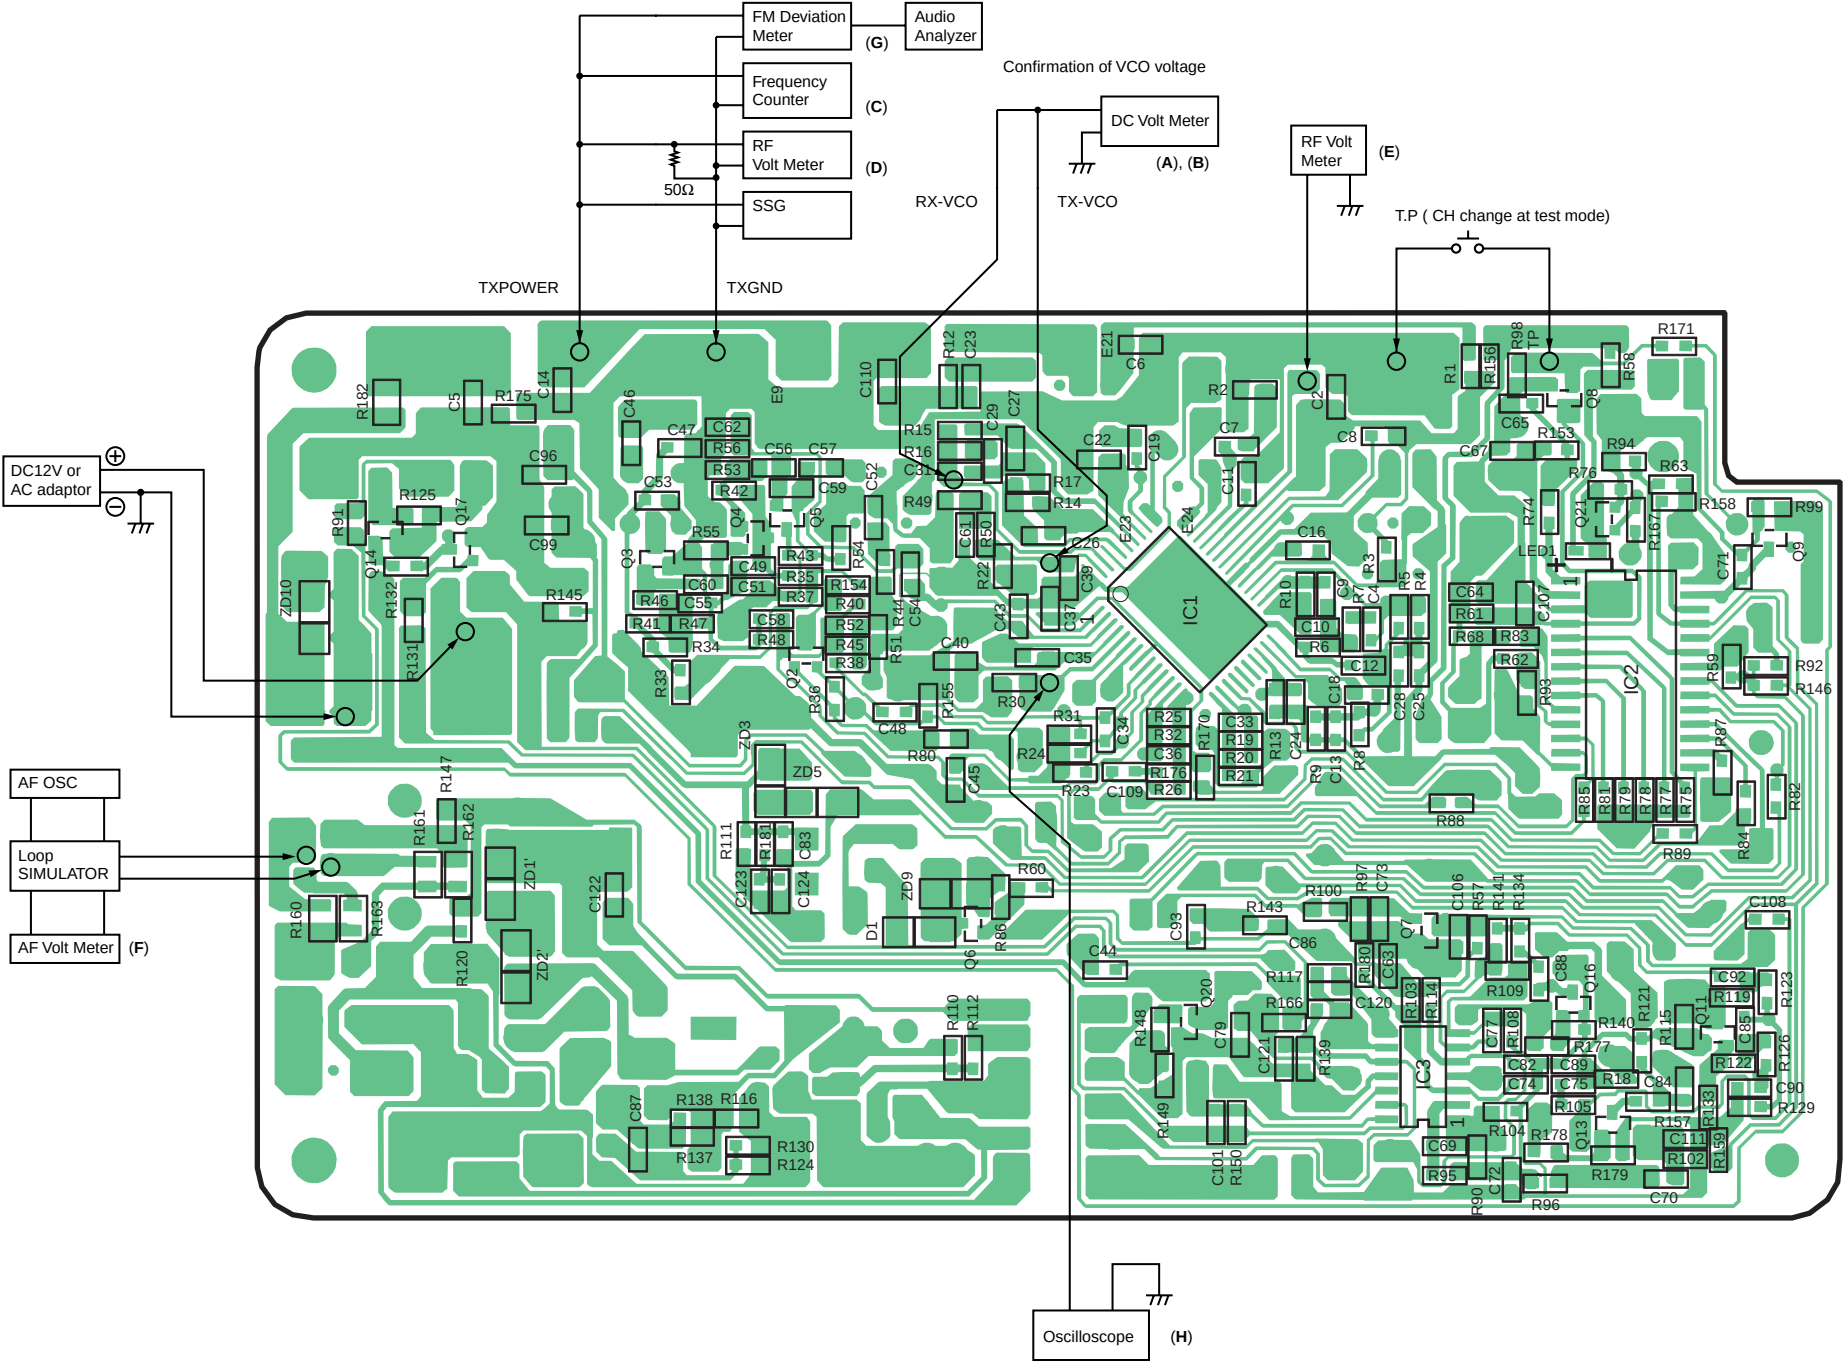
FM Deviation Meter
(G)
Audio Analyzer
Frequency Counter
(C)
RF Volt Meter
(D)
50Ω
SSG
Confirmation of VCO voltage
DC Volt Meter
(A), (B)
RF Volt Meter
(E)
RX-VCO
TX-VCO
T.P (CH change at test mode)
TXPOWER
TXGND
DC12V or AC adaptor
AF OSC
Loop SIMULATOR
AF Volt Meter
(F)
Oscilloscope
(H)
IC1
IC2
IC3

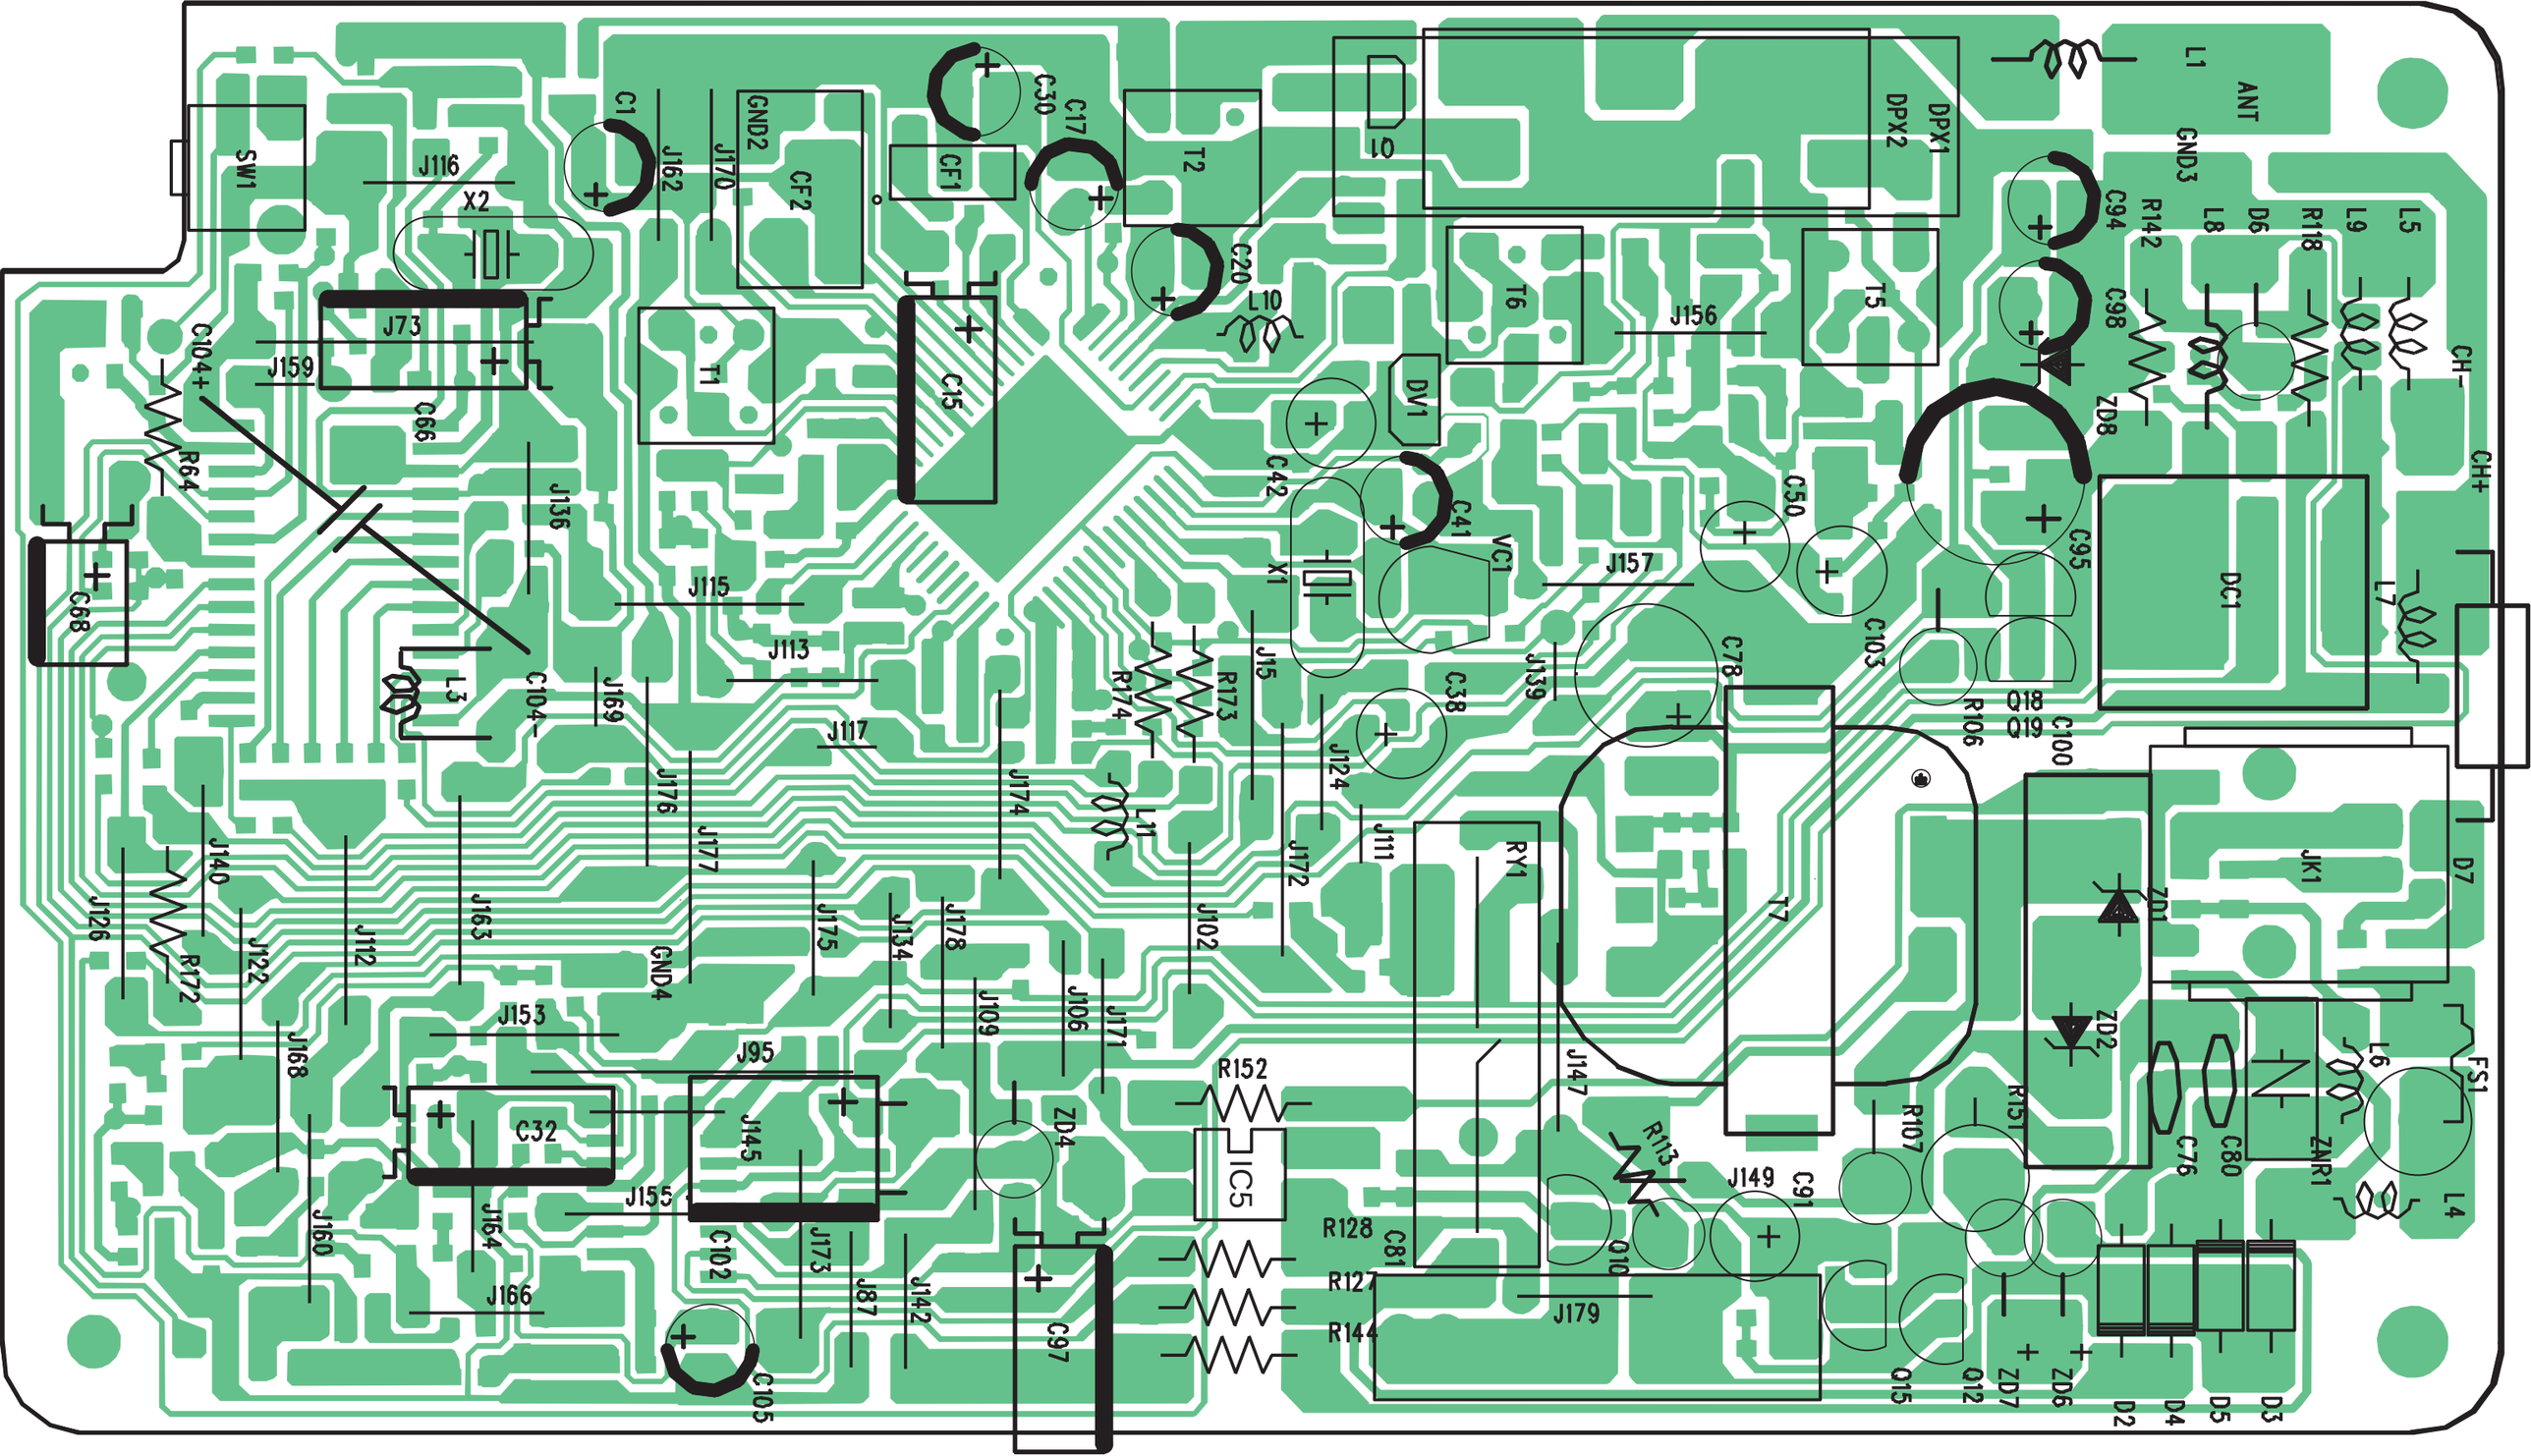
SW1
J116
X2
J73
J159
C104+
R64
C68
C66
T1
C1
J162
J170
GND2
CF2
C30
C17
CF1
T2
C20
L10
C15
J136
J115
J113
L3
C104-
J169
J117
J176
J177
J174
L11
J172
J111
J102
J140
R172
J126
J122
J112
J163
GND4
J175
J134
J178
J109
J106
J171
J153
J95
C32
J145
J155
J164
J160
J168
J166
C102
C105
J173
J87
J142
ZD4
C97
R152
IC5
R128
R127
R144
C81
C42
DV1
C41
VC1
X1
J15
R173
R174
J124
C38
J139
J157
J156
T6
T5
DPX1
DPX2
C50
C103
C78
C95
R106
Q18
Q19
C100
J147
R113
Q10
J149
C91
J179
RY1
T7
R107
R151
Q15
Q12
ZD7
ZD6
D2
D4
D5
D3
ANT
L1
GND3
C94
R142
C98
ZD8
L8
D6
R118
L9
L5
CH-
CH+
L7
DC1
ZD1
ZD2
JK1
D7
L6
FS1
ZNR1
C80
C76
L4

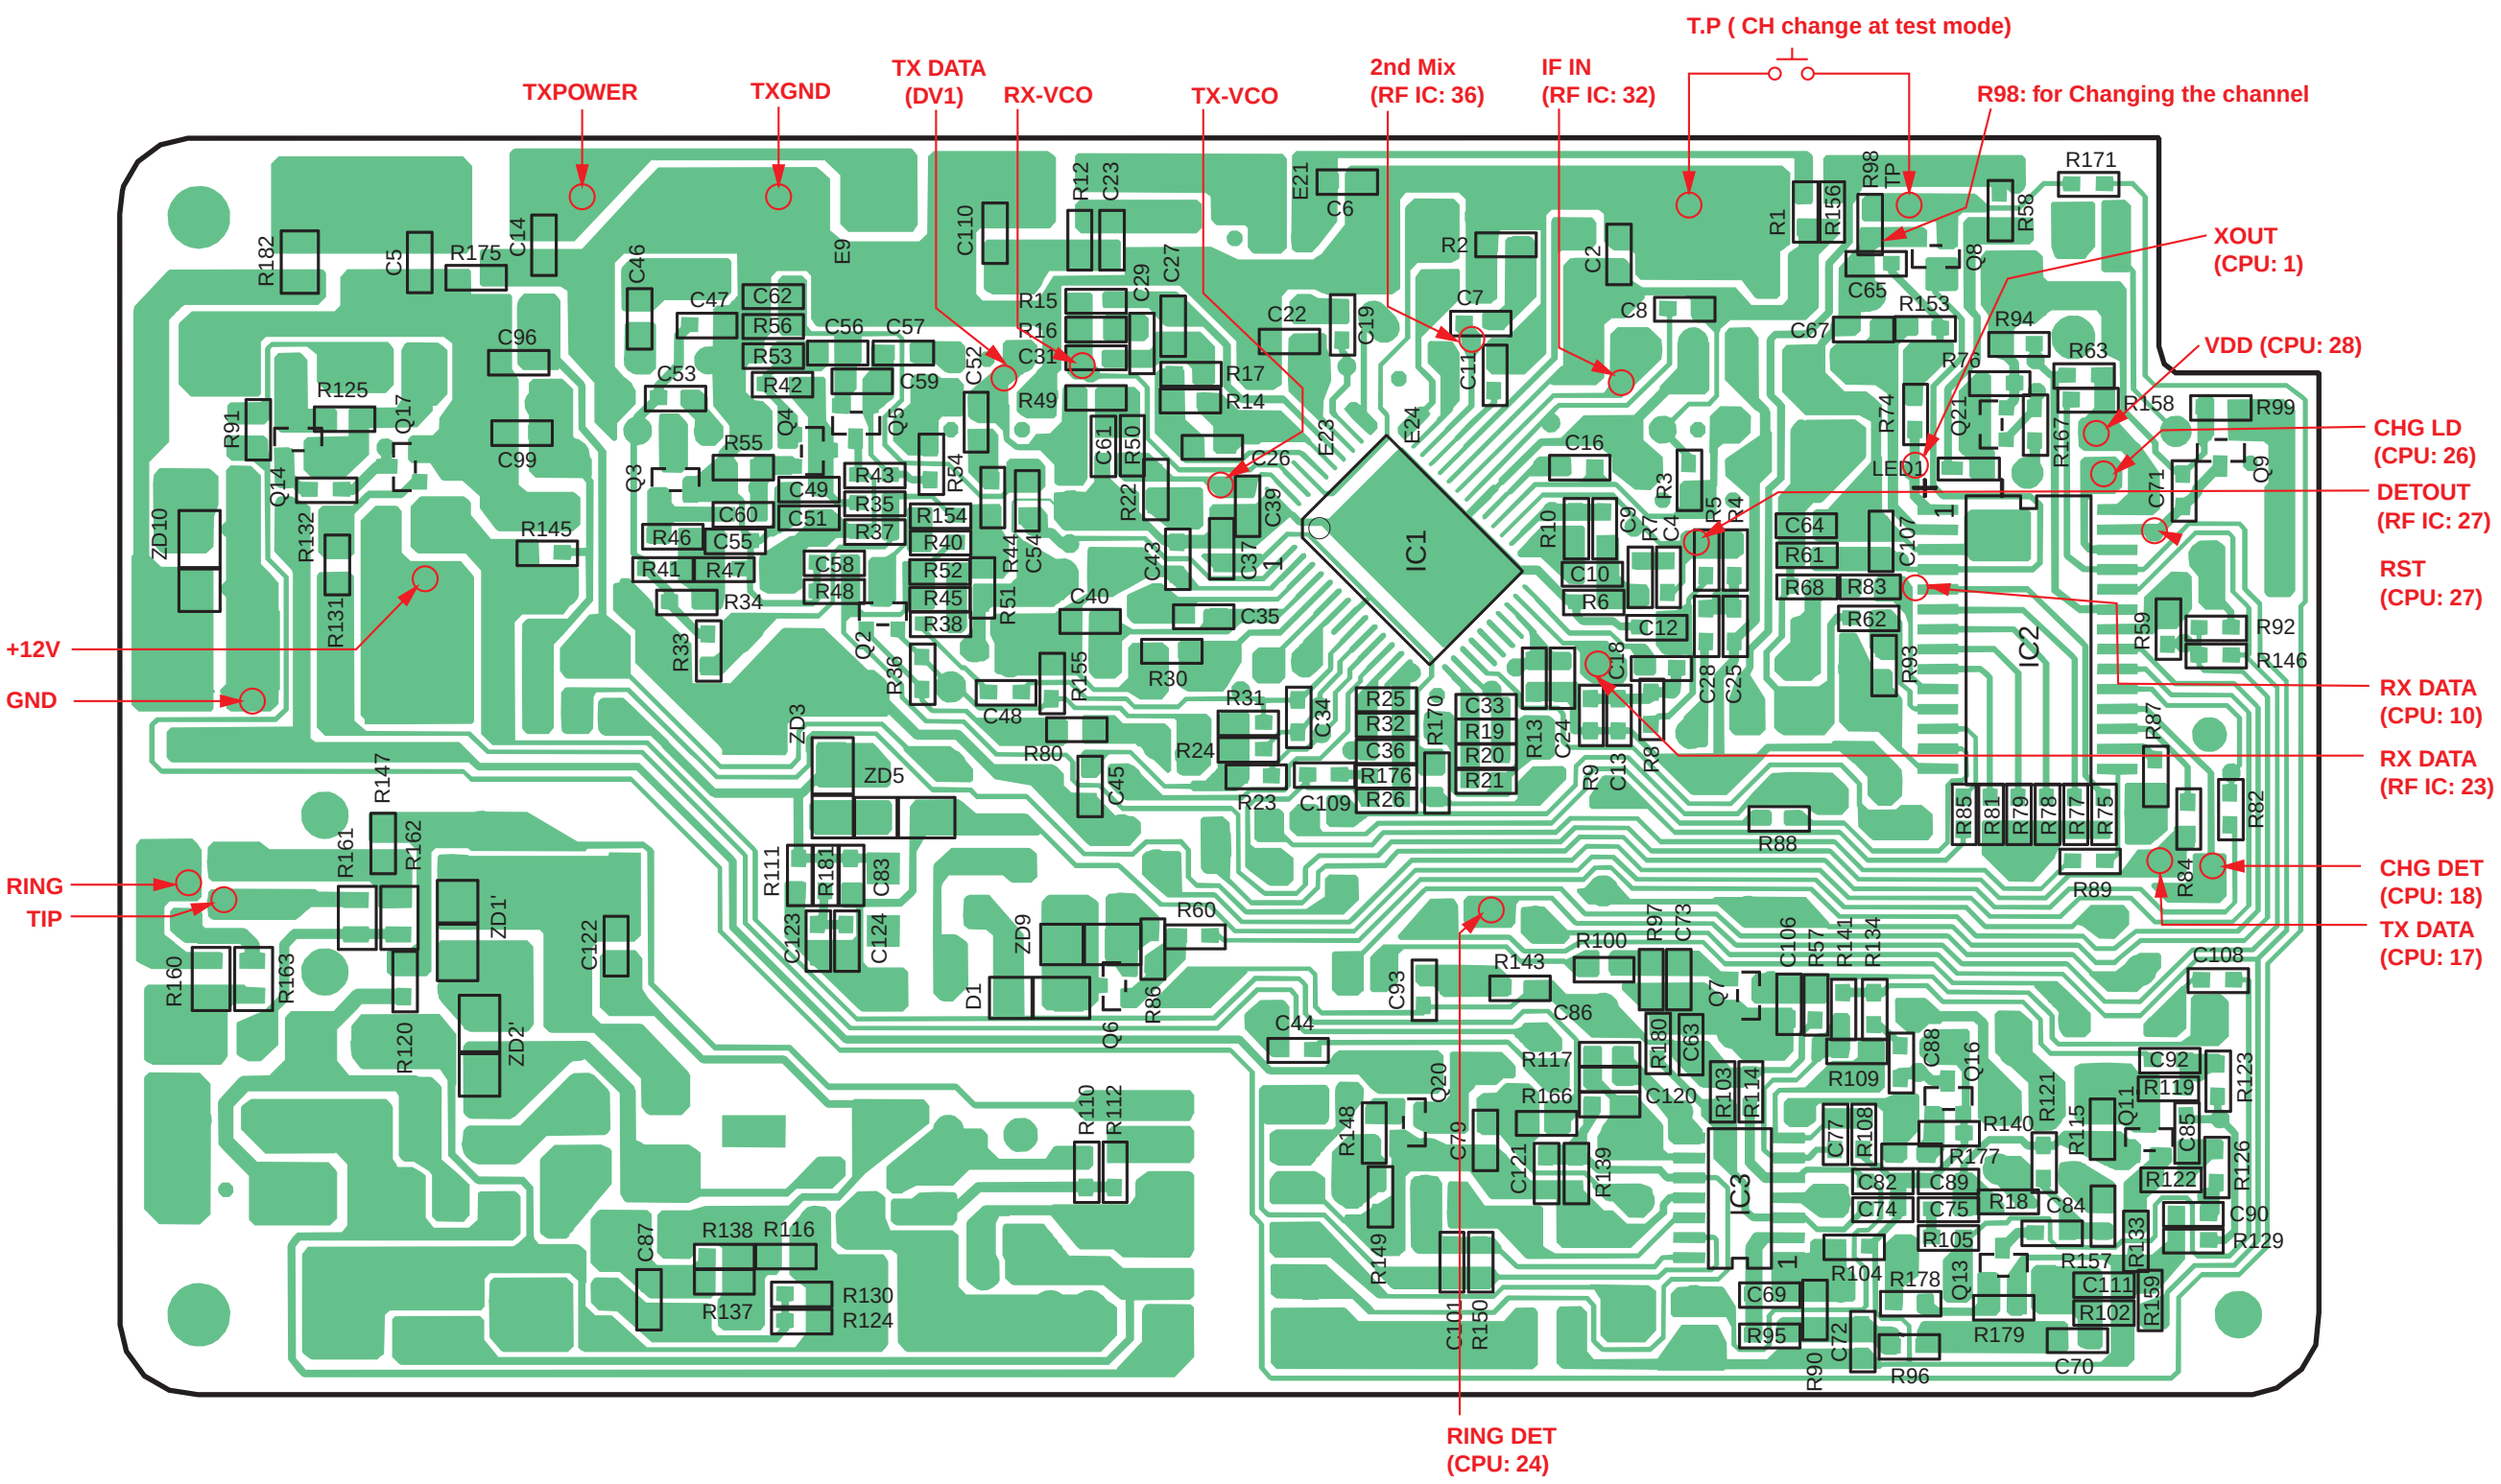
T.P (CH change at test mode)
TXPOWER
TXGND
TX DATA
(DV1)
RX-VCO
TX-VCO
2nd Mix
(RF IC: 36)
IF IN
(RF IC: 32)
R98: for Changing the channel
XOUT
(CPU: 1)
VDD (CPU: 28)
CHG LD
(CPU: 26)
DETOUT
(RF IC: 27)
RST
(CPU: 27)
RX DATA
(CPU: 10)
RX DATA
(RF IC: 23)
CHG DET
(CPU: 18)
TX DATA
(CPU: 17)
+12V
GND
RING
TIP
RING DET
(CPU: 24)
IC1
IC2
IC3
LED1

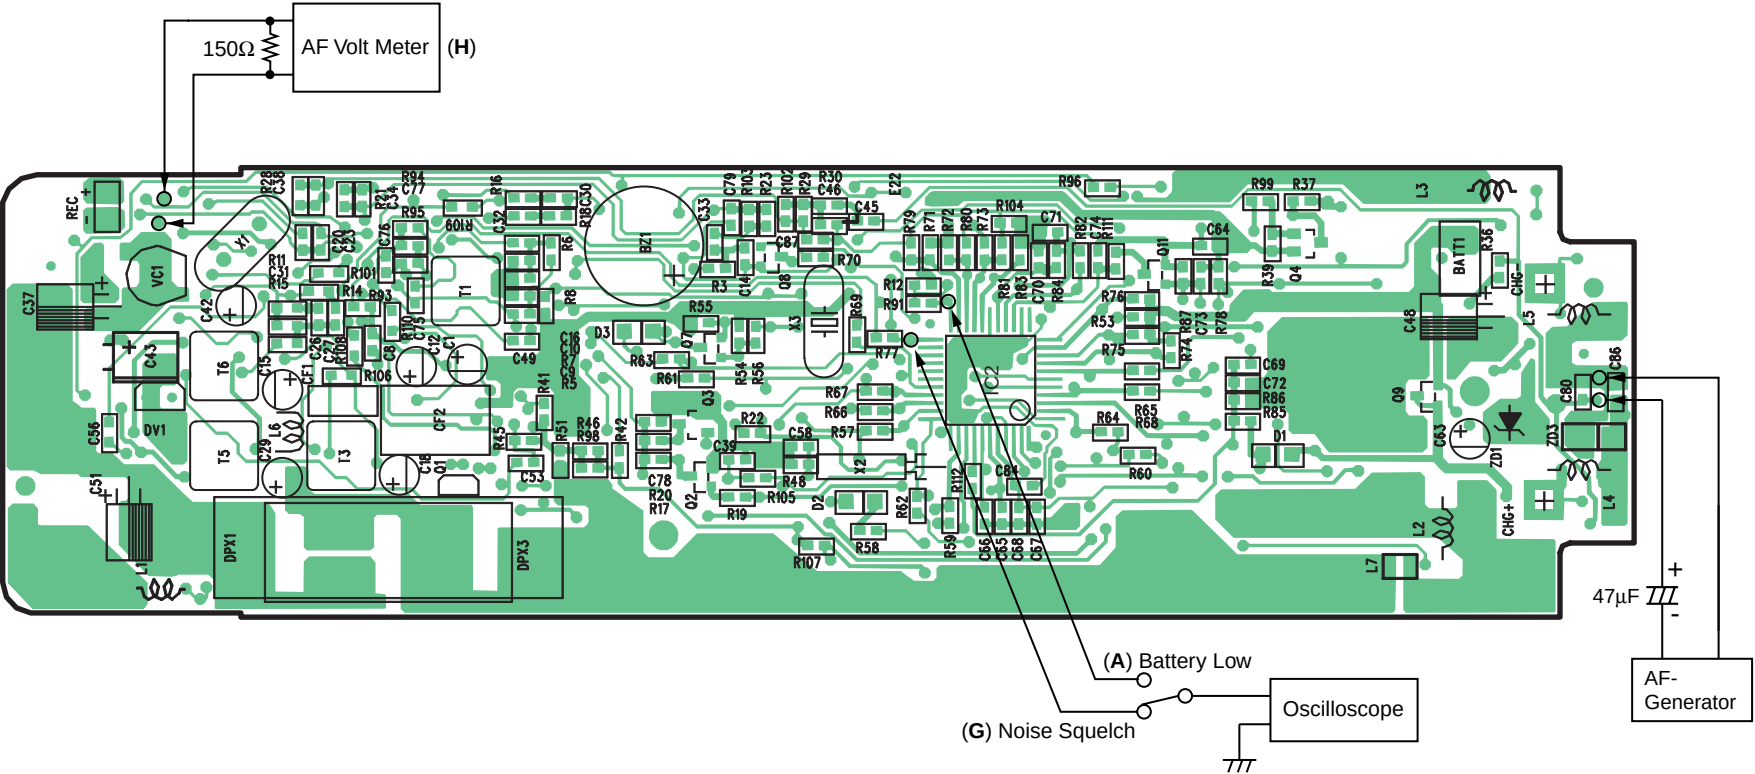
150Ω
AF Volt Meter
(H)
47µF
(A) Battery Low
(G) Noise Squelch
Oscilloscope
AF-
Generator

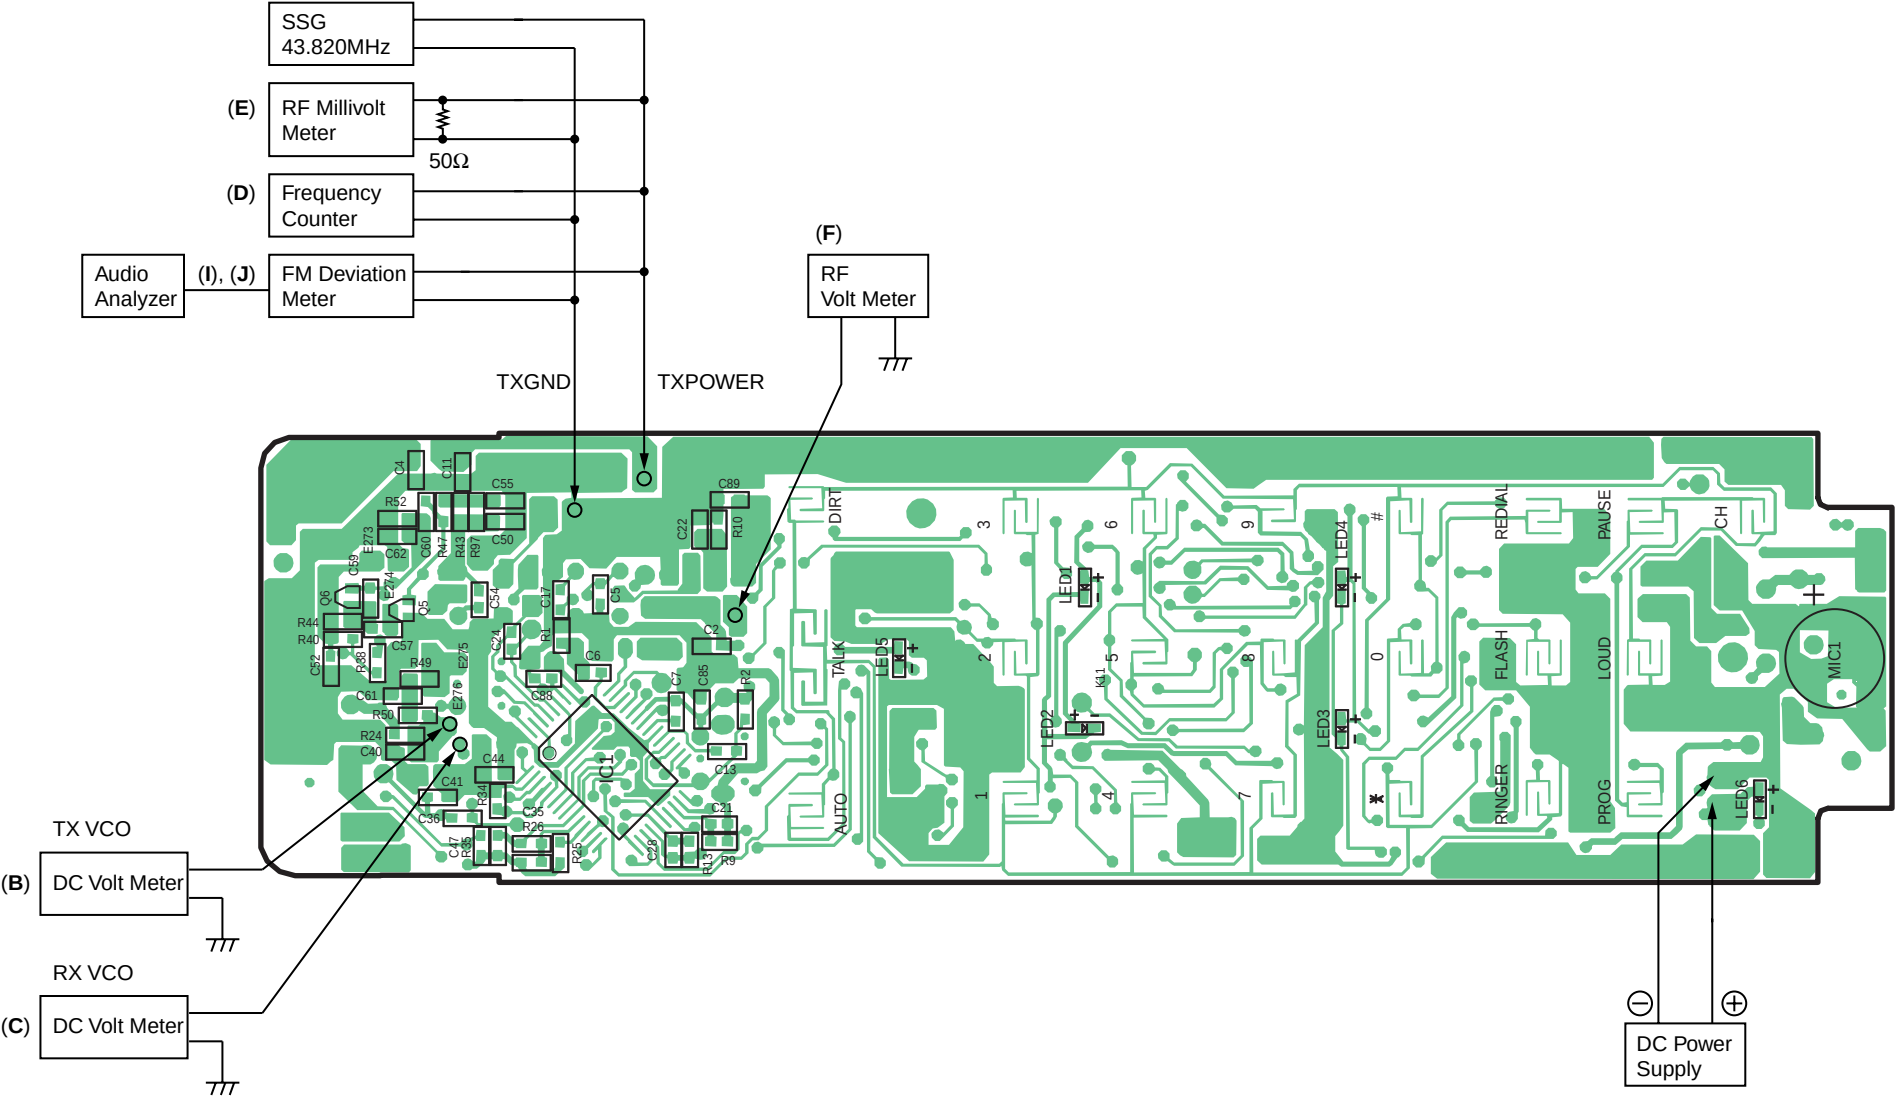
SSG
43.820MHz
(E)
RF Millivolt
Meter
50Ω
(D)
Frequency
Counter
Audio
Analyzer
(I), (J)
FM Deviation
Meter
(F)
RF
Volt Meter
TXGND
TXPOWER
TX VCO
(B)
DC Volt Meter
RX VCO
(C)
DC Volt Meter
DC Power
Supply
DIRT
TALK
AUTO
REDIAL
PAUSE
CH
FLASH
LOUD
RINGER
PROG
MIC1
LED1
LED2
LED3
LED4
LED5
LED6

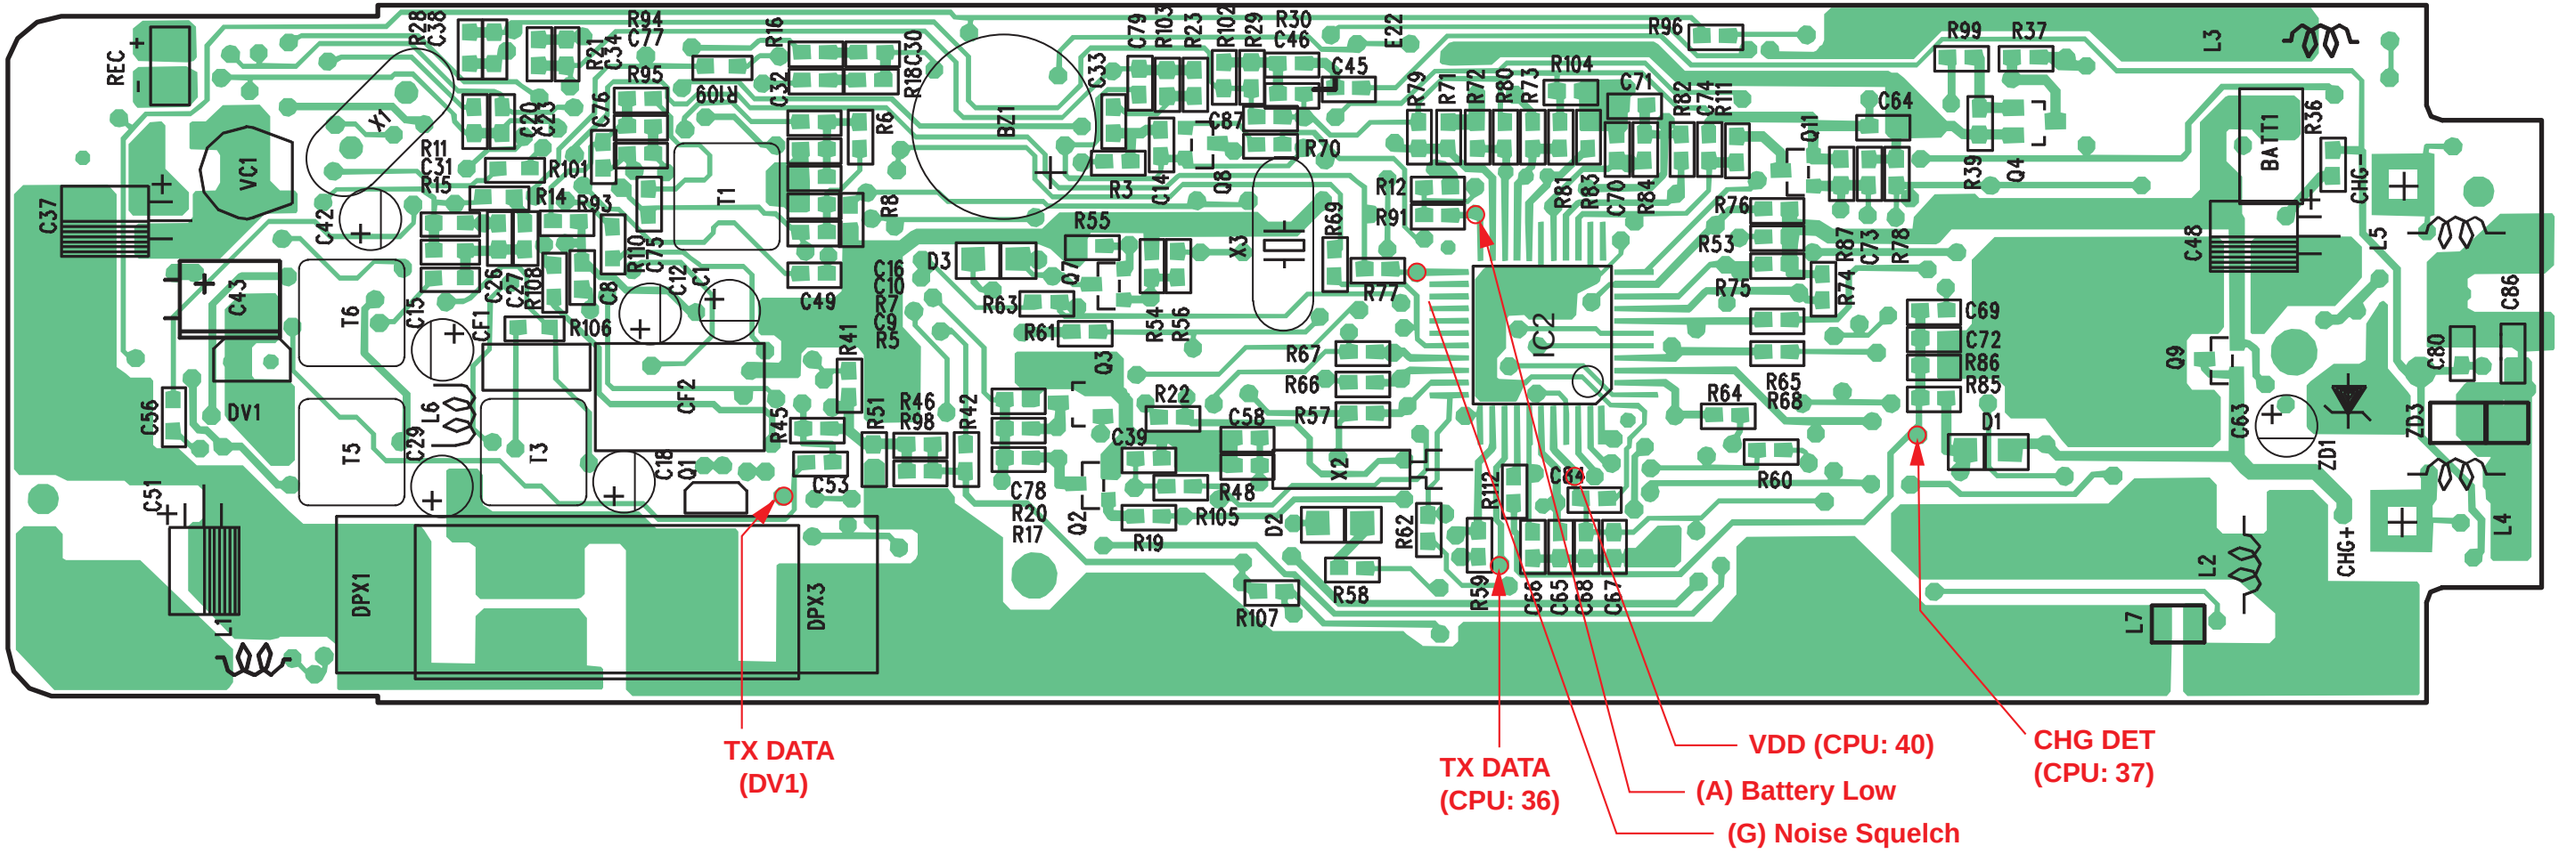
TX DATA
(DV1)
TX DATA
(CPU: 36)
VDD (CPU: 40)
(A) Battery Low
(G) Noise Squelch
CHG DET
(CPU: 37)

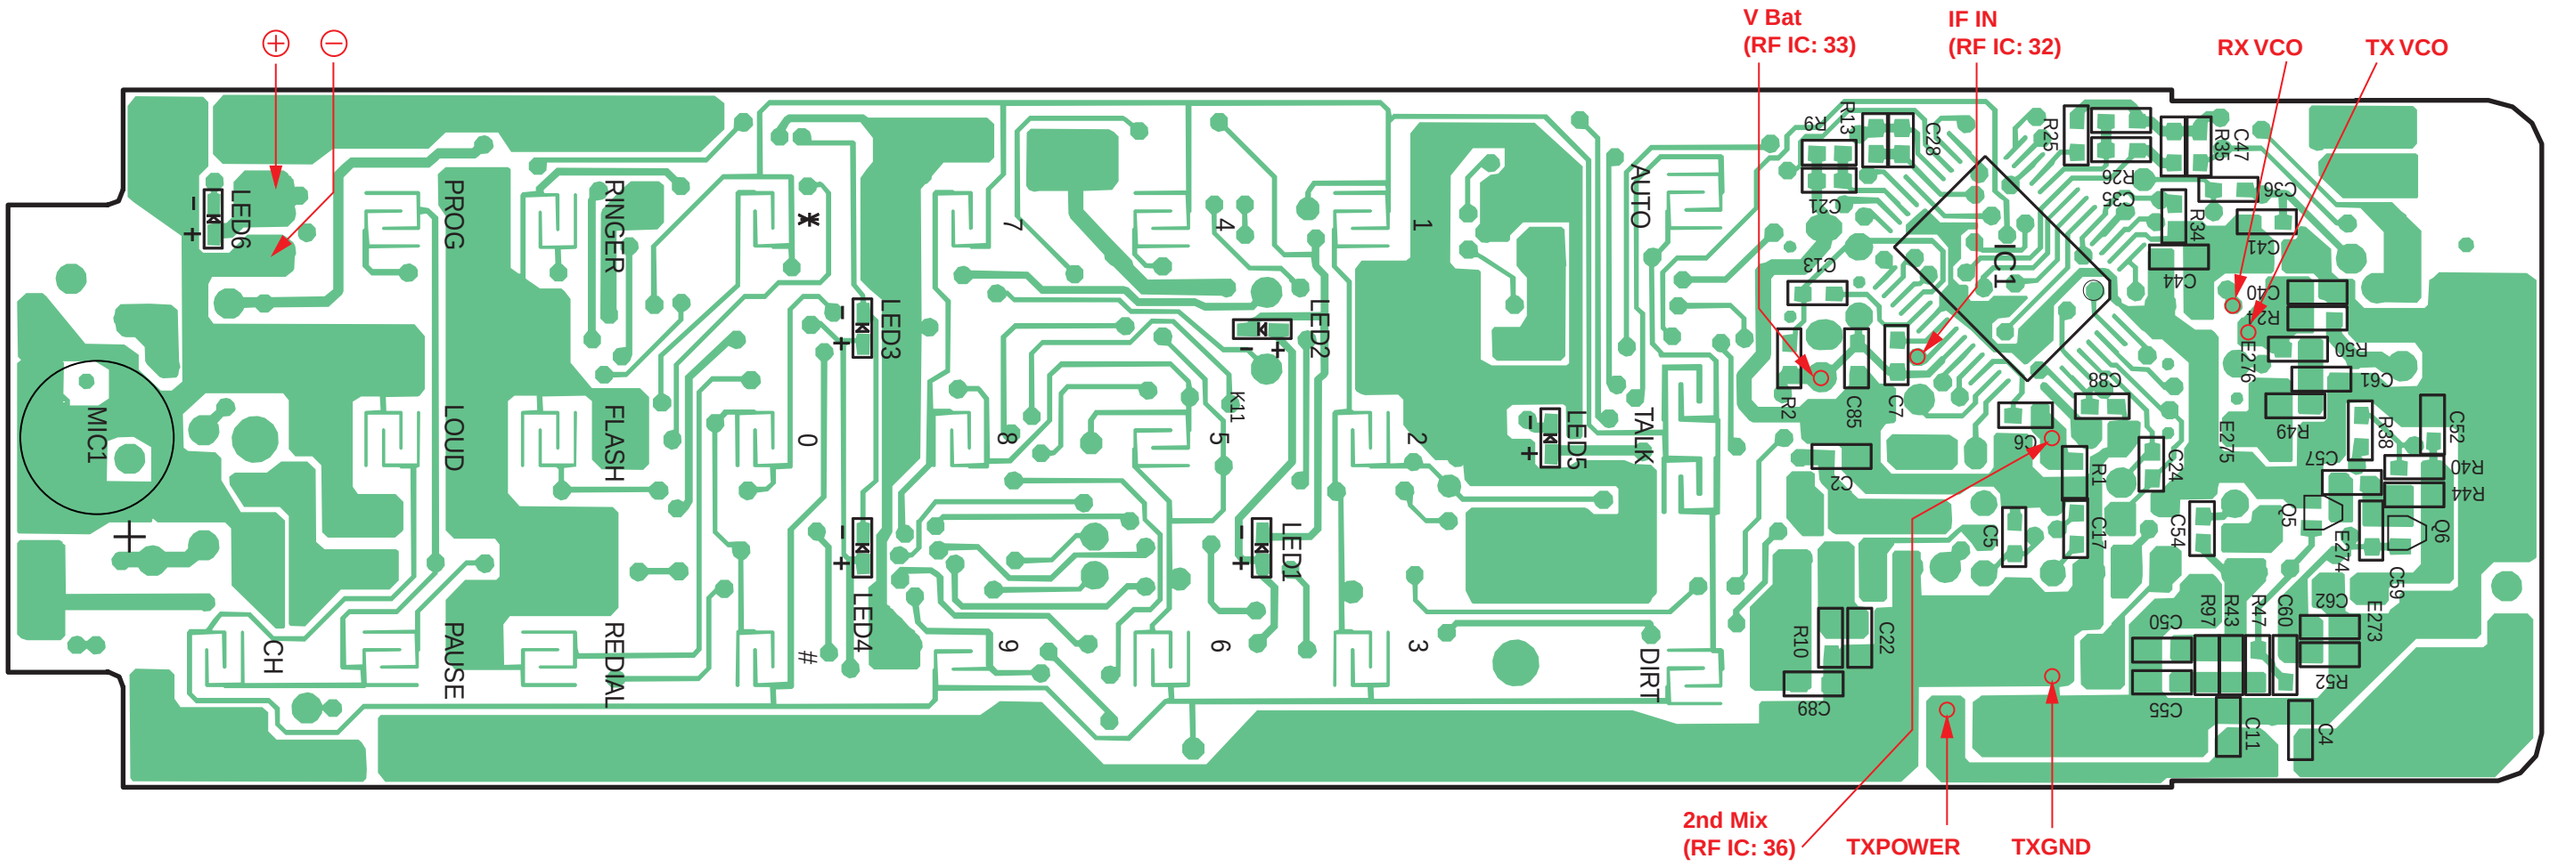
V Bat
(RF IC: 33)
IF IN
(RF IC: 32)
RX VCO
TX VCO
2nd Mix
(RF IC: 36)
TXPOWER
TXGND
IC1
LED6
LED5
LED4
LED3
LED2
LED1
MIC1
PROG
LOUD
CH
RINGER
FLASH
PAUSE
REDIAL
AUTO
TALK
DIRT
1
2
3
4
5
6
7
8
9
0
*
#

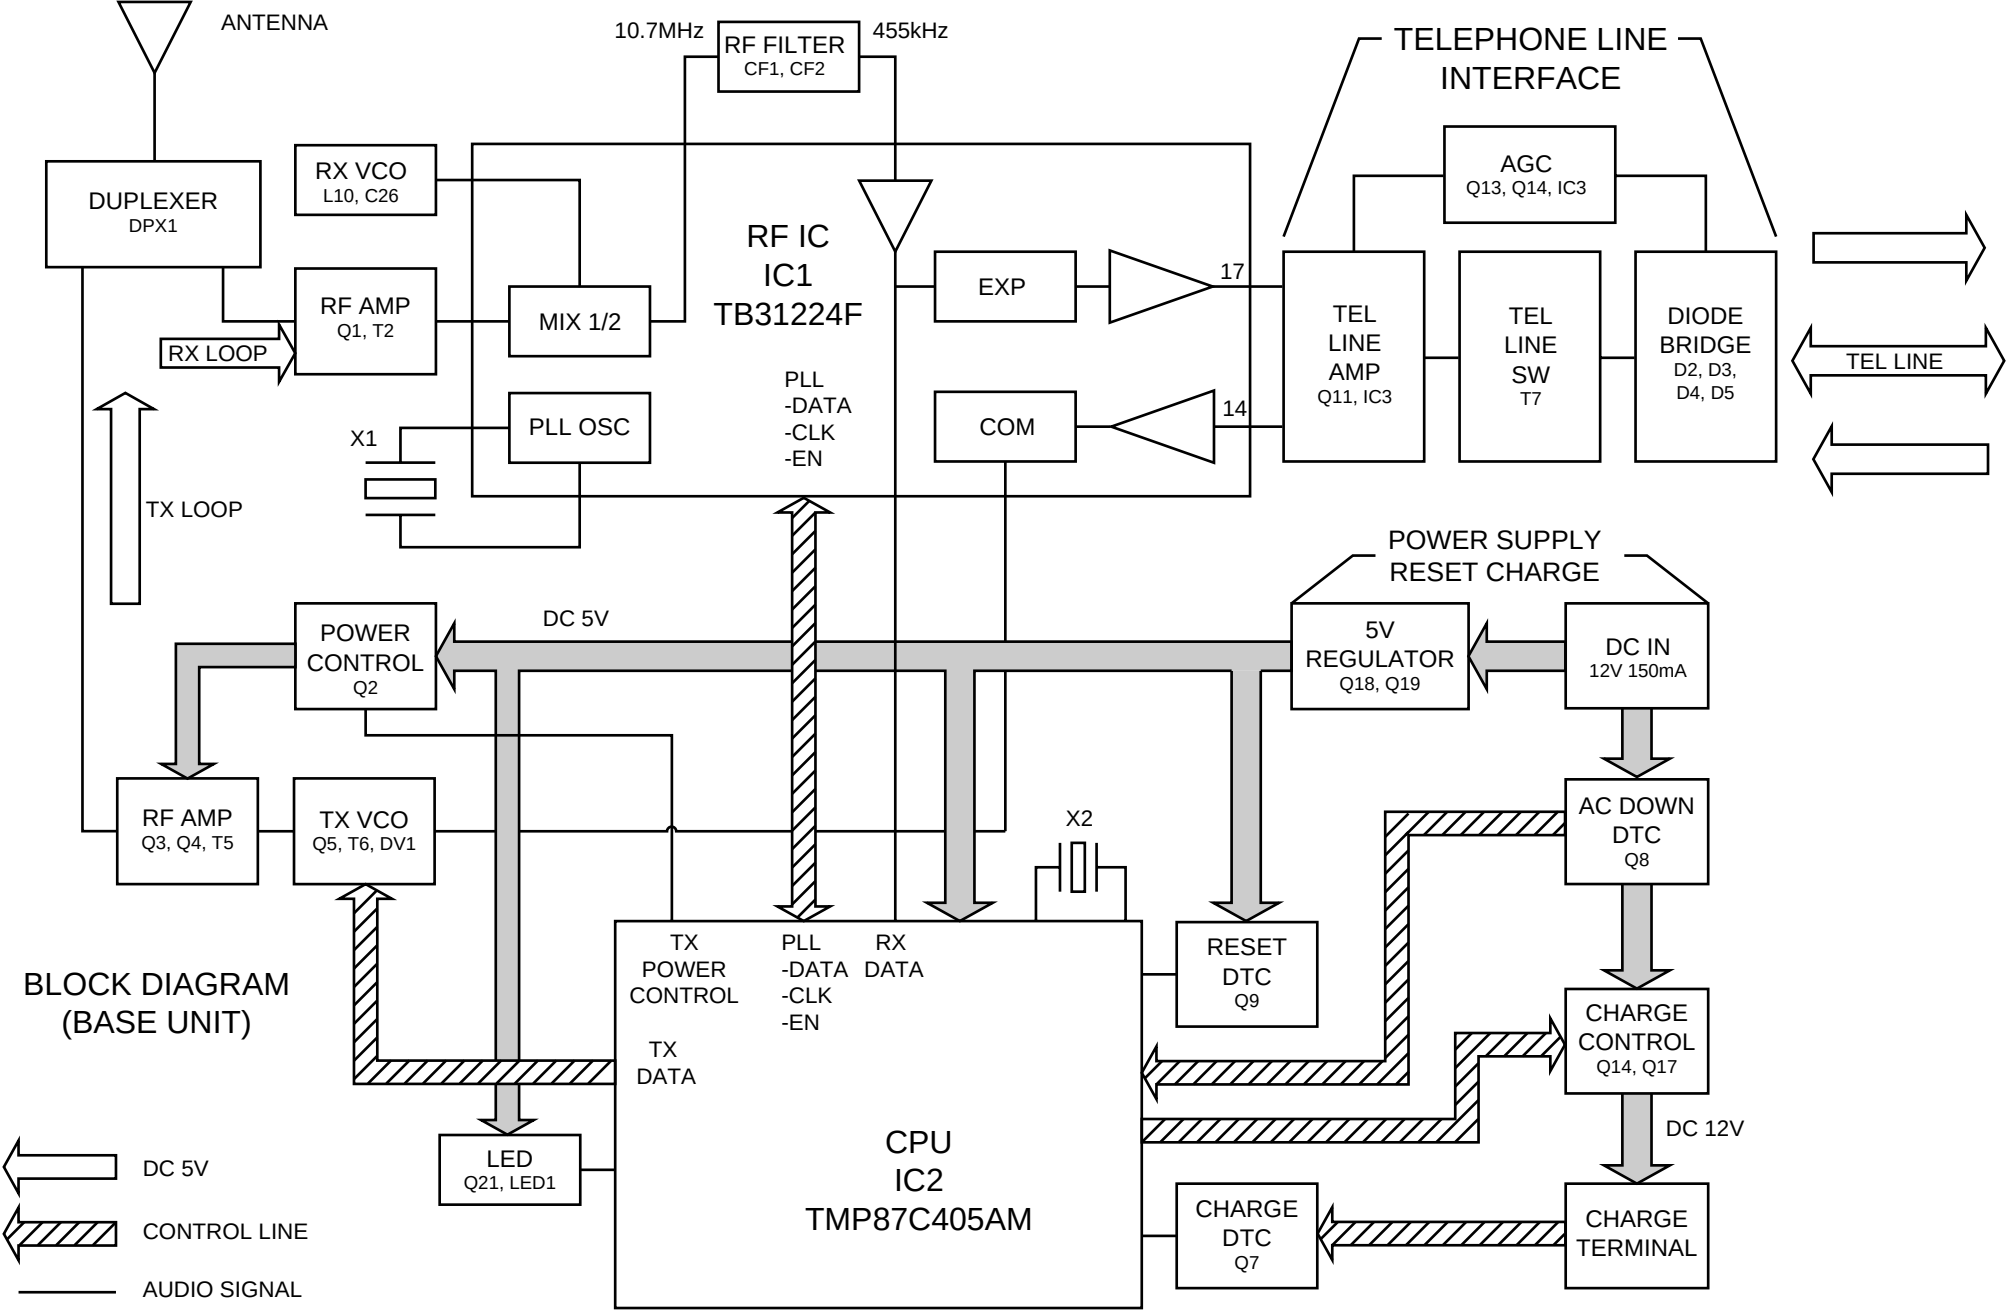
ANTENNA
10.7MHz
RF FILTER
CF1, CF2
455kHz
TELEPHONE LINE
INTERFACE
AGC
Q13, Q14, IC3
DUPLEXER
DPX1
RX VCO
L10, C26
RF IC
IC1
TB31224F
EXP
17
TEL
LINE
AMP
Q11, IC3
TEL
LINE
SW
T7
DIODE
BRIDGE
D2, D3,
D4, D5
TEL LINE
RF AMP
Q1, T2
RX LOOP
MIX 1/2
PLL OSC
X1
PLL
-DATA
-CLK
-EN
COM
14
TX LOOP
POWER SUPPLY
RESET CHARGE
POWER
CONTROL
Q2
DC 5V
5V
REGULATOR
Q18, Q19
DC IN
12V 150mA
RF AMP
Q3, Q4, T5
TX VCO
Q5, T6, DV1
X2
AC DOWN
DTC
Q8
TX
POWER
CONTROL
TX
DATA
PLL
-DATA
-CLK
-EN
RX
DATA
RESET
DTC
Q9
CHARGE
CONTROL
Q14, Q17
DC 12V
LED
Q21, LED1
CPU
IC2
TMP87C405AM
CHARGE
DTC
Q7
CHARGE
TERMINAL
BLOCK DIAGRAM
(BASE UNIT)
DC 5V
CONTROL LINE
AUDIO SIGNAL

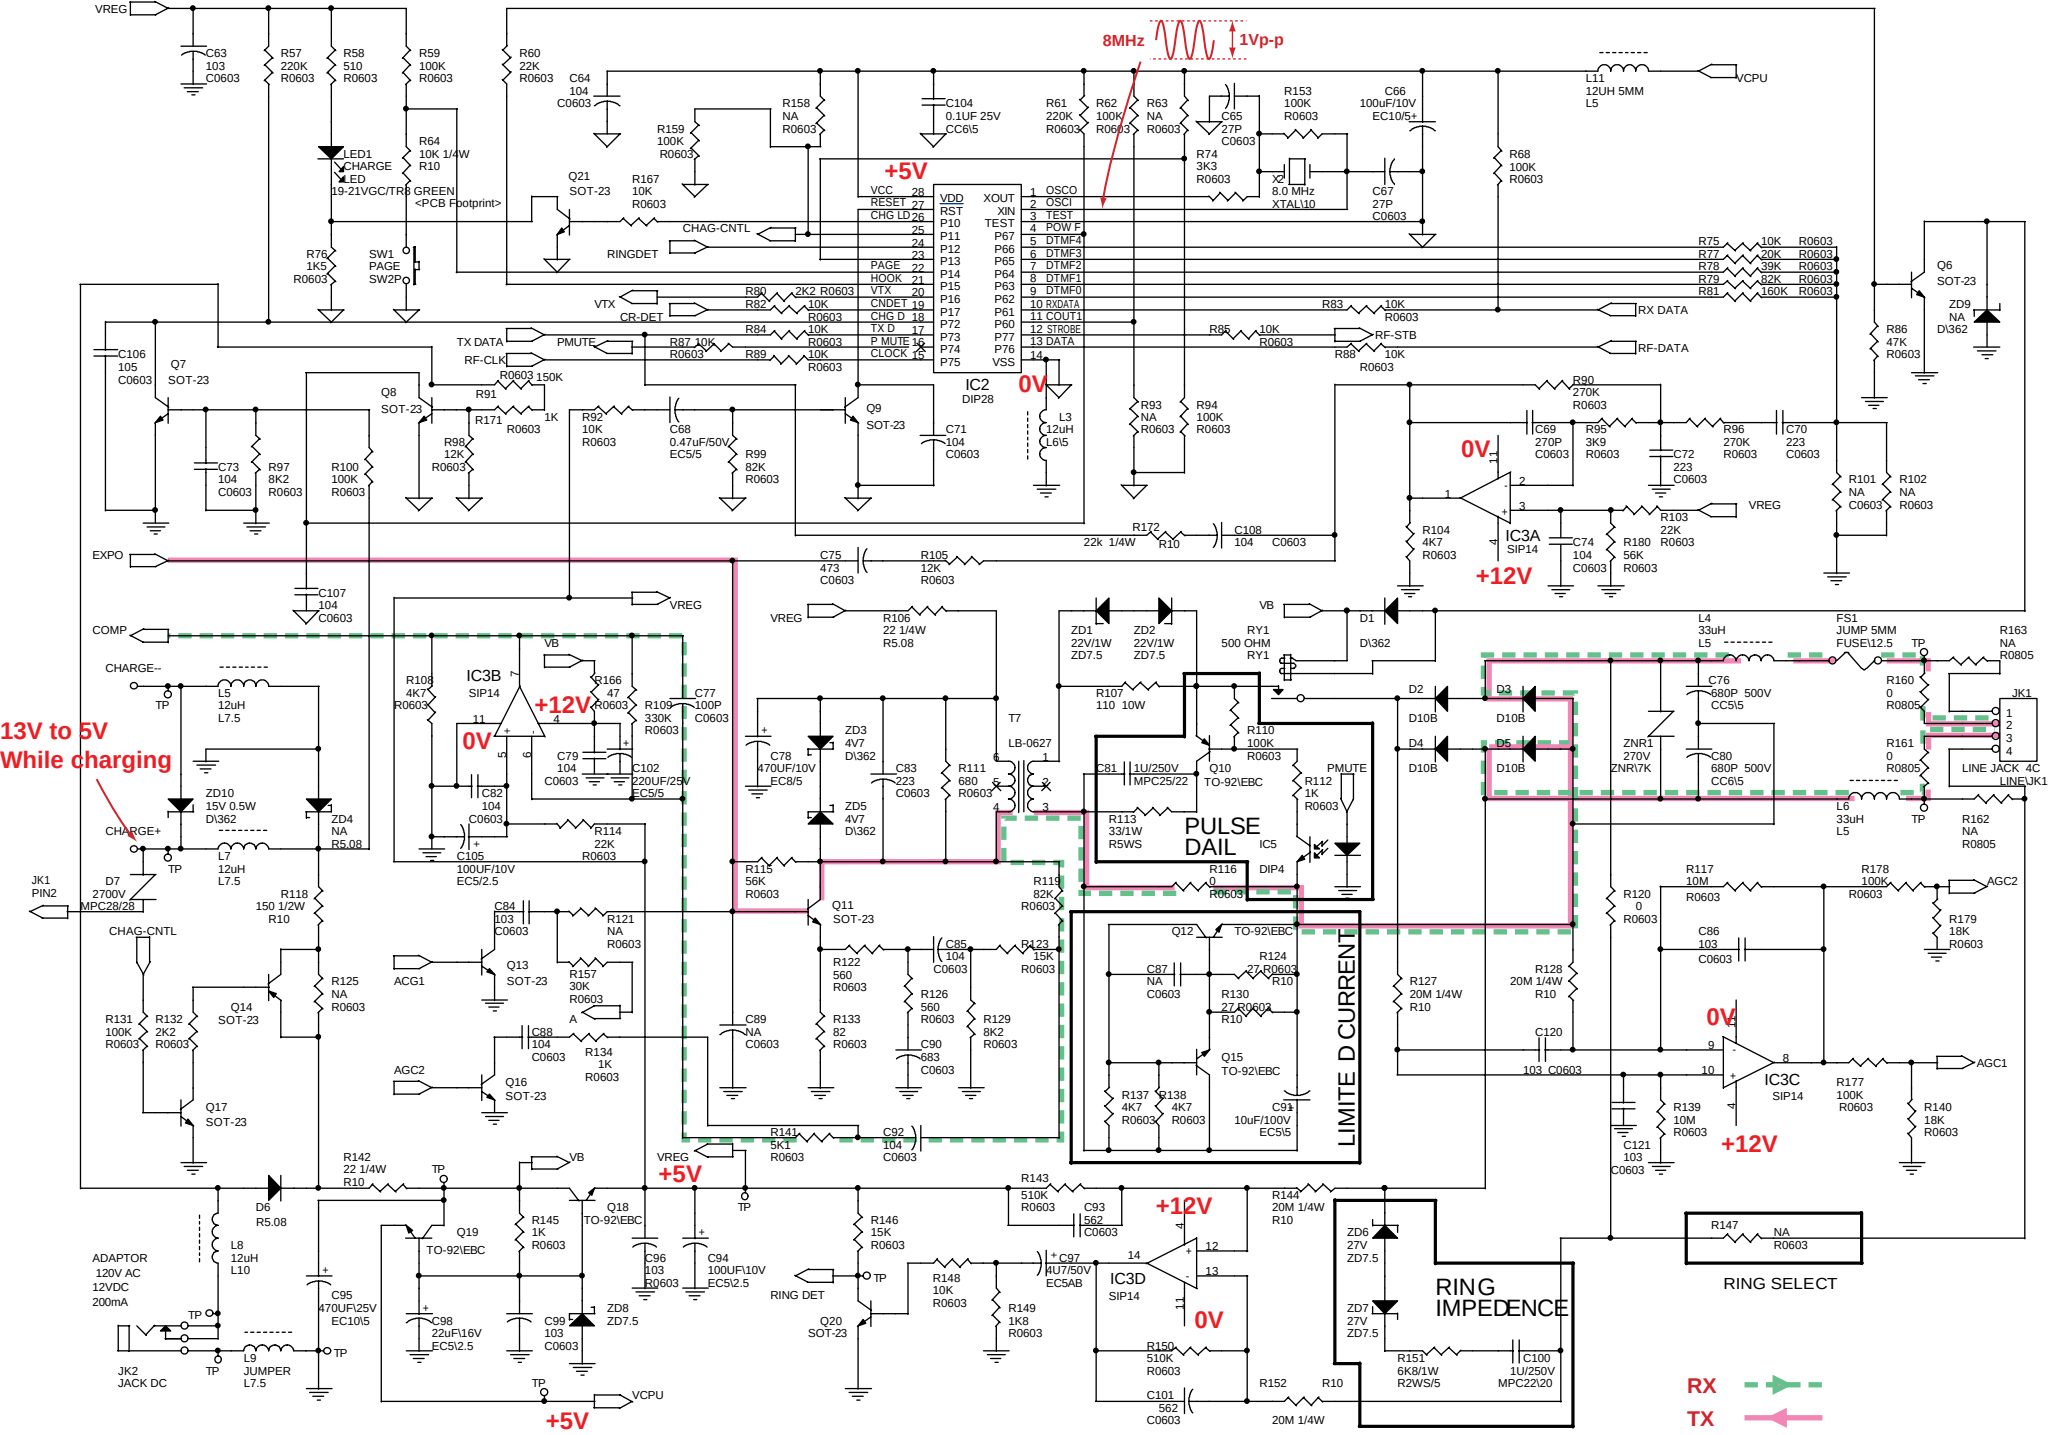
13V to 5V
While charging
8MHz
1Vp-p
+5V
0V
+12V
IC2
DIP28
IC3A
SIP14
IC3B
SIP14
IC3C
SIP14
IC3D
SIP14
PULSE DAIL
LIMITE D CURRENT
RING IMPEDENCE
RING SELECT
RX
TX
VREG
VCPU
EXPO
COMP
CHARGE--
CHARGE+
CHAG-CNTL
RINGDET
VTX
CR-DET
TX DATA
RF-CLK
PMUTE
RF-STB
RX DATA
RF-DATA
RING DET
ADAPTOR
120V AC
12VDC
200mA
JK1
JK2
JACK DC
LINE JACK 4C
LINE\JK1
AGC1
AGC2
ACG1

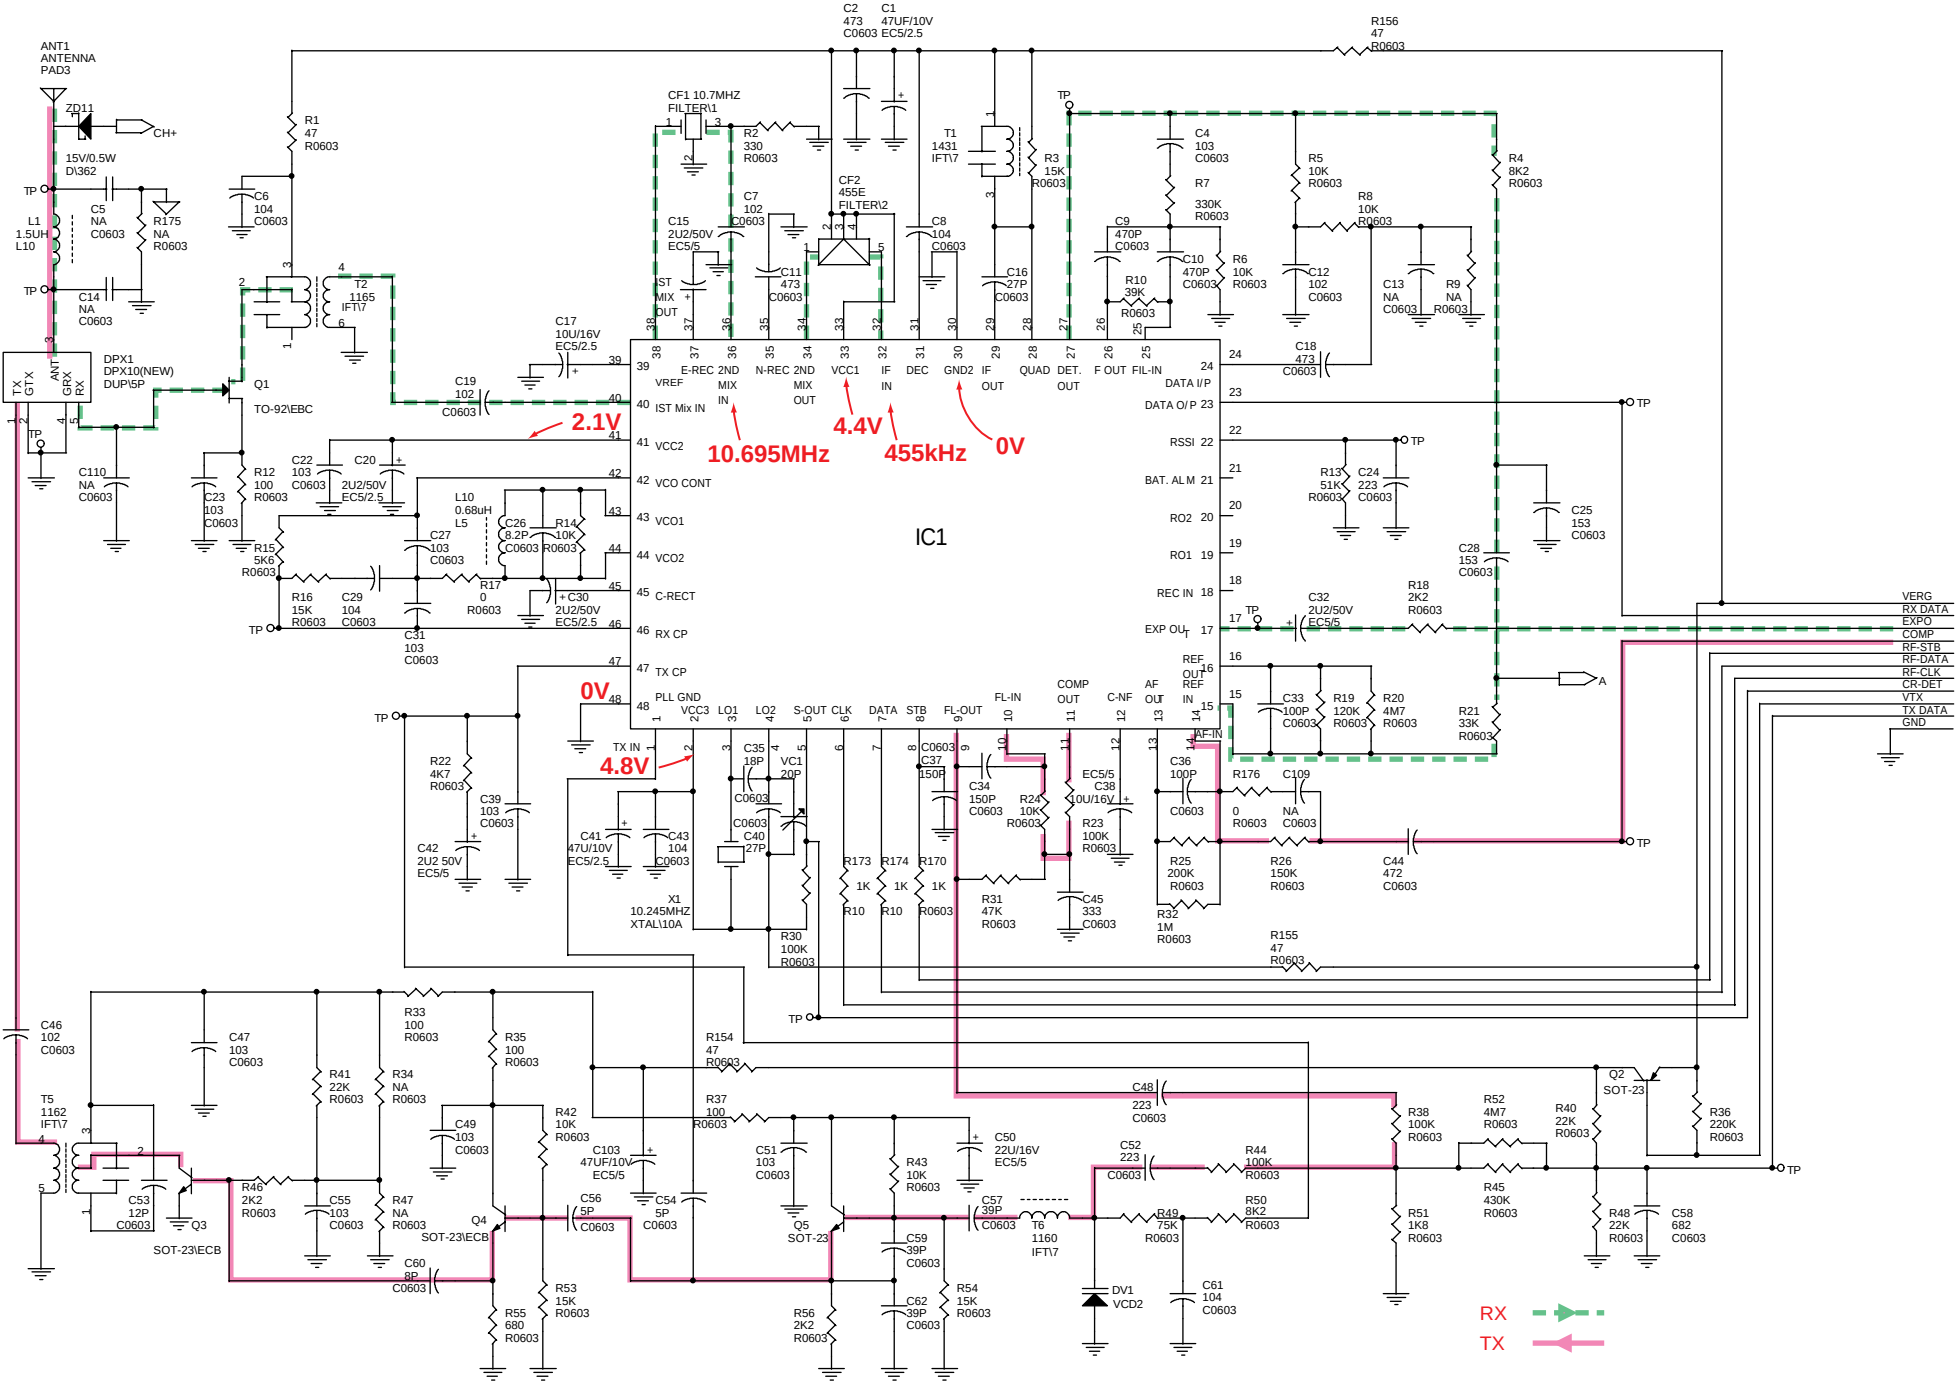
IC1
2.1V
10.695MHz
4.4V
455kHz
0V
0V
4.8V
RX
TX

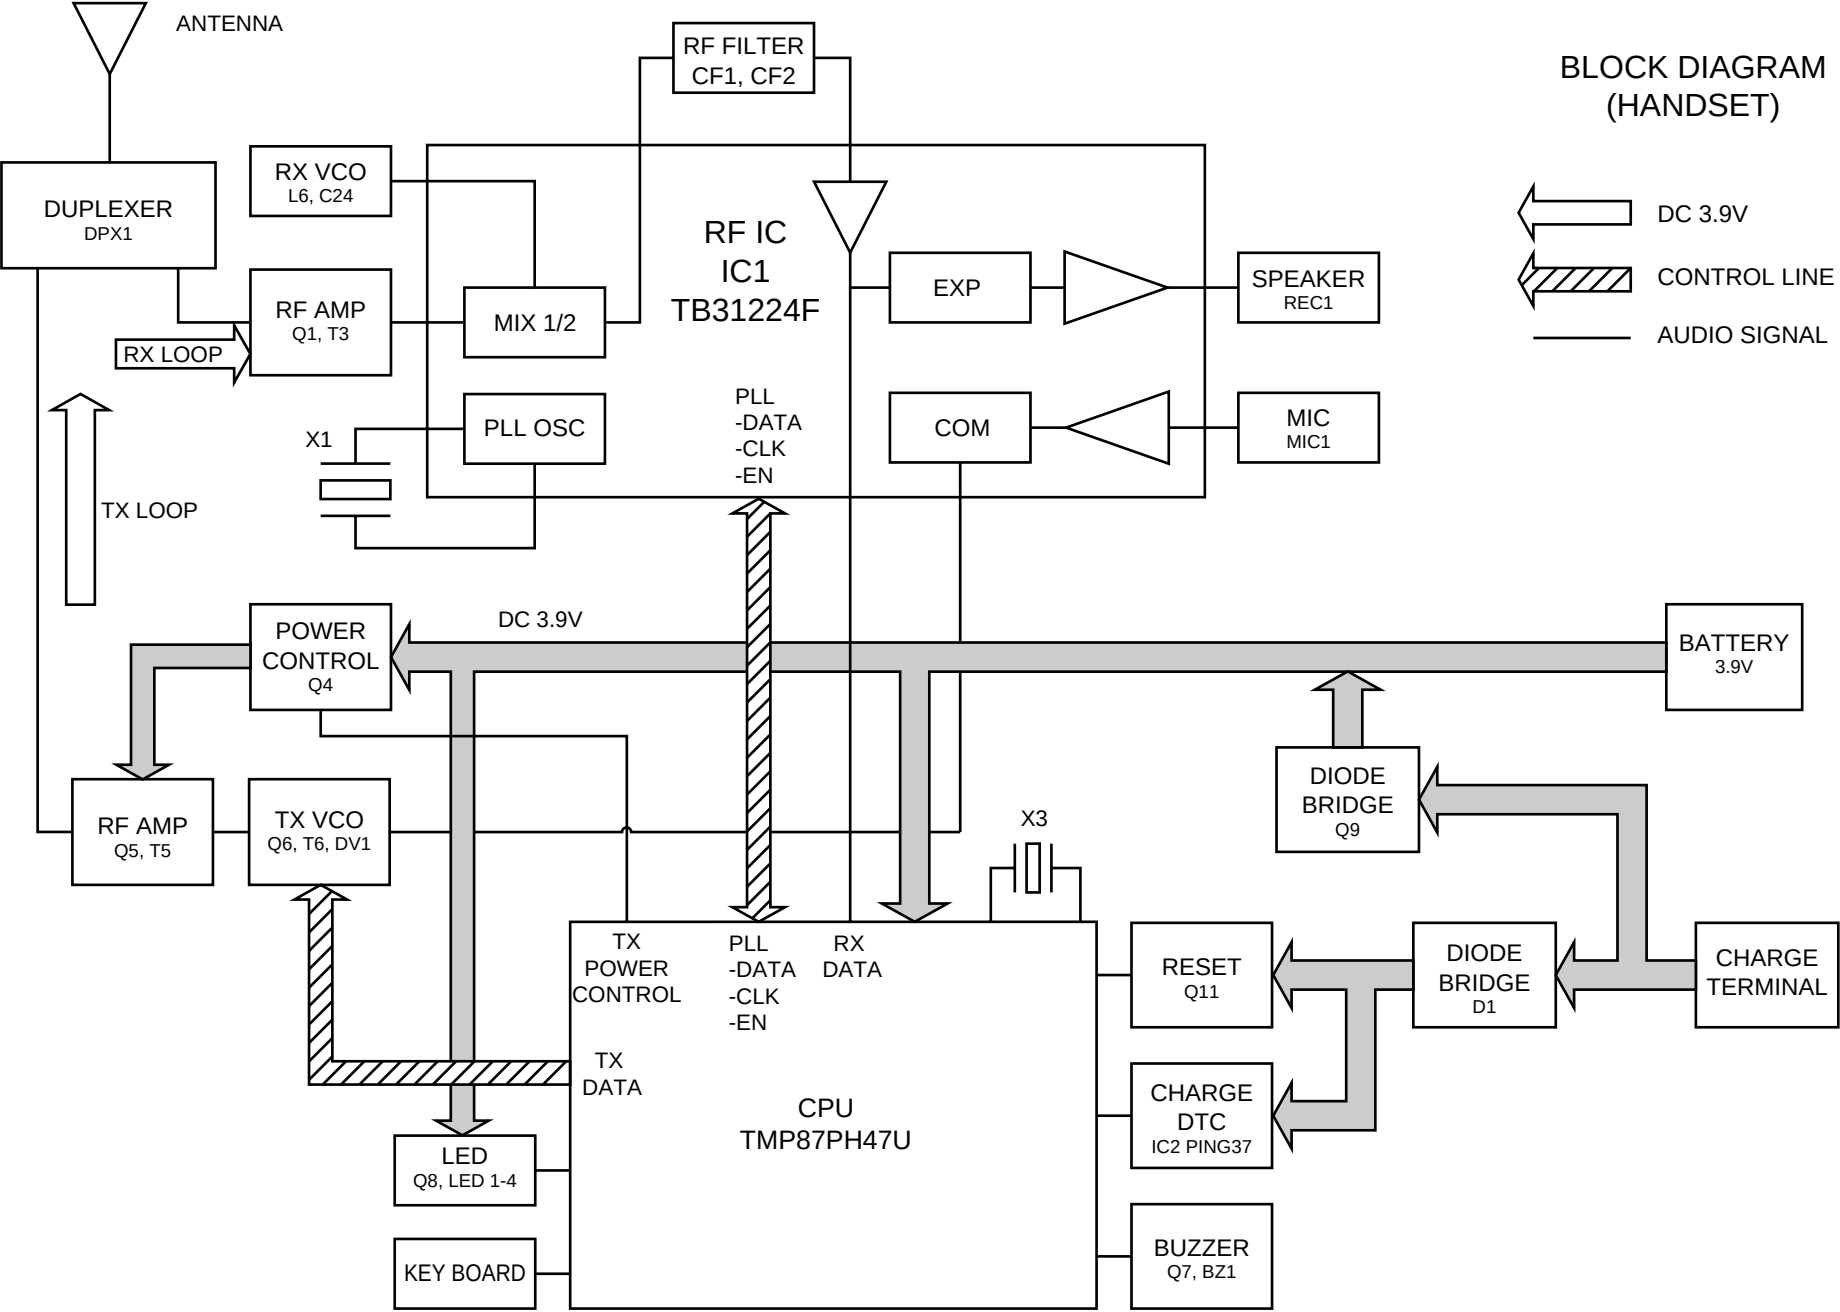
BLOCK DIAGRAM
(HANDSET)
DC 3.9V
CONTROL LINE
AUDIO SIGNAL
ANTENNA
RF FILTER
CF1, CF2
DUPLEXER
DPX1
RX VCO
L6, C24
RF IC
IC1
TB31224F
EXP
SPEAKER
REC1
RF AMP
Q1, T3
MIX 1/2
RX LOOP
PLL OSC
X1
PLL
-DATA
-CLK
-EN
COM
MIC
MIC1
TX LOOP
POWER
CONTROL
Q4
DC 3.9V
BATTERY
3.9V
RF AMP
Q5, T5
TX VCO
Q6, T6, DV1
X3
DIODE
BRIDGE
Q9
TX
POWER
CONTROL
PLL
-DATA
-CLK
-EN
RX
DATA
RESET
Q11
DIODE
BRIDGE
D1
CHARGE
TERMINAL
TX
DATA
CPU
TMP87PH47U
CHARGE
DTC
IC2 PING37
LED
Q8, LED 1-4
KEY BOARD
BUZZER
Q7, BZ1

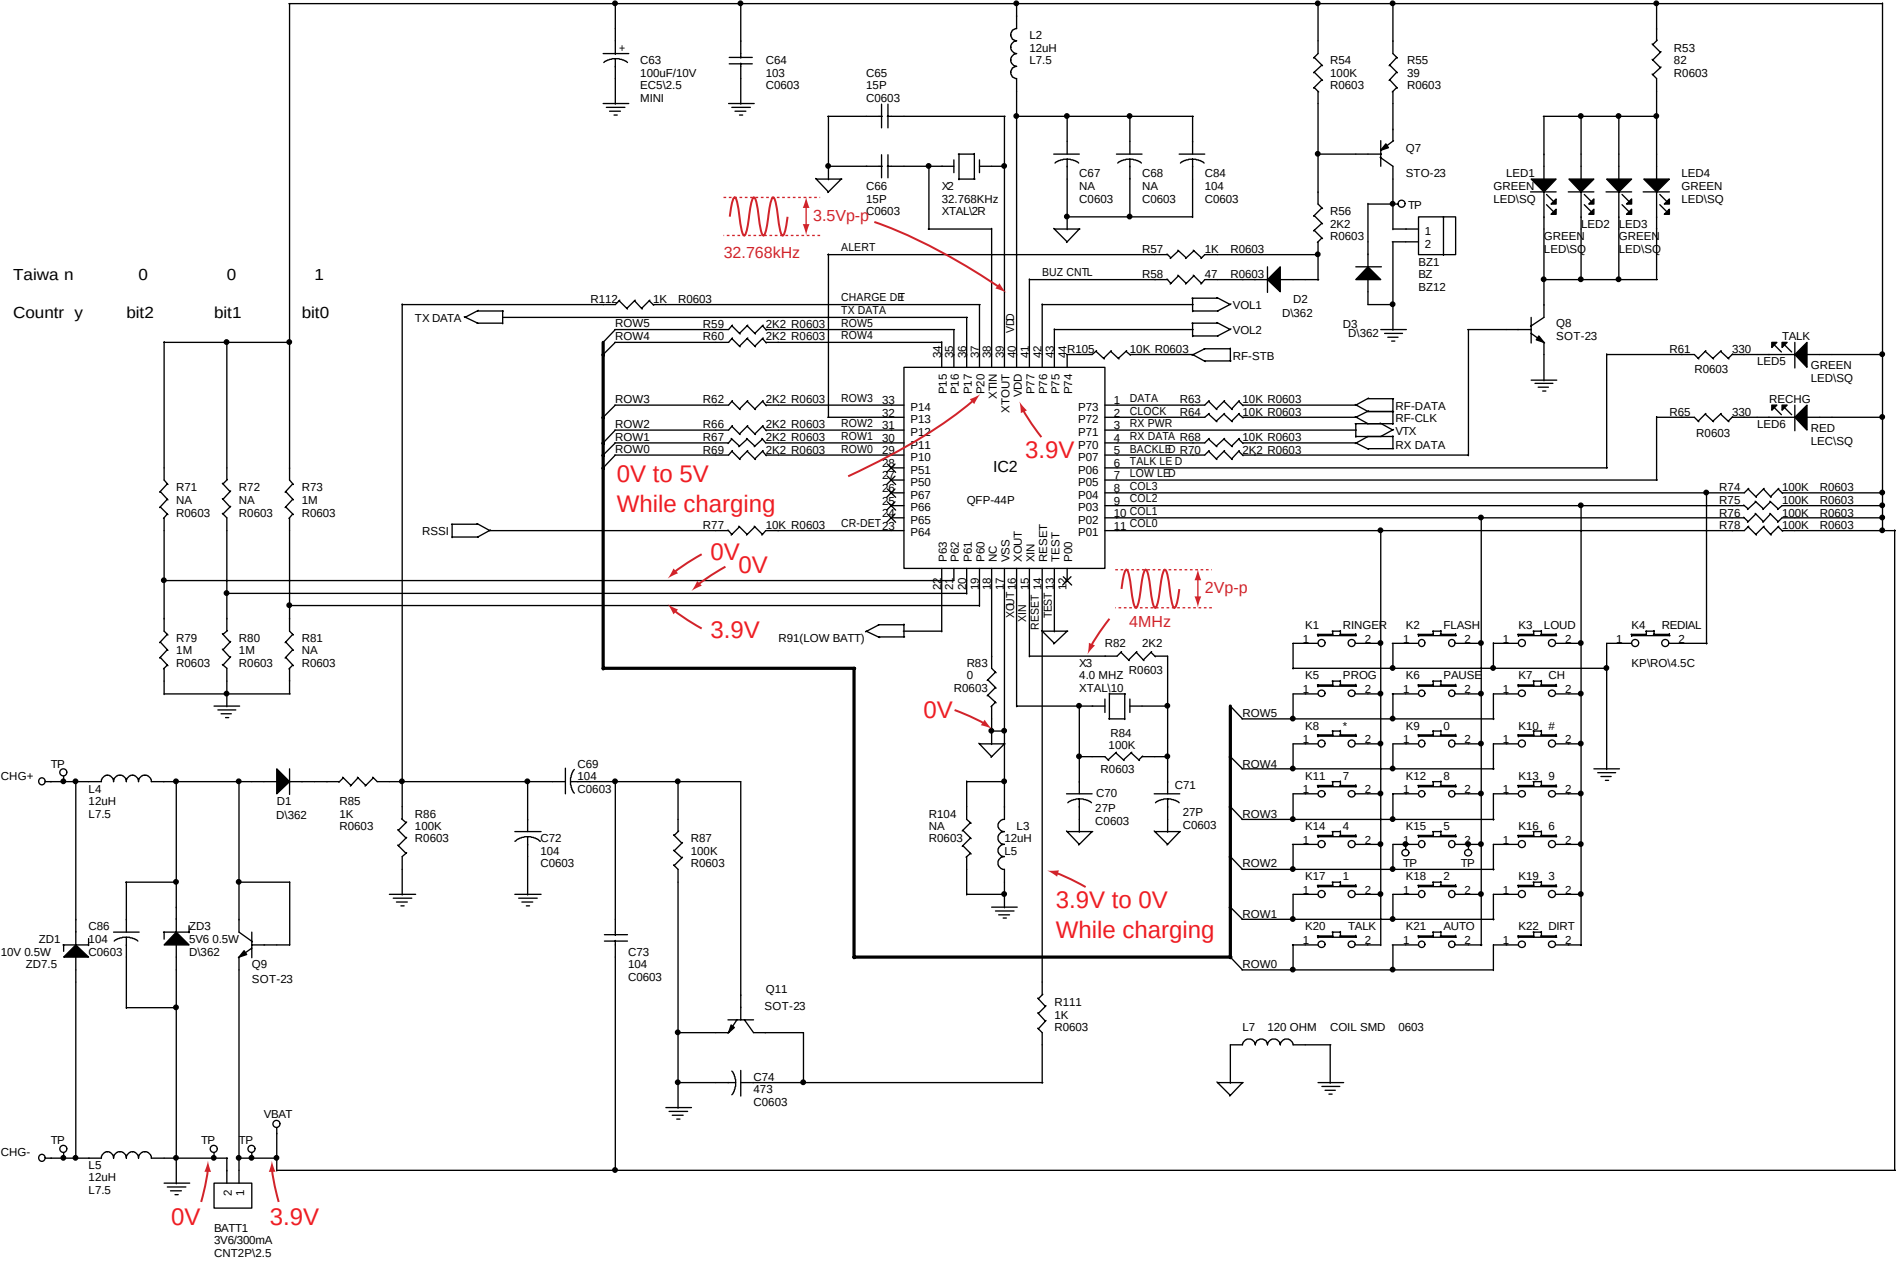
Taiwa n 0 0 1
Countr y bit2 bit1 bit0
C63 100uF/10V EC5\2.5 MINI
C64 103 C0603
C65 15P C0603
C66 15P C0603
X2 32.768KHz XTAL\2R
32.768kHz
3.5Vp-p
L2 12uH L7.5
C67 NA C0603
C68 NA C0603
C84 104 C0603
R54 100K R0603
R55 39 R0603
R53 82 R0603
Q7 STO-23
TP
R56 2K2 R0603
BZ1 BZ BZ12
D3 D\362
LED1 GREEN LED\SQ
LED2 GREEN LED\SQ
LED3 GREEN LED\SQ
LED4 GREEN LED\SQ
ALERT
R57 1K R0603
BUZ CNTL
R58 47 R0603
D2 D\362
VOL1
VOL2
RF-STB
R105 10K R0603
R112 1K R0603
CHARGE DET
TX DATA
ROW5
ROW4
R59 2K2 R0603
R60 2K2 R0603
ROW3
ROW2
ROW1
ROW0
R62 2K2 R0603
R66 2K2 R0603
R67 2K2 R0603
R69 2K2 R0603
IC2
QFP-44P
3.9V
0V to 5V
While charging
DATA
CLOCK
RX PWR
RX DATA
BACKLED
TALK LED
LOW LED
COL3
COL2
COL1
COL0
R63 10K R0603
R64 10K R0603
R68 10K R0603
R70 2K2 R0603
RF-DATA
RF-CLK
VTX
RX DATA
Q8 SOT-23
R61 330 R0603
LED5 TALK GREEN LED\SQ
R65 330 R0603
LED6 RECHG RED LEC\SQ
R74 100K R0603
R75 100K R0603
R76 100K R0603
R78 100K R0603
RSSI
R77 10K R0603
CR-DET
0V
0V
3.9V
R91(LOW BATT)
2Vp-p
4MHz
R82 2K2 R0603
X3 4.0 MHZ XTAL\10
R83 0 R0603
0V
R84 100K R0603
C70 27P C0603
C71 27P C0603
R104 NA R0603
L3 12uH L5
3.9V to 0V
While charging
K1 RINGER
K2 FLASH
K3 LOUD
K4 REDIAL
KP\RO\4.5C
K5 PROG
K6 PAUSE
K7 CH
K8 *
K9 0
K10 #
K11 7
K12 8
K13 9
K14 4
K15 5
K16 6
K17 1
K18 2
K19 3
K20 TALK
K21 AUTO
K22 DIRT
ROW5
ROW4
ROW3
ROW2
ROW1
ROW0
R71 NA R0603
R72 NA R0603
R73 1M R0603
R79 1M R0603
R80 1M R0603
R81 NA R0603
CHG+
L4 12uH L7.5
D1 D\362
R85 1K R0603
R86 100K R0603
C72 104 C0603
C69 104 C0603
R87 100K R0603
C73 104 C0603
ZD1 10V 0.5W ZD7.5
C86 104 C0603
ZD3 5V6 0.5W D\362
Q9 SOT-23
Q11 SOT-23
C74 473 C0603
R111 1K R0603
L7 120 OHM COIL SMD 0603
CHG-
L5 12uH L7.5
VBAT
BATT1 3V6/300mA CNT2P\2.5
0V
3.9V